

# **USER MANUAL**

#### DIGITAL O O O O MULTIFUNCTIONAL SYSTEM



Copy/Print/Scan A3





# **Preface**

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.

Please read this Operation Guide before using the machine.

#### We recommend the use of our own brand supplies.

Please use our genuine toner containers, which have passed rigorous quality control testing.

The use of non-genuine toner containers may cause failure.

We will not be liable for any damages caused by the use of third party supplies in this machine.

# Contents

2

Preface	i
Overview	vi
Machine Features	
Guides Provided with the Machine	
About the Operation Guide (this Guide)	
Structure of the guide	
Conventions Used in This Guide	
Menu Map	

#### 

otice	
Safety Conventions in This Guide	
Environment	
Precautions for Use	1-3
Laser Safety (Europe)	1-4
Safety Instructions Regarding the Disconnection of Power	1-5
Legal Restriction on Copying/Scanning	
EN ISO 7779	
EK1-ITB 2000	1-5
Legal Information	1-6
Energy Saving Control Function	1-7
Automatic 2-Sided Copy Function	1-7
Resource Saving - Paper	1-7
Environmental benefits of "Power Management"	
Energy Star (ENERGY STAR®) Program	

Installing and Setting up the Machine	2-1
Part Names	
Machine Exterior	
Connectors/Interior	
With Optional Equipments Attached	
Determining the Connection Method and Preparing Cables	
Connection Example	
Preparing Necessary Cables	
Connecting Cables	
Connecting USB Cable	
Connecting the Power Cable	
Power On/Off	
Power On	
Power Off	
Installing Software	
Software on Product Library Disc (Windows)	
Installing Software in Windows	
Uninstalling the Software	
Setting the Shared Printer	
Installing Software in Mac Computer	
Client Tool	
Setting WIA Driver	
Administrator User Name and Password	
Administrator Setting	
Setting Energy Saver Function	
Sleep and Sleep Timer	
Power Off Timer	
Checking the Counter	


3	Preparation before Use	3-1
	Using the Operation Panel	
	Operation Panel Keys	
	Operation Method	
	Display for Originals and Paper	
	Loading Paper	
	Before Loading Paper	
	Loading in the Cassettes	
	Loading Paper in the Multi Purpose Tray	
	Specifying Paper Size and Media Type	
4	Printing from PC	4-1
	Printing from PC	
	Printer Driver Print Settings	
	Printer Driver Help	
	Changing the Default Printer Driver Settings (Windows 7)	
	Canceling Jobs	
	Using Print Box	
	Saving Document to a Print Box	
	Printing Document from Print Box	4-10
5	Operation on the Machine	5-1
5	Loading Originals	
	Placing Originals on the Platen	
	Loading Originals in the Document Processor (Option)	
	Checking the Equipment's Serial Number	
	Copying	
	Basic Operation	
	Interrupt Copy	
	ID Card Copy	
	Using Various Functions	
	Program	5-25
	Canceling Jobs	
	Scanning	
	Scan the Image to the Specified Destination	5-32
	Scan the Image by Selecting the Destination (Quick Scan)	
	Scanning using TWAIN	
	Canceling Jobs	
<b>C</b>		<b>C</b> 4
6	Checking the Status	
	Checking Job Status	
	Checking Job History	
	Pause and Resumption of Jobs	
	Canceling the Jobs in Printing/Waiting	
	Checking Device Status	
	Checking the Remaining Amount of Toner and Paper	6-10
	Checking from Client Tool	6-11
7	System Many and Client Teal	74
1	System Menu and Client Tool	
	Default Settings on the Machine (System Menu)	
	System Menu Settings	
	Report	
	System	7_5
	Admin/Accounting	
		7-5 7-5

	Printer	7-15
	Adjust/Maint. (Adjustment/Maintenance)	
	Default Settings on the PC (Client Tool)	
	Operation Method	
	Screen Overview	
	Configuring the Administrative Settings	
	Scan Destination Settings	
	Quick Scan/TWAIN Settings	
	Print Box Settings	
8	Job Accounting	
_	Overview of Job Accounting	
	Enabling Job Accounting	
	Setting an Account	
	Adding an Account	
	Restricting the Use of the Machine	
	Editing an Account	
	Deleting an Account	
	Job Accounting when Sharing the Printer	
	Unknown ID Job	8-11
	Configuring Job Accounting	
	Default Setting	8-12
	Counting the Number of Pages Printed	8-13
	Account. Report (Accounting Report)	8-14
	Using Job Accounting	
	Login/Logout	
	Printing When Sharing the Printer	8-15
	Troubleshooting Regular Maintenance Cleaning	
	Toner Container Replacement	
	Waste Toner Box Replacement	
	Troubleshooting	
	Solving Malfunctions	
	Responding to Messages	
	Clearing Paper Jams	
10	Appendix	
	• • Optional Equipment	
	Overview of Optional Equipment	
	Character Entry Method	
	Using the Keys	
	Characters That Can be Entered Using the Numeric Keys	
	Entering Symbols	
	Entering Characters	
	Paper	
	Basic Paper Specifications	
	Choosing the Appropriate Paper	
	Special Paper	10-11
	Specifications	
	Common Functions	
	Copy Functions	
	Printer Functions	
	Scanner Functions	
	Document Processor (Reverse Automatic) (Option)	
	Paper Feeder (300-sheet) (Option)	

Duplex Unit (Option)	10-18
Glossary	10-19
Index	Index-1

## **Overview**

This machine has copy and print functions equipped as standard and can save scanned images on your computer.

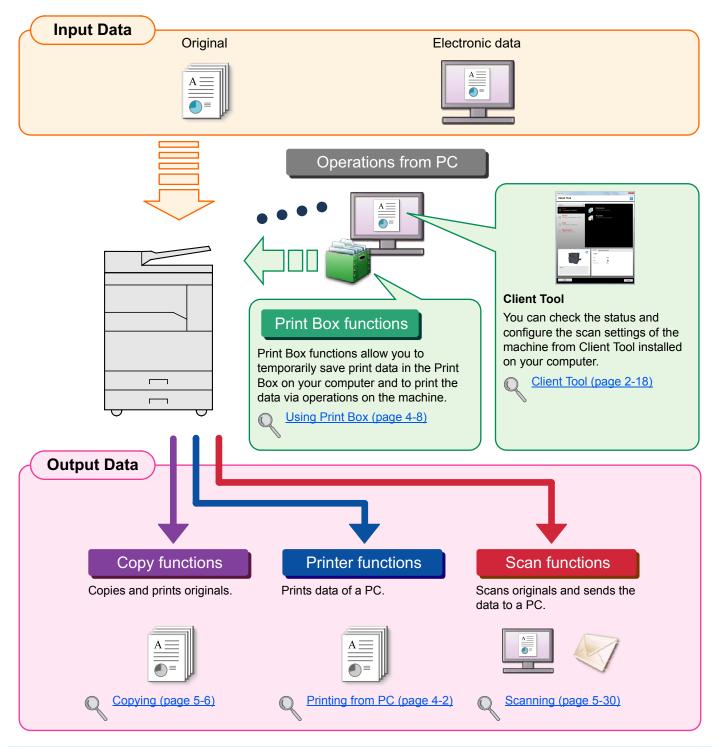



#### 💽 ΝΟΤΕ


- Before using the machine, be sure to read Legal and Safety Information on page 1-1.
- For preparations for use of the machine such as cable connections and software installation, refer to <u>Installing and</u> <u>Setting up the Machine on page 2-1</u>.
- For information on how to use the operation panel, and load paper, refer to Preparation before Use on page 3-1.

# **Machine Features**

The machine is equipped with many useful functions. Here are some examples. For details, refer to <u>Operation on the</u> <u>Machine on page 5-1</u>.

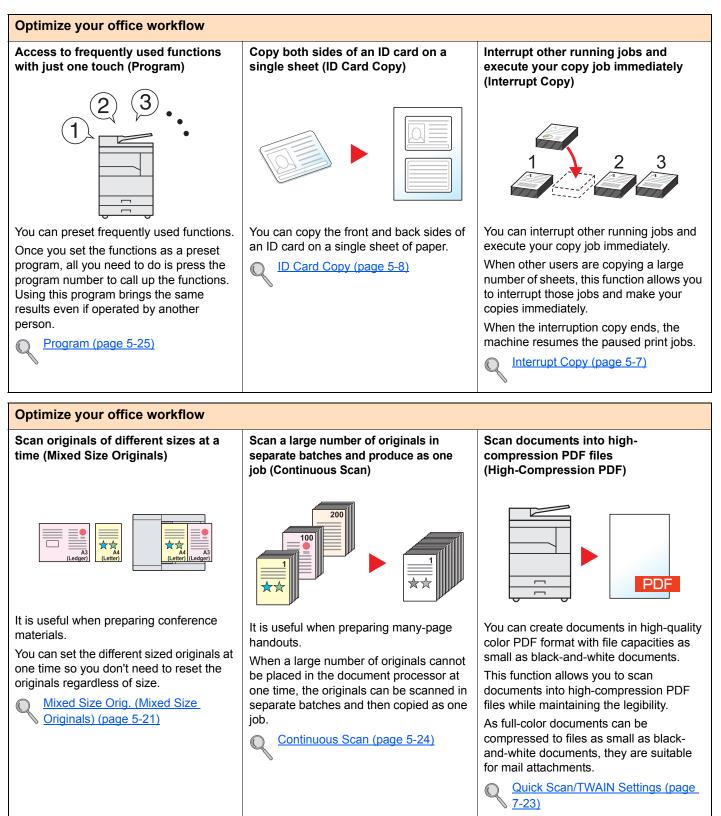

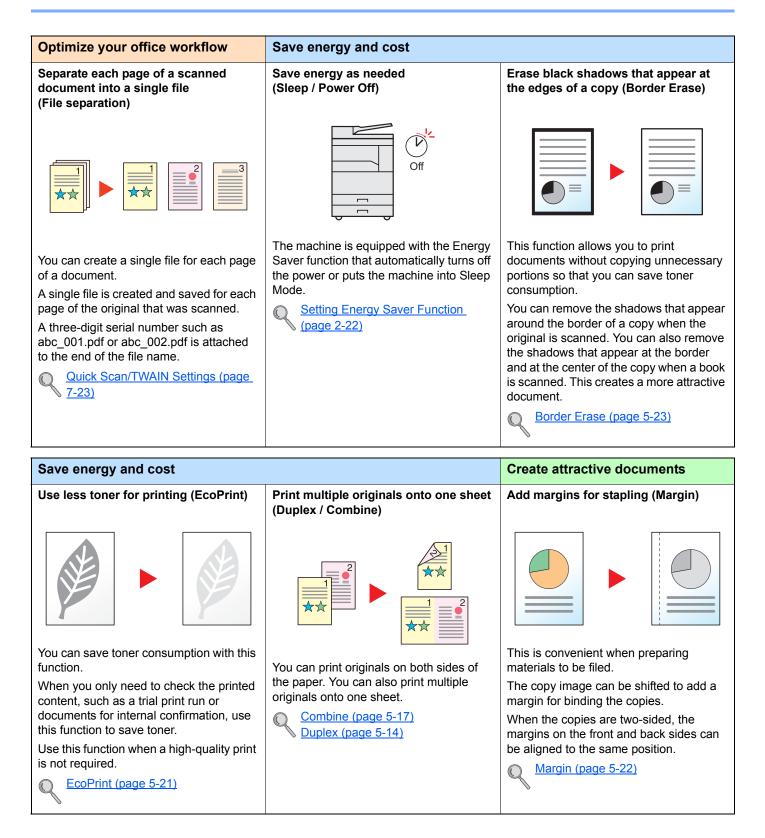

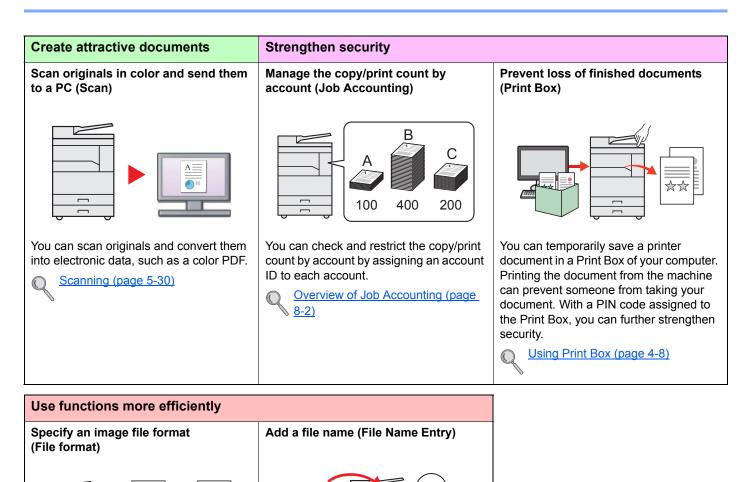

File

01

File Name Entry (page 5-24)

job history and status.

job.

 $\bigcirc$ 

This function makes it easier to check the

You can add a name and job number to a

TIFF

וחס

. IPFG

You can select from various file formats

Quick Scan Settings (page 7-24)

when storing images.

C

# **Guides Provided with the Machine**

The following guides are provided with the machine. Refer to each guide as needed. The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.


#### Printed guides

Start using the machine quickly Quick Guide

Explains how to use basic functions of the machine.

#### Safety Guide

For safe use of the machine

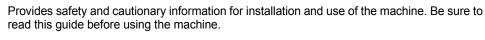

#### Safety Guide (1855)

Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

### Guides (PDF) on the Product Library disc


Use the machine thoughtfully

**Operation Guide (This Guide)** 

Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.

Print data from a computer

**Use Client Tool** 

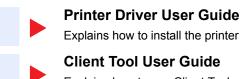

#### Explains how to install the printer driver and use the printer function.

**Client Tool User Guide** 

Explains how to use Client Tool.

Install the Adobe Reader (version 8.0 or later) to view the manuals on the Product Library disc.

# **About the Operation Guide (this Guide)**


## Structure of the guide

The Operation Guide contains the following chapters.

	Chapter	Contents	
1	Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.	
2	Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, and other matters related to administration of the machine.	
3	Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to use the operation panel, and load paper.	
4	Printing from PC	Explains functions that are available when the machine is used as a printer.	
5	Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, and scanning.	
6	Checking the Status	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, and how to check the device status.	
7	System Menu and Client Tool	Explains System Menu related to overall machine operation and utilities.	
8	Job Accounting	Explains job accounting.	
9	Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.	
10	Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.	

## **Conventions Used in This Guide**

Adobe Reader X is used as an example in the explanations below.

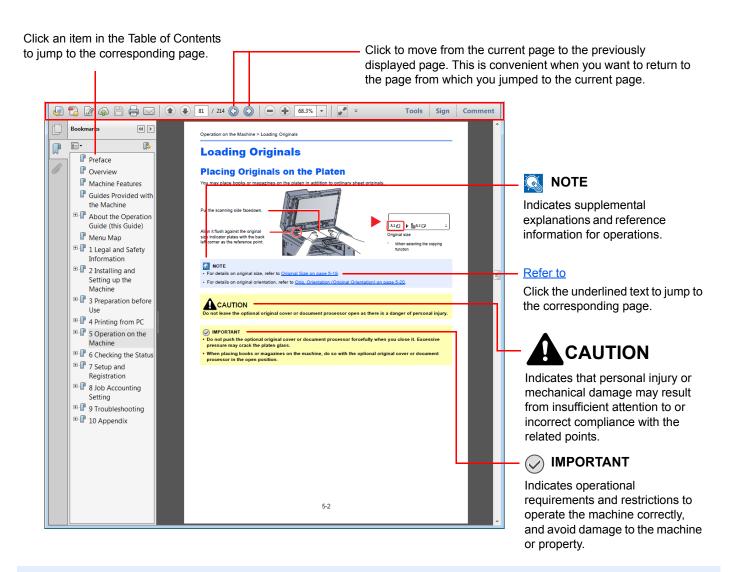

#### 💽 ΝΟΤΕ

The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.


Convention	Description	Example
[Bold]	Indicates keys on the operation panel and buttons on your computer screen.	Press the [Start] key. Click the [OK] button.
[Regular]	Indicates a message or setting displayed on the message display.	[Ready to copy.] appears in the message display. Press the [▲] or [▼] key to select [On].
"Regular"	Indicates a message or setting displayed on the computer screen.	You can select from the "Print size" menu.

#### **Conventions used in operation procedures**

Operation panel keys that are pressed are outlined in red.



Procedures consisting of a sequence of operation panel actions or computer operations are numbered as shown below.

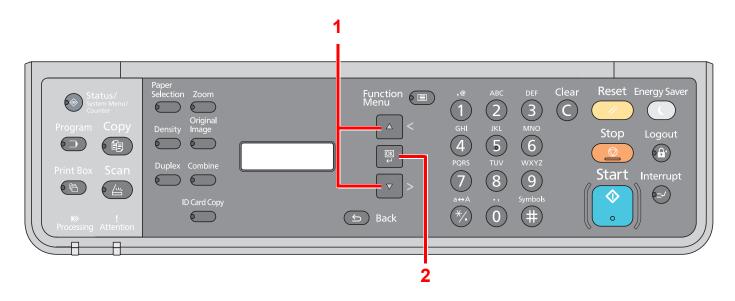

#### Size and Orientation of Originals and Paper

Original sizes and paper sizes such as A4, B5, and Letter can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "-R" is added to sizes used in the horizontal orientation. The following icons are used to indicate original and paper placement orientations on the message display.

Orientation		Setting Position (X: Width, Y: Length)	Display	Indicated Size in this Guide <sup>*1</sup>	
Vertical	Original	Y Original	Original	A4, B5, Letter, etc.	
	Paper	X       Y       Paper	Paper		
Horizontal	Original	Y Original	Original	A4-R, B5-R, Letter-R, etc.	
	Paper	X Y Paper	Paper		

\*1 Original/paper sizes that can be used vary depending on the function and source tray. For details, refer to <u>Specifications on page</u> <u>10-15</u>.

# Menu Map

(The names displayed on the message display are used here. These may differ from the referenced titles.)

•		
Copy	Paper Selection	Paper Selection (page 5-12)
	Zoom	Zoom ( <u>page 5-13</u> )
	Density	Density (page 5-14)
	Original Image	Original Image (page 5-14)
	Duplex	Duplex (page 5-14)
	Combine	Combine ( <u>page 5-17</u> )
	ID Card Copy	ID card Copy (page 5-8)
Сору		Collate/Offset (page 5-19)
	Function Menu	Original Size (page 5-19)
		Orig. Orientation (page 5-20)
		Mixed Size Orig. (page 5-21)
		EcoPrint (page 5-21)
		Backgrnd Density (page 5-21)
		Margin ( <u>page 5-22</u> )
		Border Erase (page 5-23)
		Continuous Scan (page 5-24)
		Auto Rotation (page 5-24)
		File Name Entry (page 5-24)
Scan		Ready to scan. (page 5-32)
Program		Select program (page 5-25)

Print Box	Print Box ( <u>page 4-10</u> )		
System Menu/ Counter			
Status	Print Job Status (page 6-2)		
	Print Job Log (page 6-4)		
	Send Job Log (page 6-4)		
	Scanner ( <u>page 6-9</u> )		
	Printer (page 6-9)		
	Toner Status (page 6-10)		
	Paper Status (page 6-10)		
Report	Report Print	Menu Map ( <u>page 7-4</u> )	
		Status Page ( <u>page 7-4</u> )	
		Service Status ( <u>page 7-4</u> )	
Counter (page 2-26)			
System	I/F Block Set. (page 7-5)		
Admin/Accounting	Admin. Setting (page 2-20)		
	Job Account. Set.	Job Accounting ( <u>page 8-3</u> )	
		Account. Report (page 8-14)	
		Total Accounting (page 8-13)	
		Each Job Account ( <u>page 8-13</u> )	
		Account. List (page 8-4)	
		Default Setting ( <u>page 8-12</u> )	
	Unknown ID Job (page 8-1	<u>1</u> )	

Common Settings	Language (page 7-5)			
	Default Screen (page	<u>7-6</u> )		
	Sound	Buzzer ( <u>page 7-6</u> )		
	Display Bright. (page	Display Bright. (page 7-6)		
	Quiet Mode (page 7-6	Quiet Mode (page 7-6)		
	Orig./Paper Set.	Orig./Paper Set. Custom Orig.Size (page 7-7)		
		Custom PaperSize (pa	<u>age 7-7</u> )	
		Cassette 1 Set.	Cassette 1 Size (page 7-9)	
			Cassette 1 Type (page 7-9)	
		Cassette 2 Set.	Cassette 2 Size (page 7-9)	
			Cassette 2 Type (page 7-9)	
		Cassette 3 Set.	Cassette 3 Size (page 7-9)	
			Cassette 3 Type (page 7-9)	
		Cassette 4 Set.	Cassette 4 Size (page 7-9)	
			Cassette 4 Type (page 7-9)	
		MP Tray Set.	MP Tray Size (page 7-9)	
			MP Tray Type (page 7-9)	
		Media Type Set. (page	<u>e 7-7</u> )	
		Auto Detect Orig. (pag	<u>ge 7-7</u> )	
		Media for Auto (page	<u>7-8)</u>	
		Def. PaperSource (pa	Def. PaperSource (page 7-8)	
		SpcialPaper Act. (pag	SpcialPaper Act. (page 7-8)	
	Preset Limit (page 7-1	<u>1</u> )		
	Measurement (page 7	Measurement (page 7-11)		
	Error Handling	DuplexPaperError (pa	<u>ige 7-11</u> )	
		PaperMismatchErr (pa	PaperMismatchErr (page 7-11)	
	Timer Setting	Err. Clear Timer (page	<u>e 7-12)</u>	
		Sleep Timer (page 7-1	Sleep Timer (page 7-12)	
		PanelReset Timer (pa	PanelReset Timer (page 7-12)	
		Interrupt Clear (page 7	<u>7-12)</u>	
		Power Off Rule (page	7-12)	
		Power Off Timer (page	<u>e 7-12)</u>	
		Auto Err. Clear (page	<u>7-12)</u>	
		Auto Panel Reset (pag	<u>ge 7-12</u> )	

Common Settings	Function Default	Original Image (page 7-13)		
		Zoom ( <u>page 7-13</u> )		
		Collate/Offset (page 7-13)		
		Orig. Orientation (page 7-13)		
		Border Erase (page 7-13)		
		Margin ( <u>page 7-13</u> )		
		Backgrnd Density (page 7-13)		
		EcoPrint (page 7-13)		
		Auto Rotation (page 7-13)		
		File Name Entry ( <u>page 7-13</u> )		
		Continuous Scan (page 7-13)		
		Detail Settings	2 in 1 Layout ( <u>page 7-14</u> )	
			4 in 1 Layout ( <u>page 7-14</u> )	
			Border Line (page 7-14)	
			Orig. Binding (page 7-14)	
			BookOrg. Binding (page 7-14)	
			Finish. Binding (page 7-14)	
Сору	Paper Selection (page 7-14)			
	AutoPaperSelect. (page 7-14)			
	Auto % Priority (page 7-14)			
Printer	FormFeed TimeOut (page 7-15)			
Adjust/Maint.	Density Adj. ( <u>page 7-15</u> )			
	Backgrnd Density (page 7-15)			
	Correct. Bk Line (page 7-15)			
	Service Settings	Drum Refresh (page 7-15)		

# 1 Legal and Safety Information

Please read this information before using your machine. This chapter provides information on the following topics.

Notice 1	1-2
Safety Conventions in This Guide 1	
Environment 1	1-3
Precautions for Use 1	
Laser Safety (Europe) 1	1-4
Safety Instructions Regarding the Disconnection of Power 1	1-5
Legal Restriction on Copying/Scanning 1	1-5
Legal Information 1	
Energy Saving Control Function 1	1-7
Automatic 2-Sided Copy Function 1	
Resource Saving - Paper 1	1-7
Environmental benefits of "Power Management" 1	1-7
Energy Star (ENERGY STAR®) Program 1	1-7
5	

# **Notice**

## **Safety Conventions in This Guide**

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.




WARNING: Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



CAUTION: Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

### Symbols


The  $\triangle$  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.

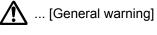



Marning of high temperature]

The 🛇 symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.

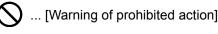

(N) ... [Disassembly prohibited]

The • symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.





... [Remove the power plug from the outlet]



... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing (fee required).

### **Environment**

The service environmental conditions are as follows:

- Temperature: 50 to 90.5 °F (10 to 32.5 °C)
- Humidity: 15 to 80%

However, adverse environmental conditions may affect the image quality. Avoid the following locations when selecting a site for the machine.

- · Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- · Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

## **Precautions for Use**

#### Cautions when handling consumables

# 

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

#### **Other precautions**

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multi Purpose (MP) Tray, return it to its original package and reseal it.

## Laser Safety (Europe)

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.


This machine is classified as Class 1 laser product under IEC/EN 60825-1:2007.

**Caution**: Performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

These labels are attached to the laser scanner unit inside the machine and are not in a user access area.



The label shown below is attached on the rating label.

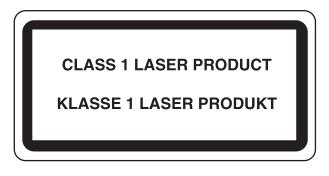

## Safety Instructions Regarding the Disconnection of Power

**Caution**: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

**Attention:** Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

## **Legal Restriction on Copying/Scanning**

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by low. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

#### 🚫 NOTE

An original which resembles a bank note closely may not be copied properly in some rare cases.

## **EN ISO 7779**

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

## **EK1-ITB 2000**

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

## **Legal Information**

Copying or other reproduction of all or part of this guide without the prior written consent of Copyright owner is prohibited.

#### **Regarding Trade Names**

- Microsoft, Windows, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows Server 2012, Windows 8 and Internet Explorer are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- Adobe Acrobat, and Flash are registered trademarks of Adobe Systems Incorporated.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Macintosh, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations <sup>™</sup> and <sup>®</sup> will not be used in this Operation Guide.

## **Energy Saving Control Function**

To reduce energy consumption while in a waiting state, the device comes equipped with an energy saving control function for switching to **Sleep** as well as **Power Off Mode** where power consumption is automatically reduced to a minimum after a certain amount of time elapses since the device was last used.

#### Sleep

The device automatically enters Sleep when 1 minute has passed since the copy function was last used. The amount of time of no activity that must pass before Sleep is activated may be lengthened. When printing in Sleep mode, the device returns to Sleep mode after it has finished printing. For more information see <u>Sleep and Sleep Timer on page 2-22</u>.

#### **Power Off Mode**

The device automatically turns its power off when 1 hour has passed since the device was last used. The amount of time of no activity that must pass before Power Off Mode is activated may be lengthened by changing the Power Off Timer setting. For more information see <u>Power Off Timer on page 2-23</u>.

## **Automatic 2-Sided Copy Function**

This device includes 2-sided copying as an optional function. For example, by copying two 1-sided originals onto a single sheet of paper as a 2-sided copy, it is possible to lower the amount of paper used. For more information refer to <u>Duplex on page 5-14</u>.

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

## **Resource Saving - Paper**

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002<sup>\*</sup> or an equivalent quality standard, be used.

This machine also supports printing on 64 g/m<sup>2</sup> paper. Using such paper containing less raw materials can lead to further saving of forest resources.

\* : EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Your sales or service representative can provide information about recommended paper types.

## **Environmental benefits of "Power Management"**

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time. Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

## Energy Star (ENERGY STAR<sup>®</sup>) Program



We have determined as a participating company in the International Energy Star Program that this product is compliant with the standards laid out in the International Energy Star Program. ENERGY STAR<sup>®</sup> is a voluntary energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing ENERGY STAR<sup>®</sup> qualified products, customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.


# 2 Installing and Setting up the Machine


This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.

Part Names	
Machine Exterior	2-2
Connectors/Interior	2-4
With Optional Equipments Attached	2-5
Determining the Connection Method and Preparing Cables	2-6
Connection Example	2-6
Preparing Necessary Cables	2-6
Connecting Cables	2-7
Connecting USB Cable	2-7
Connecting the Power Cable	
Power On/Off	
Power On	
Power Off	
Installing Software	
Software on Product Library Disc (Windows)	
Installing Software in Windows	
Uninstalling the Software	
Setting the Shared Printer	
Installing Software in Mac Computer	
Client Tool	
Setting WIA Driver	
Administrator User Name and Password	
Administrator Setting	
Setting Energy Saver Function	
Sleep and Sleep Timer	
Power Off Timer	
Checking the Counter	
	0

## **Part Names**

## **Machine Exterior**

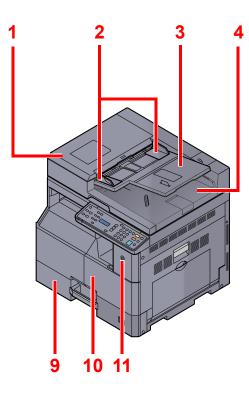


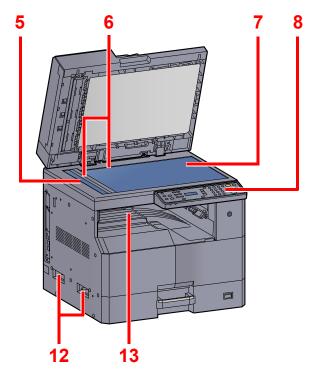

- 1 Document Processor (DP)
- 2 Original Width Guides
- 3 Original Table
- 4 Original Eject Table
- 5 Slit Glass
- 6 Original Size Indicator Plates
- 7 Platen


Optional Equipment (page 10-2)

- 8 Operation Panel
- 9 Cassette 1
- 10 Front Cover
- 11 Power Switch
- 12 Handles
- 13 Inner Tray

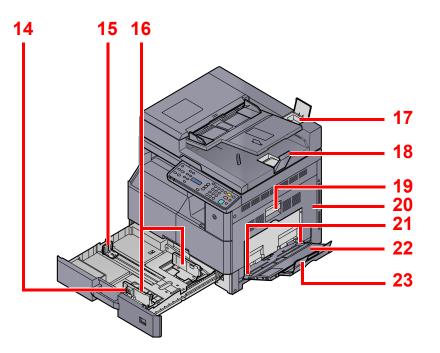


- 14 Paper Width Adjusting Tab
- 15 Paper Length Guide
- 16 Paper Width Guide
- 17 Cleaning Cloth Compartment
- 18 Original Stopper
- 19 Right Cover 1 Lever
- 20 Right Cover 1
- 21 Paper Width Guide
- 22 Multi Purpose Tray
- 23 Support Tray Section of the Multi Purpose Tray


## **Connectors/Interior**

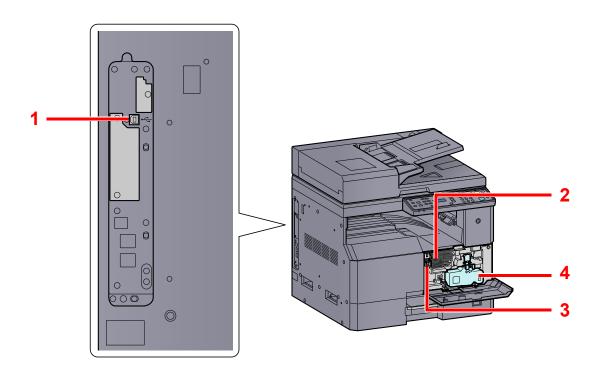

- 1 USB Interface Connector
- 2 Toner Container
- 3 Toner Container Lever
- 4 Waste Toner Box

## With Optional Equipments Attached

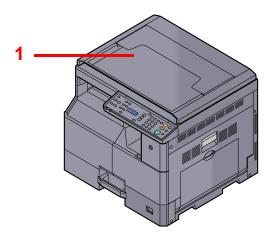

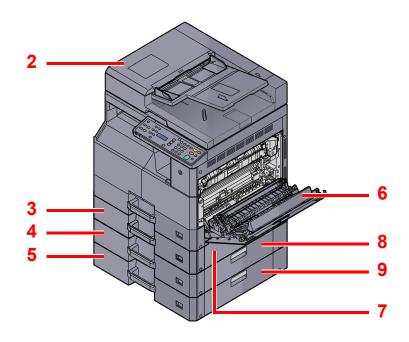

- 1 Original Cover
- 2 Document Processor (DP)
- 3 Cassette 2
- 4 Cassette 3
- 5 Cassette 4
- 6 Duplex Unit
- 7 Right Cover 2
- 8 Right Cover 3
- 9 Right Cover 4


Optional Equipment (page 10-2)

# **Determining the Connection Method and Preparing Cables**

Check how to connect the machine to a PC, and prepare the necessary cables for your environment.

## **Connection Example**

Connect the machine to the PC by referring to the illustration below.

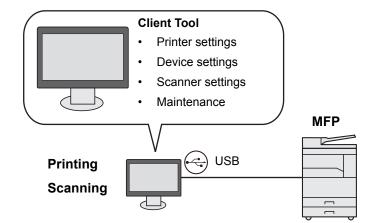

## **Preparing Necessary Cables**

Prepare the necessary cables according to the interface you use.

#### Available Standard Interfaces

Connection Environment	Function	Necessary Cable
Connect a USB cable to the machine.	Printer/Scanner	USB2.0 compatible cable (Hi-Speed USB compliant, Max. 5.0 m, Shielded)

# **Connecting Cables**

## **Connecting USB Cable**

#### **IMPORTANT**


If the power is on, turn the power switch off.

1

Rever Off (page 2-9)

#### Connect the machine.

1 Connect the USB cable to the USB interface connector located on the left side of the body.

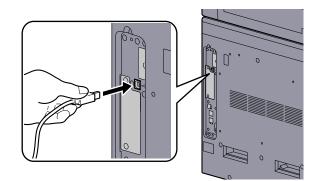

2 Connect the other end of the cable to the PC.

## **Connecting the Power Cable**

Connect one end of the supplied power cable to the machine and the other end to a power outlet.


#### **IMPORTANT**

Only use the power cable that comes with the machine.

# **Power On/Off**


## **Power On**

#### When the [Energy Saver] indicator is lit... (Recovery from sleep)

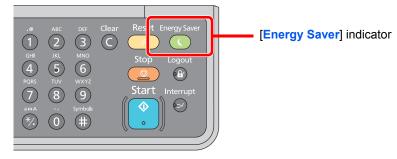

Press any key on the operation panel.

#### When the [Energy Saver] indicator is off...

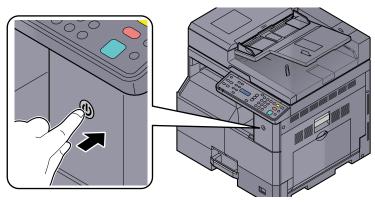


Turn the power switch on.

#### **IMPORTANT**

When turning off the power switch, do not turn on the power switch again immediately. Wait more than 5 seconds, and then turn on the power switch.

## **Power Off**

#### When not turning off the power switch... (sleep)

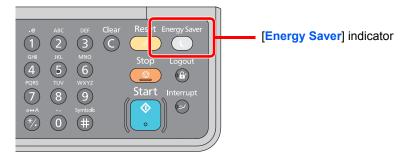

Press the [Energy Saver] key. The [Energy Saver] indicator will light up.


Sleep and Sleep Timer (page 2-22)

#### When turning off the power switch...

Note that when the power switch is turned off, the machine will be unable to automatically receive print data from computers.

#### **IMPORTANT**

When the [Processing] indicator is lit up or blinked, the machine is operating. Turning off the power switch while the machine is operating may cause it to malfunction.

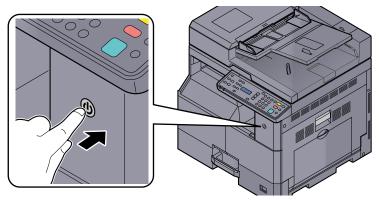

Turn the power switch off.

#### In case of not using the machine for an extended period of time...

## 

If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

#### **IMPORTANT**

Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

# **Installing Software**

Install appropriate software on your PC from the included Product Library disc if you want to use the printer function of this machine or perform TWAIN / WIA transmission from your PC.

## **Software on Product Library Disc (Windows)**

You can use either [Express Install] or [Custom Install] can be selected for the installation method. [Express Install] is set as the standard installation method. For items that cannot be installed by using [Express Install], install them by using [Custom Install]. For how to use [Custom Install], refer to Custom Install on page 2-13.

Software	Description	Express Install
Client Tool	<ul> <li>Utility that enables current and all supported devices status, features and settings to be accessed.</li> <li>When Client Tool is installed, the following utilities are installed.</li> <li>Status Monitor (page 7-19)</li> <li>Scan Destination and Print Box settings (page 7-20, page 7-26)</li> <li>Configuration (page 7-19)</li> </ul>	0
GX XPS DRIVER	Printer driver for XPS (XML Paper Specification) format developed by Microsoft Corporation.	_
GX DRIVER	Driver for printing files on a computer using the machine. This printer driver enables full use of the machine's features.	0
TWAIN Driver GX	This driver enables scanning on the machine using a TWAIN-compliant software application.	0
WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	0

#### 💽 ΝΟΤΕ

- Installation on Windows must be done by a user logged on with administrator privileges.
- Plug and Play is disabled on this device when in Sleep. To continue the installation, press any key on the operation panel to wake the device from Sleep before continuing.
- WIA driver and GX XPS DRIVER cannot be installed on Windows XP.
- When connecting the computer (Host PC) connected to the machine via USB to the computer on the network (Client PC) and using the machine as a shared printer, Client Tool needs to be installed on the Host PC.

# **Installing Software in Windows**

The following procedure is an example for installing the software in Windows 7.

You can use either [Express Install] or [Custom Install] can be selected for the installation method. [Express Install] automatically detects connected machines and installs the required software. Use [Custom Install] if you want to specify the printer port and select the software to be installed.

### Insert the Product Library disc.



### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run Setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).

### Display the screen.

By using or installing the package, you agree to be this license agreement.	device drivers and so come bound by the !	oftware included in this terms and conditions of
	_	


Click [View License Agreement] and read the License Agreement. Click [Accept].

The following procedures vary between [Express Install] and [Custom Install]. Go to the appropriate step.

- Express Install (page 2-12)
- Custom Install (page 2-13)

### **Express Install**

### **1** Install using [Express Install].

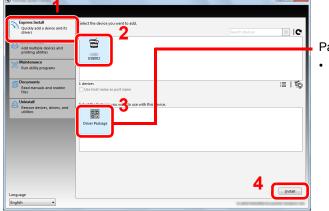

Packages include the following software:

Driver Package
 GX DRIVER, TWAIN Driver GX, WIA
 Driver, Client Tool

### 阈 ΝΟΤΕ

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a USB cable and that it is turned on and click C (Reload).
- If the Windows security window appears, click [Install this driver software anyway].

### **2** Finish the installation.

0		X
Finished		
Your software is ready to use.		
Details		
Obecans		
Product	Detail	-
GX DRIVER	Installed	E
TWAIN Driver GX	Installed	
WIA Driver	Installed WIA Driver	-
•	m	•
🗉 🔲 🎲 Print a test page		
🗄 📝 🎲 Show Quick Print tab		
		<u>Finish</u>

### 阈 ΝΟΤΕ

Configure the settings for options installed on the machine. Device settings can be configured after the installation is completed. For details, refer to the Device Settings in the **Printer Driver User Guide** on the Product Library disc.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver or WIA driver, continue by configuring the <u>Quick Scan/</u> <u>TWAIN Settings on page 7-23</u> or <u>Setting WIA Driver on page 2-19</u>.

### **Custom Install**

1

### Install using [Custom Install].

#### 1 Select [Custom Install] tab.

Select the device to be installed, and click the arrow button to move it to the "Products to Install" list.

Express Install Quickly add a device and its	Install devices and utilities	Products to Install
drivers	Move the items to the Products to Install list.	0 items
Custom Install Add multiple devices and printing utilities		
Run utility programs	3	
Read manuals and readme files	1 of 1 devices selected i≣   III 🔠 ➡	
Uninstall Remove devices, drivers, and	Name Version Description	1
utilities	GX.DRIVER         v6.019.04         (Recommended) Extended functionality printing           GX.XSP.DRIVER         v3.019.4         Extended printing from XVS application to printers           TWAN Driver GX.v15.18.27         Scan from TWANI-supported applications           WA Driver v1.51.827         WA scanner driver	
	4 drivers =>	3
	OUtilities	
	Name Version Description	
	Client Tool v1.2.19.3 Access device features, settings, and status	Use host name as port name
	1 utilities 🔿	Install
Language		
English 👻		I BE REAL COMPANY AND AND AND AND

The following buttons are available.


- : This button is used to switch the display between icon and text display.
- : This button is used to select multiple items.

: If the target device is not displayed, press this button to directly select the device to be used.

### NOTE

The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a USB cable and that it is turned on and click **C** (Reload).

2 Select the device to be installed and driver to be installed, and then click the arrow button to move it to the "Products to Install" list.

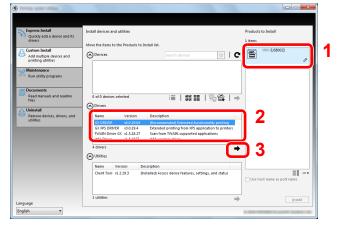

3 Select the utility to be installed, and then click the arrow button to move it to the "Products to Install" list.

Express Install Quickly add a device and its	Install devices and utilities	Products to Install
drivers	Move the items to the Products to Install list.	1 items
Add multiple devices and printing utilities	Devices Search devices	(USB002) GX DRIVER, TWAIN Driver
Run utility programs		
	-	
Read manuals and readme files	0 of 0 devices selected :=   🗱 🔠   🖏 🛱   →	-
	Drivers	
Remove devices, drivers, and	Name Version Description	
utilities	GX DRIVER v6.0.19.04 (Recommended) Extended-functionality printing GX XPS DRIVER v3.0.19.4 Extended printing from XPS application to printers TWAIN Driver GX v1.5.18.27 Scan from TWAIN-supported applications WIA Driver v1.5.18.27 WIA scanner driver	
	4 drivers	
	(A) Utilities	
	Name Version Description Client Tool v1.219.3 Access device features, settings, and status	 ] Use host name as port name
Language	1 utilities	

#### 4 Click [Install].

0		
Express Install Quickly add a device and its drivers	Install devices and utilities	Products to Install
Custom Install Add multiple devices and printing utilities	Move the items to the Products to Install list.           Operices         Search devices         Image: Comparison of the co	(USB001) GX DRIVER, TWAIN Driver
Run utility programs		Client Tool
Documents     Read manuals and readme     files     Uninstall	0 of 0 devices selected	
Constall Remove devices, drivers, and utilities	Name         Version         Description           GX XPERVER         v60.19.04         (Recommended) Extended functionality printing GX XPS DEVEX v30.18.4           Extended printing from XPS application to printers TWAAD Inver GX v1.5.8.27         Scan from TWVAAD-supported applications v4.5.8827	
	4 drivers  Utilities	
	Name Version Description	Use host name as port name
	Dutilities	
Language	0 ublities	Install
English 👻		I AN THINK STREET, SAME

### NOTE

If the Windows security window appears, click [Install this driver software anyway].

### **2** Finish the installation.

9		×
Finished Your software is ready to use.		
ODetails		
Product	Detail	<u>^</u>
GX DRIVER	Installed	E
TWAIN Driver GX	Installed	
WIA Driver	Installed WIA Driver	-
		_
🗉 🗐 🎲 Print a test page		
1 V 🕼 Show Quick Print tab		
		_
		Finish
		Emisn

### 🔕 ΝΟΤΕ

Configure the settings for options installed on the machine. Device settings can be configured after the installation is completed. For details, refer to the Device Settings in the **Printer Driver User Guide** on the Product Library disc.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver or WIA driver, continue by configuring the <u>Quick Scan/</u> <u>TWAIN Settings on page 7-23</u> or <u>Setting WIA Driver on page 2-19</u>.

### **Uninstalling the Software**

Perform the following procedure to delete the Software from your computer.

### NOTE

Uninstallation on Windows must be done by a user logged on with administrator privileges.

### Display the screen.

Click [Start] button on the Windows and then select [All Programs], [(name of offer company)], and [Uninstall Product Library] to display the Uninstall Wizard.

In Windows 8, select [Search] in charms, [Apps], and then [Uninstall Product Library].

### **2** Uninstall the software.

Place a check in the check box of the software to be deleted.

welcome to th	e Software Re	emove Wizard		
This wizard helps you ren	nove software for your p	minting system.		
Please close all yo	our applications before c	ontinuing.		
Product				
⊕-V&		1		
Select All	Clear All		0	

### **3** Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.


### 💽 NOTE

- The software can also be uninstalled using the Product Library disc.
- In the installation screen, click [Uninstall], and follow the on-screen instructions to uninstall the software.

# **Setting the Shared Printer**

If the computer connected to the machine (Host PC) via USB is also connected to the computer on the network (Client PC), printing from the computer on the network is enabled by setting the machine as the shared printer.

This section explains how to operate the device on the Host PC and on the Client PC respectively by using the setting example on Windows 7.

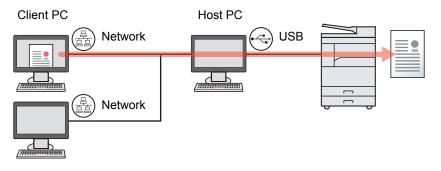


### Sharing Printer on the Host PC

- Click [Start] button on the Windows, and then click [Devices and Printers].
   In Windows 8, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Select [Share this printer] on the [Sharing] tab.
- 4 Click the [OK] button.

### Adding the Shared Printer on the Client PC

- Click [Start] button on the Windows, and then click [Devices and Printers].
   In Windows 8, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].
- 2 Click [Add a printer].

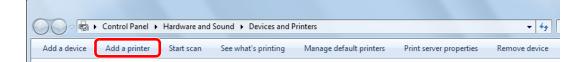

- 3 Click [Add a network, wireless or Bluetooth printer].
- 4 Select the printer added via an operation on the Host PC from the list, and then click [Next].
- 5 Confirm that the printer is added, and then click [Next].
- 6 Print the test page as needed, and then click [Finish].

# **Installing Software in Mac Computer**

Only the machine's printer functionality can be used by a Mac computer.

### 🚫 ΝΟΤΕ

- Installation on Mac OS must be done by a user logged on with administrator privileges.
- In the Authenticate screen, enter the name and password used to log in to the operating system.

### Insert the Product Library disc.



Double-click the [GEN\_LIB] icon.

### **2** Display the screen.



Double-click [OS X 10.5 or higher] and [(Brand Name) OS X 10.5+].

### **3** Install the Software.



Install the printer driver as directed by the instructions in the installation software. This completes the printer driver installation.

# **Client Tool**

Client Tool gives you quick access to common machine features and settings, plus the current status of all supported machines.

You can also use Client Tool to order toner.

Client Tool has the following functions.

Function	Description	Reference Page
Print	Access to printing preferences and machine driver properties.	<u>page 7-17</u>
Device	Configure Status Monitor, Scan Destination, and Print Box settings.	page 7-17
Scan	Configure TWAIN and Quick Scan settings. Scan to PDF, Scan to Email and Scan to Folder can also be executed from this tab.	page 7-18
Maintenance	Order replacement toner.	page 7-18

### Accessing Client Tool

Start Client Tool.



In Windows 8, select [Search] in charms, [Apps], and then [Client Tool].

### **Setting WIA Driver**

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 7.

### Display the screen.


 Click [Start] button on the Windows and enter [Scanner] in [Search programs and files]. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

In Windows 8, click [Search] in charms, and then [Settings], and enter "Scanner" in the search box. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and press [Properties].



### **2** Configure WIA Driver.

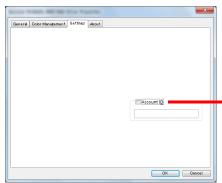

If managing the number of jobs scanned by using WIA with job accounting, select the checkbox beside [Account ID], and enter the account ID containing as many as eight digits.

# **Administrator User Name and Password**

If you are setting a function that requires administrator rights, you must enter your login user name and login password. The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

You can change the default login user name and login password. Refer to Administrator Setting on page 2-20.

You will be unable to log in if you forget your login user name or login password.

If job accounting is enabled, you need to enter an account ID. Refer to Login/Logout on page 8-15.





If this screen is displayed during operations, enter the login user name using the numeric keys and press the [OK] key.

2

Character Entry Method (page 10-4)

### 2 Enter the login password.

Login	Password	OK

Enter the login password using the numeric keys and press the [OK] key.

Character Entry Method (page 10-4)

### **Administrator Setting**

Change the login user name and login password for the administrator.

Display the screen.





2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

- 2		1	OK	Status/Sys. Menu
- 2	÷	· '		Admin/Accounting
				Admin/Accounting

### 💽 NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password	
Admin <sup>*1</sup>	Admin <sup>*1</sup>	

\*1 Upper case and lower case letters are distinguished (case sensitive).

3 Press the [▲] or [▼] key to select [Admin. Setting], and press the [OK] key.

Admin/Accounting	OK	1	
🗘 Admin. Setting			

### 2 Configure the settings.

1 Press the [OK] key.

Admin.	Setting	OK
🗘 🛓 Adr	min	



2

2 Enter a new login user name using the numeric keys and press the [OK] key.

Login User Name	OK	
🗘 Admin	1	₹ ₹



3 Enter a new login password using the numeric keys and press the [OK] key.



4 Reenter the same login password for confirmation and press the [OK] key.

5 Press the [▲] or [▼] key to select [Yes], and press the [OK] key.

The login user name and login password for the administrator are changed.

# **Setting Energy Saver Function**

To use the Energy Saver function, configure the following settings:

- Sleep and Sleep Timer (page 2-22)
- Power Off Timer (page 2-23)

# **Sleep and Sleep Timer**

### Sleep

To enter Sleep, press the [Energy Saver] key. [Sleeping] is displayed on the message display, and all indicators on the operation panel will go out to save power except the [Energy Saver] indicators. This status is referred to as Sleep.



If print data is received during Sleep, the print job is performed while the message display remains unlit.

To use the machine, press any key on the operation panel.

The machine will be ready to operate within 11 seconds.

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

### Sleep Timer

Sleep Timer automatically switches the machine into Sleep if left idle for a preset time.

The default preset time is 1 minute.

To change the preset sleep time, refer to Sleep Timer on page 7-12.

Follow the steps below to set the sleep timer for the machine to go into sleep mode when not in use.



1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

Status/Sys. Menu	OK	1	
Common Settings		'	

3 Press the [▲] or [▼] key to select [Timer Settings], and press the [OK] key.



### 💽 ΝΟΤΕ

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

4 Press the [▲] or [▼] key to select [Sleep Timer], and press the [OK] key.



### 2 Set the sleep time.

Use the numeric key or press the [▲] or [▼] key to enter the sleep time, and press the [OK] key.



### **Power Off Timer**

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Timer is used to set the time until the power turns off. The factory setting for the time until the power turns off is 1 hour. To change the preset power off time, refer to <u>Power Off Rule on page 7-12</u> and <u>Power Off Timer on page 7-12</u>.

To use the Power Off Timer, configure the following settings:

- Power Off Rule (page 2-23)
- Power Off Timer (page 2-24)

### **Power Off Rule**

Follow the steps below to set whether the power automatically turns off when not used.

 Display the screen.
 Press the [Status/System Menu/Counter] key.
 Status/ System Menu/Counter 2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.



3 Press the [▲] or [▼] key to select [Timer Settings], and press the [OK] key.

Common Settings	OK	1	
↓ Timer Settings			

### **NOTE**

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

	Login User Name	Login Password
A	dmin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

4 Press the [▲] or [▼] key to select [Power Off Rule], and press the [OK] key.



5 Press the [▲] or [▼] key to select [USB Cable], and press the [OK] key.

Power Off Rule	OK	4	
🗘 USB Cable		· '	


### 2 Set the power off rule.

Press the [▲] or [▼] key to select [Off] or [On], and press the [OK] key.



### **Power Off Timer**

Follow the steps below to select the length of time before the machine shuts off automatically when not in use.

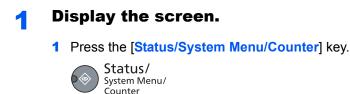

2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.



**3** Press the [▲] or [▼] key to select [Timer Settings], and press the [OK] key.

Common Settings	OK	1	
<pre>↓ Timer Settings</pre>		•	

### NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

- 2

\*1 Upper case and lower case letters are distinguished (case sensitive).

4 Press the [▲] or [▼] key to select [Power Off Timer], and press the [OK] key.

Timer Settings	OK	1	
<pre>◆ Power Off Timer</pre>		· '	

### 2 Set the power off time.

Press the [▲] or [▼] key to select the power off time, and press the [OK] key.

Power Off Timer I 2

# **Checking the Counter**

Press the [Status/System Menu/Counter] key to check the number of sheets printed and scanned.

### **1** Display the screen.

1 Press the [Status/System Menu/Counter] key.

Status/ System Menu/ Counter

2 Press the [▲] or [▼] key to select [Counter], and press the [OK] key.



### **2** Check the counter.

Press the [▲] or [▼] key to select the item you want to check, and press the [OK] key.




# 3 Preparation before Use

This chapter explains the following operations.

Using the Operation Panel	3-2
Operation Panel Keys	
Operation Method	
Display for Originals and Paper	
Loading Paper	
Before Loading Paper	3-6
Loading in the Cassettes	3-7
Loading Paper in the Multi Purpose Tray	
Specifying Paper Size and Media Type	3-13

# **Using the Operation Panel**

# **Operation Panel Keys**

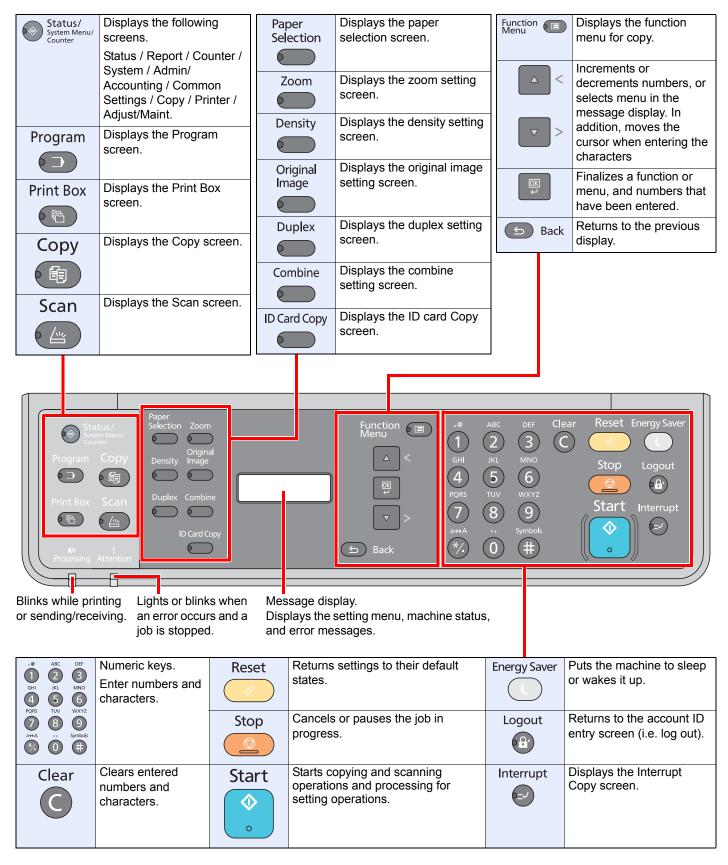


### **Operation Method**

This section explains how to operate the setting menus on the message display.


### **Displaying the Menus and Configuring Settings**

Press the [Status/System Menu/Counter] key, [Function Menu] key, or function keys to display the setting menus. Press the [▲] key, [▼] key, [OK] key, or [Back] key to select a menu, and perform settings.

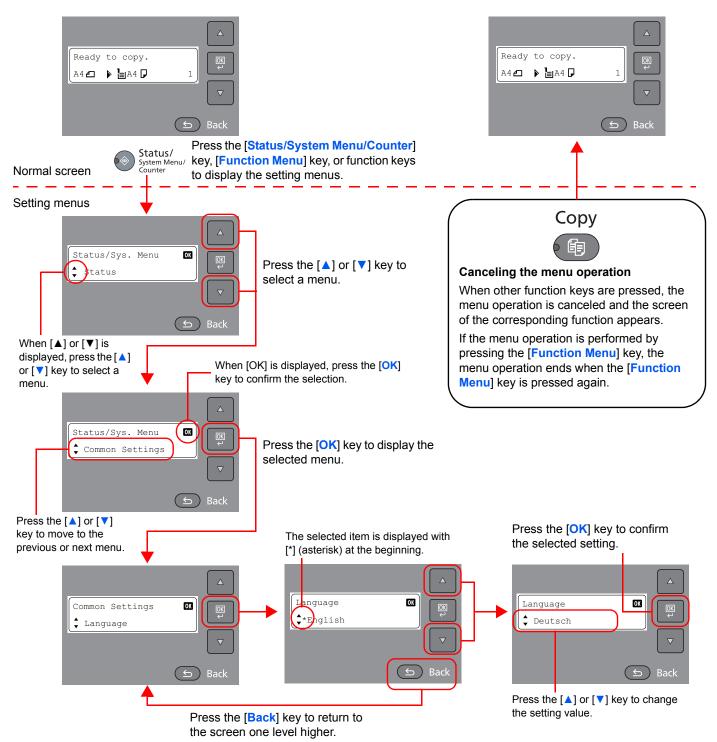

# **Display for Originals and Paper**


The copy screen displays the selected paper source.

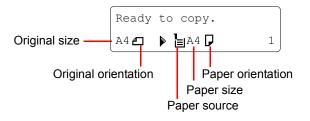

# **Loading Paper**

Paper can be loaded in the one standard cassette and the multi purpose tray. A paper feeder is also available as an option. (Refer to <u>Optional Equipment on page 10-2</u>.)

For the paper load methods for each cassette, refer to the page below.

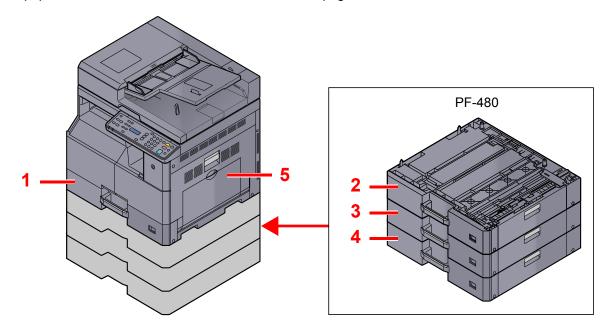


No.	Cassettes	Page
1	Cassette 1	page 3-7
2	Cassette 2	page 3-7
3	Cassette 3	page 3-7
4	Cassette 4	page 3-7
5	Multi Purpose Tray	<u>page 3-10</u>

### 💽 ΝΟΤΕ

- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)

### **Before Loading Paper**

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

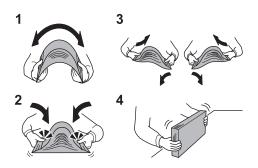

- 1 Bend the whole set of sheets to swell them in the middle.
- **2** Hold the stack at both ends and stretch it while keeping the entire stack swelled.
- 3 Raise the right and left hands alternately to create a gap and feed air between the papers.
- 4 Finally, align the papers on a level, flat table.

If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.

#### **IMPORTANT**

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.

### 💽 NOTE

- Note that some paper types have a tendency to curl and may jam in the paper eject unit.
- If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to <u>Paper on page 10-7</u>.

Avoid exposing opened paper to high temperatures and high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multi purpose tray or cassettes back in the paper storage bag.

If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.

# **Loading in the Cassettes**

The standard cassette can hold plain paper, recycled paper or color paper. Cassette 1 hold up to 300 sheets of plain paper ( $80 \text{ g/m}^2$ ).

The following paper sizes are supported: A3, B4, A4, A4-R, B5, B5-R, A5-R, Folio, Ledger, Legal, Oficio II, Letter, Letter-R, Statement-R, 8K, 16K, 16K-R, and 216 × 340 mm.


### **IMPORTANT**

• When using media types other than plain paper (such as recycled or colored paper), always specify the media type and paper weight settings.

Specifying Paper Size and Media Type for the Cassettes (page 3-13) Media Type Set. (Media Type Settings) (page 7-10)

- The cassettes can hold paper with weight between 64 105 g/m<sup>2</sup>.
- Do not load thick paper that is heavier than 106 g/m<sup>2</sup> in the cassettes. Use the multi purpose tray for paper that is heavier than 106 g/m<sup>2</sup>.



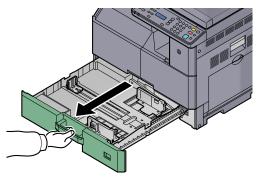


### 💽 ΝΟΤΕ

Do not pull out more than one cassette at a time.




### Push down on the cassette base plate and secure it.

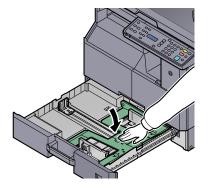

### 3

### Adjust the cassette size.

- **1** Holding the paper width adjusting tab, move the paper width guides to fit the paper.
  - Paper sizes are marked on the cassette.

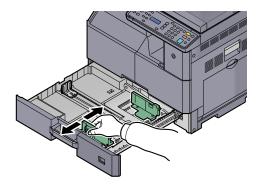


#### **IMPORTANT**

Make sure that the width guides are flush against the paper. If there is space between the guides and the paper, set the width guides again.

2 Squeeze the ends of the bottom of the paper length guide and move the guide to fit the length of the paper.

Paper sizes are marked on the cassette.

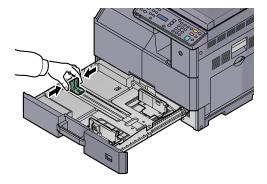


### **IMPORTANT**

Make sure that the length guide is flush against the paper. If there is space between the guide and the paper, set the length guide again.


### Load paper.

**1** Set the paper strait from the upper part.

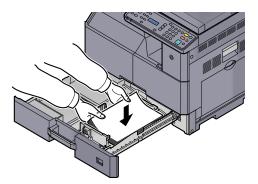


#### **IMPORTANT**

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette. (Refer to <u>Before Loading Paper on page 3-6</u>.)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration below).
- The paper length and width guides must be adjusted to the paper size before loading the paper. Loading the paper without adjusting these guides may cause skewed feeding and paper jams.
- Be sure that the paper length and width guides rest securely against the paper. If there is a gap, readjust the guides to fit the paper.

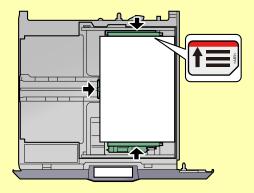

2 Insert the appropriate paper size card in the slot to indicate the size of the paper inside.

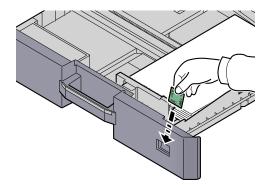

**5** Gently push the cassette back in.

### 🚫 ΝΟΤΕ

- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.
- Select the media type (plain, recycled, etc.) loaded in the cassette.

Specifying Paper Size and Media Type for the Cassettes (page 3-13)

### **Loading Paper in the Multi Purpose Tray**

The multi purpose tray will hold up to 100 sheets of A4 or smaller plain paper (80 g/m<sup>2</sup>) or up to 25 sheets of plain paper (80 g/m<sup>2</sup>) lager than A4.

The multi purpose tray accepts paper sizes from A3 to A6-R and Hagaki and from Ledger to Statement-R, 8K, 16K and 16K-R. Be sure to use the multi purpose tray when you print on any special paper.

### IMPORTANT

• When using media types other than plain paper (such as recycled or colored paper), always specify the media type and paper weight settings.

Specifying Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-15) Media Type Set. (Media Type Settings) (page 7-10)

• If you are using a paper weight of 106 g/m<sup>2</sup> or more, set the media type to Thick and set the weight of the paper you are using.


The capacity of the multi purpose tray is as follows.

- A4 or smaller plain paper (80 g/m<sup>2</sup>), recycled paper or color paper: 100 sheets
- B4 or larger plain paper (80 g/m<sup>2</sup>), recycled paper or color paper: 25 sheets
- · Hagaki: 15 sheets
- · OHP film: 25 sheets
- Envelope DL, Envelope C4, Envelope C5, Envelope #10, Envelope #9, Envelope #6, Monarch, Youkei 4, Youkei 2: 5 sheets

### NOTE


- When you load custom size paper, enter the paper size by referring to <u>Specifying Paper Size and Media Type for the</u> <u>Multi Purpose Tray (MP Tray Setting) on page 3-15</u>.
- When you use special paper such as transparencies or thick paper, select the media type by referring to <u>Specifying</u> Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) on page 3-15.

### Open the multi purpose tray.

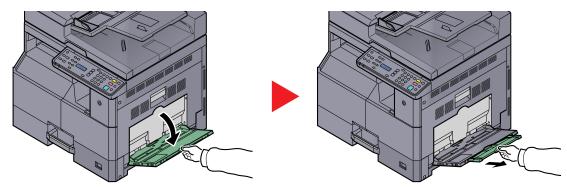


Pull out the MP tray extension to match the paper size. Refer to the label which sealed inside the machine when opening the MP tray.

### Adjust the multi purpose tray size.

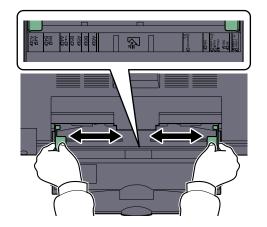

### **3** Load paper.

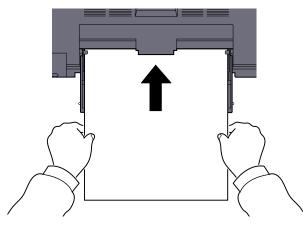

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.


Before Loading Paper (page 3-6)

### **IMPORTANT**

- When loading the paper, keep the print side facing down.
- Curled paper must be uncurled before use.
- Straighten the top edge if it is curled.
- When loading paper into the multi purpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in the multi purpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.

### When you load envelopes or cardstock in the multi purpose tray

Load the paper with the print side facing down. For the procedure for printing, refer to the **Printer Driver User Guide**. Example: When printing the address.

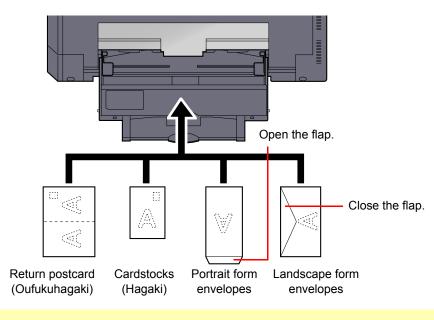

### **IMPORTANT**

- Use unfolded return postcard (Oufukuhagaki).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

### 🚫 NOTE

When you load envelopes in the multi purpose tray, select the envelope type by referring to <u>Specifying Paper Size and</u> <u>Media Type for the Multi Purpose Tray (MP Tray Setting) on page 3-15</u>.

# **Specifying Paper Size and Media Type**

The default paper size setting for cassette 1 and for the optional paper feeder (cassettes 2 to 4) is [Auto], and the default media type setting is [Plain]. For the multi purpose tray, the default paper size setting is [A4], and the default media type setting is [Plain].

To fix the type of paper to be used in cassettes, specify the paper size and media type setting. (Refer to Specifying Paper Size and Media Type for the Cassettes on page 3-13.) To change the type of paper to be used in the multi purpose tray, specify the paper size and media type setting. (Refer to Specifying Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) on page 3-15.)

### Specifying Paper Size and Media Type for the Cassettes

To fix the type of paper to be used in cassette 1 or the optional paper feeders (cassettes 2 to 4), specify the paper size. Also, if you use a media type other than plain paper, specify the media type setting.

Selection Item		Selectable Size/Type
Cassette 1 (to 4)     Auto     Paper size is automatically detected and selected.       Size     Value: Metric, inch		
	Standard Sizes	Available options are as follows:
		Value: A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R, 16K
Cassette 1 (to 4) T	ype <sup>*1</sup>	Select the media type.
		Value: Plain (52 to 105 g/m <sup>2</sup> ), Rough, Vellum (52 to 105 g/m <sup>2</sup> ), Recycled, Preprinted <sup>*2</sup> , Bond, Color, Prepunched <sup>*2</sup> , Letterhead <sup>*2</sup> , Thick (106 to 128 g/m <sup>2</sup> ), High Quality, Custom 1-8

\*1 To change to a media type other than [Plain], refer to Media Type Set. on page 7-7. When the paper weight settings shown below are selected, the media indicated for each setting cannot be selected. Plain, Preprinted, Recycled, Vellum, Rough, Letterhead, Color, Preprinted, High Quality: [Heavy 1], [Heavy 2] or [Extra Heavy] Bond, Thick: [Heavy 2] or [Extra Heavy] Custom 1 to 8: [Extra Heavy]

\*2 To print on preprinted or prepunched paper or on letterhead, refer to SpcialPaper Act. on page 7-8.

**Display the screen.** 

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

Status/Sys. Menu	OK	1	
Common Settings			

3 Press the [▲] or [▼] key to select [Orig./Paper Set.], and press the [OK] key.

Common Settings	OK	1	
• Orig./Paper Set.			

4 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Set.], and press the [OK] key.



#### 🚫 NOTE

[Cassette 2] to [Cassette 4] are shown when the optional paper feeder is installed.

### **2** Specify the paper size.

1 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Size], and press the [OK] key.



 For automatic detection of the paper size, press the [▲] or [▼] key to select [Auto], and press the [OK] key.

Ca	assette	1	Size	ОК	. 1
<b>,</b>	*Auto				) '



Press the [▲] or [▼] key to select [Metric] or [inch] as the unit, and press the [OK] key.



 To select the paper size, press the [▲] or [▼] key to select [Standard Size], and press the [OK] key.

Cassette	1 Size	ОК
🗘 Standar	d Size	



2

Press the [▲] or [▼] key to select the paper size, and press the [OK] key.

Standard Size	OK	1	
<b>▲</b> *A4 <b>₽</b>		· •	تي ح

2 Press the [Back] key.

∽ Back

### **3** Specify the media type.

1 Press the [▲] or [▼] key to select [Cassette 1 (to 4) Type], and press the [OK] key.

Cassette 1 Set.	OK	1	
Cassette 1 Type			

2 Press the [▲] or [▼] key to select the media type, and press the [OK] key.

Cassette 1 Type	OK	1	
↓*Plain			

# Specifying Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting)

To change the type of paper to be used in the multi purpose tray, specify the paper size. When using other than a plain paper, specify the media type.

Selec	tion Item	Selectable Size/Type
MP Tray Size	Standard Sizes	Available options are as follows: Value: A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, Oficio II, 8K, 16K-R, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki, Oufukuhagaki, Youkei 4, Youkei 2, Custom <sup>*1</sup>
	Size Entry	Enter the size not included in the standard size. Value Metric X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments) Inch X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)
MP Tray Type *2		Select the media type. Value: Plain (52 to 105 g/m <sup>2</sup> ), Transparency, Rough, Vellum (52 to 105 g/m <sup>2</sup> ), Labels, Recycled, Preprinted <sup>*3</sup> , Bond, Cardstock, Color, Prepunched <sup>*3</sup> , Letterhead <sup>*3</sup> , Envelope, Thick (106 to 163 g/m <sup>2</sup> ), High Quality, Custom 1-8

\*1 For instructions on how to specify the custom paper size, refer to Custom PaperSize on page 7-7.

- \*2 To change to a media type other than [Plain], refer to <u>Media Type Set. on page 7-7</u>.
- \*3 To print on preprinted or prepunched paper or on letterhead, refer to SpcialPaper Act. on page 7-8.


### **1** Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Common Settings], and press the [OK] key.

Status/Sys. Menu	ОК
🗘 Common Settings	

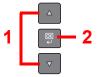

3 Press the [▲] or [▼] key to select [Orig./Paper Set.], and press the [OK] key.

Common Settings	OK	1	
<pre>Orig./Paper Set.</pre>			
		•	<b>└──</b> ┥ ▽


4 Press the [▲] or [▼] key to select [MP Tray Set.], and press the [OK] key.




### 2 Specify the paper size.


1 Press the [▲] or [▼] key to select [MP Tray Size], and press the [OK] key.

MP Tray Set.	ОК
🗘 MP Tray Si	lze

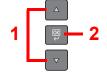

 To select the paper size, press the [▲] or [▼] key to select [Standard Size], and press the [OK] key.

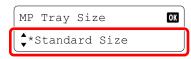

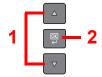

Press the [▲] or [▼] key to select the paper size, and press the [OK] key.





To enter a size not displayed in the standard sizes, press the [▲] or [▼] key to select [Size Entry], and press the [OK] key.





Use the numeric keys or press the [▲] or [▼] key to enter the paper length, and press the [OK] key.

Size	Entry(	Y)	OK
(98 -	297)	297	mm

Use the numeric keys or press the  $[ \blacktriangle ]$  or  $[ \blacktriangledown ]$  key to enter the paper width, and press the [ OK ] key.

2



2 Press the [Back] key.

S → Back

### **3** Specify the media type.

1 Press the [▲] or [▼] key to select [MP Tray Type], and press the [OK] key.

MP Tray Set.	OK	- 1	
♠ MP Tray Type		· '	

2 Press the [▲] or [▼] key to select the media type, and press the [OK] key.

- 2

MP Tray Type	OK	1	
<pre>↓*Plain</pre>		1	

# **4 Printing from PC**

### This chapter explains the following topics:


Printing from PC	4-2
Printer Driver Print Settings	
Printer Driver Help	4-6
Changing the Default Printer Driver Settings (Windows 7)	4-6
Canceling Jobs	4-6
Using Print Box	4-8
Saving Document to a Print Box	4-9
Printing Document from Print Box	4-10

# **Printing from PC**

Follow the steps below to print documents from applications.

### 

- To print the document from applications, install the printer driver on your computer from the supplied Product Library disc.
- In some environments, the current settings are displayed at the bottom of the printer driver.

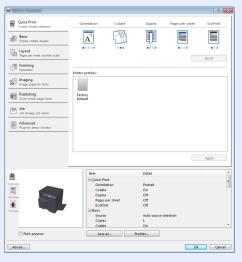


• When printing the cardstock or envelopes, load the cardstock or envelopes before performing the following procedure. (Refer to <u>When you load envelopes or cardstock in the multi purpose tray on page 3-12</u>.)

### 1 Display the screen.

Click [File] and select [Print] in the application.

### **2** Configure the settings.

1 Select the machine from the "Name" menu and click the [Properties] button.

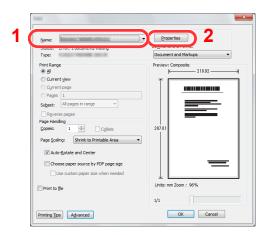

- 2 Select the [Basic] tab.
- 3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

Registering the Original Size (page 4-3)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

Quick Print Custom button selection	Print size: A4 (100%)	Media type: Auto media selection
Basic Copies, collate, duplex	Auto source selection	Printer default 🔻
Rages per sheet, bookiet, scale	Copies:	
Finishing Separation		EcoPrint:
Imaging Image, graphics, fonts	Collate:	
Cover mode, page insert		Duplex
Job Job storage, job name	Orientation:	
Advanced Plug-ins, Status Monitor		
		Reset
	Save as Profiles	Print preview

4 Click the [OK] button to return to the Print dialog box.

### **3** Click the [OK] button.

Start printing.

### **Registering the Original Size**

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the [Basic] tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.

### ि NOTE


To execute printing at the machine, set the paper size and type in <u>Specifying Paper Size and Media Type for the</u> <u>Cassettes on page 3-13</u>.

### Display the print settings screen.

### 2 Register the paper size.

- 1 Click the [Basic] tab.
- 2 Select [Custom] in the "Print size" menu.
- 3 Click the [New] button.
- 4 Enter the name of the paper.
- 5 Enter the paper size.
- 6 Click the [OK] button.
- 7 In the "Print size" menu, select the paper size (name) that you registered in steps 4 to 7.

- 8 Click [MP tray] in the "Source" menu.
- 9 Select the type of paper in the "Media type" menu.

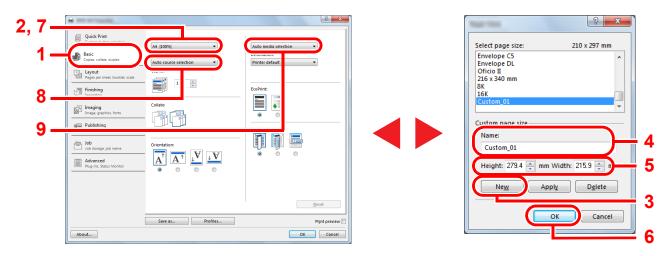


# 

If you loaded a postcard or envelope, select [Cardstock] or [Envelope] in the "Media type" menu.

# **Printer Driver Print Settings**

The printer driver print settings screen allows you to configure a variety of print-related settings. For more information, refer to the **Printer Driver User Guide** on the Product Library disc.

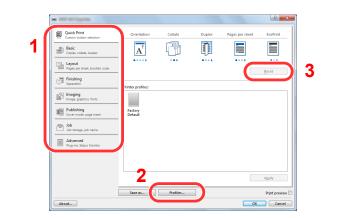

No.	Description					
1	[Quick Print] tab					
	Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.					
	Quick Pret     Orientation     Collaide     Duplex     Pages par sheet     EcoPret       Bit Copes class     Copes class     Collaide     Duplex     Pages par sheet     Collaide       Bit Pages par sheets     Copes class     Collaide     Duplex     Pages par sheet     Collaide       Bit Pages par sheets     Copes class     Collaide     Duplex     Pages par sheet     Collaide					
	[Basic] tab					
	This tab groups basic functions that are frequently used. You can use it to configure the paper size, destination, and duplex printing.					
	[Layout] tab					
	This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.					
	[Finishing] tab					
	This tab lets you offset printed media.					
	[Imaging] tab					
	This tab lets you configure settings related to the quality of the print results.					
	[Publishing] tab					
	This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.					
	[Job] tab					
	This tab lets you configure the settings for saving print data in a Print Box. Since saved documents can be printed directly from the machine, this function is convenient when you wish to print a document that you don't want others to see.					
	[Advanced] tab					
	This tab lets you configure settings for adding watermarks to print data.					
2	[Profiles]					
	Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.					
3	[Reset]					
	Click to revert settings to their initial values.					

# **Printer Driver Help**

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.



- Click the [?] button in the upper right corner of the screen and then click the item you want to know about.
- Click the item you want to know about and press the [F1] key on your keyboard.

# **Changing the Default Printer Driver Settings (Windows 7)**

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to **Printer Driver User Guide**.

- 1 Click [Start] button on the Windows, and then click [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Preferences] button on the [General] tab.
- 4 Select the default settings and click the [OK] button.

# **Canceling Jobs**

You can cancel jobs by pressing the [Stop] key.



# When a job is being executed

The print job is canceled.

### When there are waiting jobs

[Print Job List] is displayed.

1 Press the [▲] or [▼] key to select the job to cancel, and press the [OK] key.



2 Press the [▲] or [▼] key to select [Cancel Job], and press the [OK] key.



### NOTE

Select [Details] and press the [OK] key to show the detailed information of the job.

3 Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key.



The job is canceled.

### **NOTE**

If a print job remains on a PC, you can cancel the job by following the steps below.

- 1 Double-click the printer icon ( 🔜 ) displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- 2 Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

# **Using Print Box**

Print Box is a function to temporarily save a printer document in the box on a PC and execute printing at the machine. A job is not printed until you operate the machine, and this prevents the printed papers from being taken by someone. With a PIN code assigned to the Print Box, you can further strengthen security.

If you configure settings in the [**Print Box**] of [**Job**] tab of the printer driver and then print, the printed data will be saved in the box on the PC and printing can be executed at the machine.

The Print Box can be set in the Client Tool. Refer to Default Settings on the PC (Client Tool) on page 7-16.

# **Use the Preset Print Box**

Save the print data in the preset Print Box. Box 01 is set by default. When selecting Box 01 from the GX Driver and printing, printing can be executed only by selecting Box 01 in the operation panel.


- Select [Box 01] from the GX driver and then execute printing. (Refer to <u>Saving</u> <u>Document to a Print Box on page 4-9.)</u>
- 2 Select [Box 01] to be printed at the machine when needed. (Refer to <u>Printing</u> <u>Document from Print Box on page 4-10</u>.)



# **Use Multiple Boxes**

A maximum of 10 Print Boxes (Box 01 to 10) can be set by using Client Tool. When connecting the computer (Host PC) connected to the machine via USB to the computer on the network (Client PC) and using the machine as a shared printer, each Client PC can use a different Print Box.

- Preset the Print Box by using Client Tool. (Refer to <u>Default Settings on the PC</u> (<u>Client Tool</u>) on page 7-16.)
- 2 Select the Print Box from the Client PC and execute printing. (Refer to <u>Saving</u> <u>Document to a Print Box on</u> page 4-9.)
- **3** A print job is saved in a Print Box in the Host PC.
- Select the Print Box to be printed at the machine when needed. (Refer to <u>Printing</u> <u>Document from Print Box on</u> <u>page 4-10</u>.)

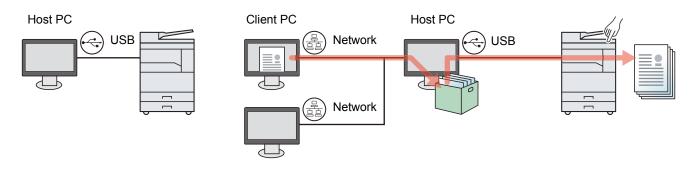

# ΝΟΤΕ

When using the machine as a shared printer, settings must be made for the shared printer. Refer to <u>Setting the</u> <u>Shared Printer on page 2-16</u>.

1

# **Saving Document to a Print Box**

Use the procedure below to save a document in the Print Box created on the Host PC. Print Box can be selected from [**Box 01**] to [**Box 10**]. To use the other boxes or to change the default box name, configure the settings on Client Tool. Refer to <u>Default Settings on the PC (Client Tool) on page 7-16</u>.

In addition, a PIN code can be set for a Print Box. Since the PIN code must be entered when printing at the machine, security is enhanced.

### Start Client Tool on the Host PC.

Refer to Accessing Client Tool on page 2-18.


### 2 Display the screen on your PC.

- 1 Click [File] and select [Print] in the application.
- 2 Select the machine from the "Name" menu and click the [Properties] button.
  - ? × -Quick Print Orientation Collate Pages per sheet EcoPrin 1 123 Basic Copies, collate, duple  $\mathbf{A}^{\hat{1}}$ .... .... .... .... Layout Pages per sh Reset Finishing Printer profiles: Imaging Image, graphics, fonts Publishing Factory Default rage, job name

#### 3 Select the [Job] tab.

### **3** Configure the settings.

 Select [Print Box] then select the Print Box where the print job should be stored from the [Box 1] to [Box 10].

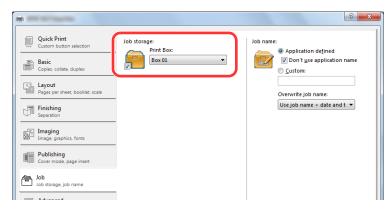

2 As necessary, set the job name for the print job.

### 💽 NOTE

Note that the same job name is set and the job is overwritten if [Custom] and [Replace existing file] are set.

# 4

#### Start printing.

Select [OK] to return to the "Print" screen and click [OK] to start storing.

# **Printing Document from Print Box**

Print a document saved in a Print Box.

# 阈 ΝΟΤΕ

- · All documents saved in the selected Print Box are printed.
- Client Tool must be running on the computer from which printing from Print Box is executed. Refer to <u>Accessing</u> <u>Client Tool on page 2-18</u>.
- After being printed, the documents in the Print Box are deleted.

### Start Client Tool on the Host PC.

Refer to Accessing Client Tool on page 2-18.

### 2

1

### Press the [Print Box] key on the machine.

**Print Box** 



### 3

#### Select the Print Box.

Press the  $[\blacktriangle]$  or  $[\lor]$  key to select the Print Box.

Print Box	
	XO ~
↓ 01 Box 01	

### 🚫 ΝΟΤΕ

The name set by using Client Tool appears. When using Box 01, the default name (Box 01) is set by Client Tool. When using any of Box 02 to 10, a Box name needs to be set by using Client Tool. If a box with no Box name is set, [------] appears on the message display. If a document is stored in the box for which no Box name is set, printing from the box is not available.

For details on setting the box name, refer to <u>Default Settings on the PC (Client Tool) on</u> page 7-16.

### **A** Press the [Start] key.



Printing starts.

If you have assigned a PIN code to the Box with Client Tool, enter the PIN code using the numeric keys and press the [OK] key.

PIN Cod	le	ОК	
÷ I			] 1



# 5

# **Operation on the Machine**

This chapter explains the following topics:

Loading Originals	5-2
Placing Originals on the Platen	5-2
Loading Originals in the Document Processor (Option)	5-3
Checking the Equipment's Serial Number	
Copying	5-6
Basic Operation	
Interrupt Copy	
ID Card Copy	
Using Various Functions	5-10
Program	5-25
Canceling Jobs	5-29
Scanning	5-30
Scan the Image to the Specified Destination	5-32
Scan the Image by Selecting the Destination (Quick Scan)	5-34
Scanning using TWAIN	5-35
Canceling Jobs	5-36


# **Loading Originals**

# **Placing Originals on the Platen**

You may place books or magazines on the platen in addition to ordinary sheet originals.

Put the scanning side facedown.

Align it flush against the original size indicator plates with the back left corner as the reference point.

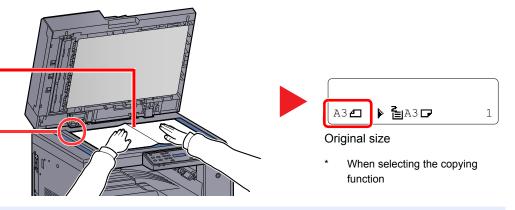

# 💽 ΝΟΤΕ

- For details on original size, refer to Original Size on page 5-19.
- For details on original orientation, refer to Orig. Orientation (Original Orientation) on page 5-20.

# 

Do not leave the optional original cover or document processor open as there is a danger of personal injury.

### **IMPORTANT**

- Do not push the optional original cover or document processor forcefully when you close it. Excessive pressure may crack the platen glass.
- When placing books or magazines on the machine, do so with the optional original cover or document processor in the open position.

# **Loading Originals in the Document Processor (Option)**

The optional document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

### **Originals Supported by the Document Processor**

The document processor supports the following types of originals.

Detail	Document Processor		
Weight	1-sided: 45 to 120 g/m <sup>2</sup> 2-sided: 50 to 120 g/m <sup>2</sup>		
Sizes	Maximum: Ledger/A3 Minimum: Statement-R/A5-R		
No. of sheets	Plain paper (50 to 80 g/m <sup>2</sup> ), Colored paper, Recycled paper, High Quality: 50 sheets (Mixed size originals: 30 sheets) Thick paper (120 g/m <sup>2</sup> ): 33 sheets Art paper: 1 sheet		

#### **Originals Not Supported by the Document Processor**


Do not use the document processor for the following types of originals.

- · Soft originals such as vinyl sheets
- Transparencies such as OHP film
- Carbon paper
- · Originals with very slippery surfaces
- · Originals with adhesive tape or glue
- · Wet originals
- Originals with correction fluid which is not dried
- Irregularly shaped (non-rectangular) originals
- · Originals with cut-out sections
- · Crumpled paper
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)

# How to Load Originals

#### **IMPORTANT**

- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
- Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.

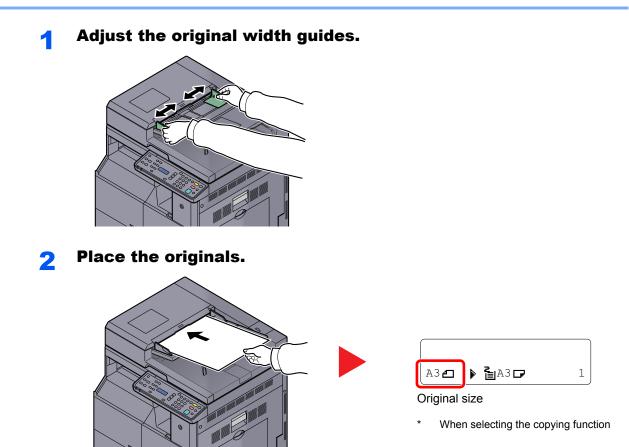


Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go.

### NOTE

- For details on original size, refer to Original Size on page 5-19.
- For details on original orientation, refer to <u>Orig. Orientation (Original Orientation) on page</u> <u>5-20</u>.

#### **IMPORTANT**


• Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

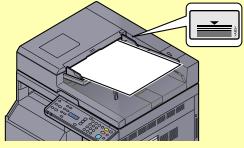

- Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.
- Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).

# **Checking the Equipment's Serial Number**

The equipment's serial number is printed in the location shown in the figure.

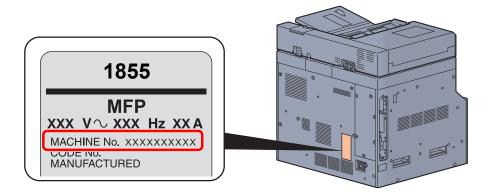


# 

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your Service Representative.

# Copying

# **Basic Operation**

Follow the steps as below for basic copying.

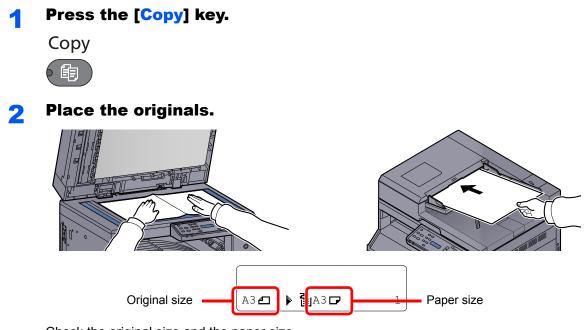

Check the original size and the paper size.

### 

- For loading instructions, refer to Loading Originals on page 5-2.
- For selecting the paper source, refer to Paper Selection on page 5-12.

### **3** Select the functions.



Select the copier functions to use.

Using Various Functions (page 5-10)

### 4

# Use the numeric keys to enter the copy quantity.

Specify the desired number up to 999.

**5** Press the [Start] key.



Copying starts.

# **Interrupt Copy**

This function allows you to pause the current jobs in progress when you need to make copies immediately.

When the interruption copy ends, the machine resumes the paused print jobs.

# ΝΟΤΕ

 $\bigcirc$ 

If the machine is left unused for 60 seconds in interrupt copy mode, interrupt copying is automatically cancelled and printing resumes. You can change the delay until interrupt copying is canceled. Change the delay as required.

Interrupt Clear (page 7-12)

### Press the [Interrupt] key.

Interrupt

(=-/

The current print job is temporarily interrupted.

2

1

### Place the originals onto the machine for interrupt copy.

### **NOTE**

For loading instructions, refer to Loading Originals on page 5-2.

# **3** Select the functions.



Select the copier functions to use.

Q Using Various Functions (page 5-10)

**4** Press the [Start] key.



Interrupt copying starts.



### When interrupt copying ends, press the [Interrupt] key.

The machine resumes the paused print jobs.

# **ID Card Copy**

Use to copy the front and back sides of a license or other ID card on one sheet of paper.

### **1** Configure the settings.


1 Press the [ID Card Copy] key. ID Card Copy

2 Press the [▲] or [▼] key to select [On], and press the [OK] key.

ID card Copy	OK	
• On		

# **2** Place the original.

Align with the ID Card marks on the Original Size Indicator Plates.

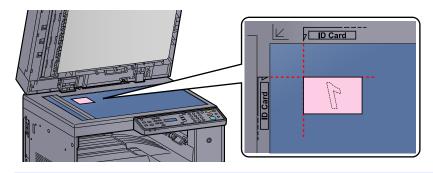

### NOTE

For loading instructions, refer to Loading Originals on page 5-2.

### **3** Select the functions.



Select the copier functions to use.

Q Using Various Functions (page 5-10)



### Use the numeric keys to enter the copy quantity.

Refer to Basic Operation on page 5-6.




# Press the [Start] key.



One side of the card is scanned.

# **6** Turn the original over.

Align with the ID Card marks on the Original Size Indicator Plates.

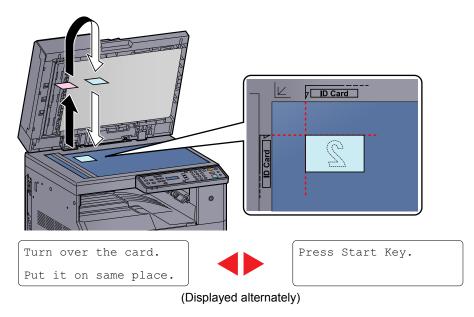




0

The front and back sides of the card are copied on one sheet of paper.

# **Using Various Functions**

To configure the settings for functions, press the key of the function you want to configure. You can also press the **[Function Menu]** key to select from other functions displayed on the message display.

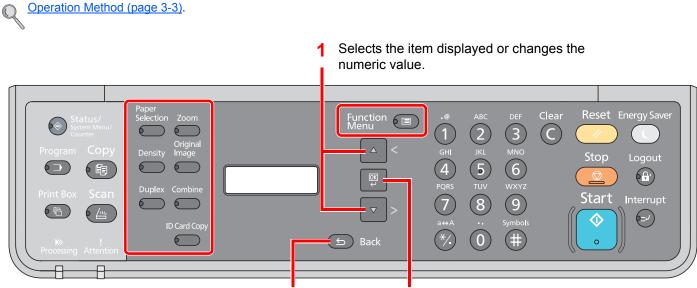

Cancels the current menu setting to return to the menu one level higher.

2 Confirms the selected setting.

For details on each function, see the table below.

Кеу	Function	Description	Reference page
Paper Selection	Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 5-12
Zoom	Zoom	Adjusts the zoom to reduce or enlarge the image.	<u>page 5-13</u>
Density	Density	Adjust density.	<u>page 5-14</u>
Original Image	Original Image	Select original image type.	<u>page 5-14</u>
Duplex	Duplex <sup>*1</sup>	Prints 1-sided or open book originals to 2-sided, or 2- sided or open book originals to 1-sided.	<u>page 5-14</u>
Combine	Combine	Combines 2 or 4 original sheets into 1 printed page.	<u>page 5-17</u>
ID Card Copy	ID card Copy	Use to copy the front and back sides of a license or other ID card on one sheet of paper.	<u>page 5-8</u>

\*1 The optional duplex unit and document processor are required for some of the duplex modes.

Кеу		Function	Description	Reference page
Function		Collate/Offset	Offsets the output by page or set.	page 5-19
Menu		Original Size	Specify the original size to be scanned.	page 5-19
		Orig. Orientation	Select the orientation of the original document top edge to scan correct direction.	<u>page 5-20</u>
		Mixed Size Orig. <sup>*1</sup>	Scans all sheets in the document processor, even if they are of different sizes.	<u>page 5-21</u>
	Backgr	EcoPrint	Saves toner when printing.	page 5-21
		Backgrnd Density	Removes dark background from originals, such as newspapers.	<u>page 5-21</u>
		Margin	Adds margin (white space) when printing to allow you to bound copies.	page 5-22
		Border Erase	Erases black borders around original when printing.	page 5-23
		<b>.</b>	Scans a large number of originals in separate batches and then produce as one job.	<u>page 5-24</u>
	۵	Auto Rotation	Rotates image 90 degrees when original and paper source sizes are the same, but their orientation is different.	page 5-24
		File Name Entry	Adds a file name.	page 5-24

\*1 The optional document processor is required.

# **Paper Selection**

Select the cassette or multi-purpose tray that contains the required paper size.

### 🚫 NOTE

Specify in advance the size and type of the paper loaded in the cassette (refer to <u>Specifying Paper Size and Media</u> <u>Type on page 3-13</u>).

	ltem	Value	Description		
Auto			The paper matching the size of the original is selected automatically.		
Casse	ette 1 (to 4) <sup>*1</sup>		Feed paper from cassette 1 (to 4).		
MP Tr	ay		Feed paper from the multi purpose tray.		
MP Tr	ay Set.		Before selecting [MP Tray], you need to select [MP Tray Set.] and specify the paper size and media type.		
	Standard Size	A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki, Oufukuhagaki, Youkei 4, Youkei 2, Custom <sup>*2</sup>	Select from the standard size.		
	Size Entry	Set the sizes of [Y] (vertical). Metric: 98 to 297 mm (in 1 mm increments) Inch: 3.86 to 11.69" (in 0.01" increments) Set the sizes of [X] (horizontal).	Enter the size not included in the standard size. <sup>*3</sup> Use the numeric keys or press the [▲] or [▼] key to set the sizes of [Y] (vertical) and press the [OK] key. Set the sizes of [X] (horizontal) as well.		
		Metric: 148 to 432 mm (in 1 mm increments) Inch: 5.83 to 17.00" (in 0.01" increments)			
	Media Type	Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8	Select the media type. Displayed after [Standard Size] or [Size Entry] is set in [MP Tray Set].		

\*1 Cassette 2 to Cassette 4 are displayed when the optional paper feeder is installed.

\*2 For instructions on how to specify the custom paper sizes, refer to Custom PaperSize on page 7-7.

\*3 The input units can be changed in System Menu. For details, refer to Measurement on page 7-11.

### 🚫 ΝΟΤΕ

• You can conveniently select in advance the size and type of paper that will be used often and set them as default (refer to <u>Specifying Paper Size and Media Type on page 3-13</u>).

• If the specified size of paper is not loaded in the paper source cassette or multi purpose tray, [Load paper in cassette # (MP tray).] appears. Refer to <u>Responding to Messages on page 9-11</u>.

# Zoom

Adjust the zoom to reduce or enlarge the image. The following zoom options are available.

	ltem	V	alue	Description
100%				Reproduces the original size.
Auto		A3: 141%		Adjusts the image to match the paper size.
Stand	ard Zoom			Reduces or enlarges at preset
	Metric	100% 90% Folio>>A4 75% 11×15" >>A4 70% A3>>A4 A4>>A5 50% 25% Min.	400% Max. 200% A5>>A3 141% A4>>A3 A5>>A4 127% Folio>>A3 106% 11 × 15">>A3	magnifications. Press the [▲] or [▼] key to select the desired magnification.
	Metric (Asia Pacific)	100% 86% A3>>B4 A4>>B5 81% B4>>A4 B5>>A5 70% A3>>A4 B4>>B5 50% 25% Min.	400% Max. 200% A5 >> A3 141% A4>A3 B5>B4 122% A4>>B4 A5>>B5 115% B4>>A3 B5>>A4	
	Inch	100% 78% Legal>>Letter 77% Ledger>>Legal 64% Ledger>>Letter 50% Ledger>>STMT 25% Min.	400% Max. 200% STMT>>Ledger 154% STMT>>Legal 129% Letter>Ledger 121% Legal>>Ledger	
Zoom Entry		25 to 400% (in 1% increm	ients)	Manually reduces or enlarges the original image in 1% increments between 25% and 400%.Use the numeric keys or press the [▲] or [▼] key to enter the any magnification.QCharacter Entry Method (page 10-4)

# Density

Adjust density. Press the [▲] or [▼] key to select [Darker +3] to [Lighter -3].



# **Original Image**

Select original image type.


Item	Description		
Text+Photo	xt+Photo Best for mixed text and photo documents.		
Photo	Best for photos taken with a camera.		
Text	Sharply renders pencil text and fine lines.		

# Duplex

Produces two-sided copies.

You can also create single-sided copies from two-sided originals or originals with facing pages such as books. The following modes are available.

### One-sided to Two-sided

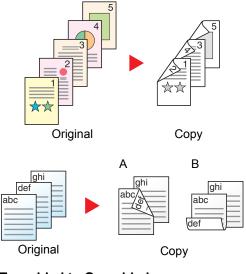

Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank. The optional duplex unit is required.

The following binding options are available.

- A Original Left/Right to Binding Left/Right: Images on the second sides are not rotated.
- B Original Left/Right to Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

#### Two-sided to One-sided




Copies each side of a two-sided original onto two individual sheets. The optional document processor is required.

The following binding options are available.


Binding Left/Right: Images on the second sides are not rotated.

Binding Top: Images on the second sides are rotated 180 degrees.

### Two-sided to Two-sided

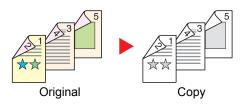

#### Book to One-sided

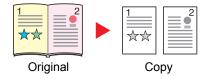

Produces two-sided copies from two-sided originals. The optional duplex unit and document processor are required.

### 💽 NOTE

The paper sizes supported in Two-sided to Two-sided mode are A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Letter, Letter-R, Executive, Statement-R, Oficio II, 216 × 340 mm and Folio.

Produces a 1-sided copy of a 2-sided or open book original.


The following binding options are available.

Binding Left: Originals with facing pages are copied from left to right. Binding Right: Originals with facing pages are copied from right to left.

#### Ĭ. NOTE

- The original sizes supported in Book to One-sided mode are Ledger, Letter-R, A3, A4-R, A5-R, B4, B5-R and 8K.
- The supported paper sizes are A4, B5, Letter and 16K. You may change paper size and reduce or enlarge copy to match that size.

Book to Two-sided

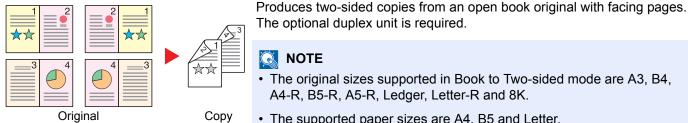

The original sizes supported in Book to Two-sided mode are A3, B4, A4-R, B5-R, A5-R, Ledger, Letter-R and 8K.

The supported paper sizes are A4, B5 and Letter.

Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided. Select the binding orientation for original and finished documents.

Item	Value	Description
1-sided>>1-sided	—	Disables the function.
1-sided>>2-sided	—	Copies the original with the default setting. For the default settings, refer to Function Default on page 7-13.
2-sided>>1-sided		settings, refer to <u>runction Default on page 7-15</u> .
2-sided>>2-sided		
Book>>1-sided		
Book>>2-sided		

lt	em	Value	Description	
Advanced Duplex	dvanced Duplex		Changes the settings.	
1-sided>> 2-sided	Finish. Binding	Left/Right, Top	Select the binding orientation of copies, and press the [OK] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.	
2-sided>> 1-sided	Orig. Binding	Left/Right, Top	Select the binding orientation of originals, and press the [OK key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.	
2-sided>> 2-sided	Orig. Binding	Left/Right, Top	Select the binding direction of originals, and press the [OK] key.	
	Finish. Binding	Left/Right, Top	Select the binding orientation of copies, and press the [OK] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.	
Book>> 1-sided	Orig. Binding	Left, Right	Select the binding direction of originals, and press the [OK] key.	
Book>> 2-sided	Orig. Binding	Left, Right	Select the binding direction of originals, and press the [OK] key.	


When placing the original on the platen, consecutively replace each original and press the [Start] key.

After scanning all originals, press the [OK] key to start copying.

# Combine

Combines 2 or 4 original sheets into 1 printed page. You can select the page layout and the type of boundary lines around the pages.

The following types of the boundary lines are available.

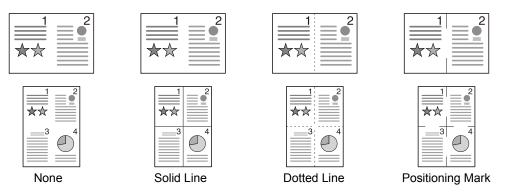

	Item		Value	Description
Off	Off		—	Disables the function.
2 in 1 4 in 1			_	Copies the original with the default setting. For the default settings, refer to Function Default on page 7- 13.
Adva	nced Combin	e	_	Changes the settings.
	2 in 1	Layout	L to R/T to B, R to L	Select the page layout of scanned originals, and press the [OK] key.
		Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the page boundary line, and press the [OK] key.
		Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.
				Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.
	4 in 1	Layout	Right then Down, Down then Right, Left then Down, Down then Left	Select the page layout of scanned originals, and press the [OK] key.
		Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the page boundary line, and press the [OK] key.
		Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.
				Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [OK] key.

#### Layout image

	Value	Image
2 in 1	L to R/T to B	
	R to L	
4 in 1	Right then Down	
	Down then Right	
	Left then Down	
	Down then Left	

### NOTE

- The paper sizes supported in Combine mode are A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.
- If the original size is not set, the screen for setting the original size is displayed. Refer to Original Size on page 5-19.

# Collate/Offset

Offsets the output by page or set.

Value	Image	Description
Off	-	Disables the function.
Collate Only		Scans multiple originals and delivers complete sets of copies as required according to page number.
Offset Each Page		<ul> <li>When offsetting is used, printed copies are produced after rotating each page by 90 degrees.</li> <li><b>NOTE</b></li> <li>To use offsetting, the same size of paper as the selected paper tray must be loaded in a different orientation in a different paper tray.</li> <li>The paper sizes supported in Offset are A4, B5, Letter and 16K.</li> </ul>
Offset Each Set		<ul> <li>When offsetting is used, printed copies are produced after rotating each set by 90 degrees.</li> <li><b>NOTE</b></li> <li>To use offsetting, the same size of paper as the selected paper tray must be loaded in a different orientation in a different paper tray.</li> <li>The paper sizes supported in Offset are A4, B5, Letter and 16K.</li> </ul>

# **Original Size**

Specify the original size to be scanned.

Item	Description
Auto	Have the size of original detected automatically.
A3, A4-R, A4, A5-R, A5, A6-R, B4, B5-R, B5, B6-R, B6, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Statement, 11 × 15", Oficio II, 8K, 16K-R, 16K, Hagaki, Oufukuhagaki, Custom <sup>*1</sup>	Select from standard sizes.

\*1 For instructions on how to specify the custom original sizes, refer to Custom Orig.Size on page 7-7.

# 


Be sure to always specify the original size when using custom size originals.

# **Orig. Orientation (Original Orientation)**

Select the orientation of the original document top edge to scan correct direction. To use any of the following functions, the document's original orientation must be set.

- Duplex
- Margin
- Combine

Select original orientation from [Top Edge on Top] or [Top Edge on Left].

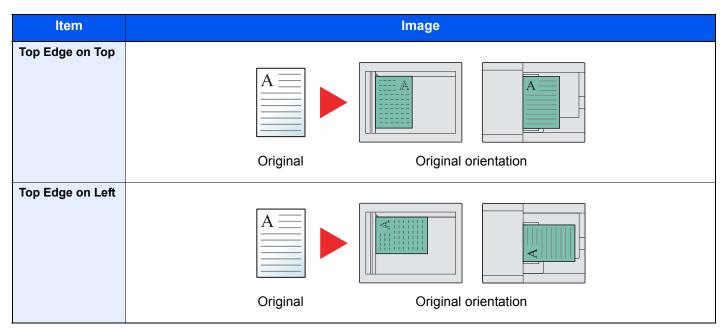

### NOTE

The default setting for Original Orientation can be changed. Refer to <u>Function Default on page 7-13</u> for details.

# Mixed Size Orig. (Mixed Size Originals)

Scans multiple sheets of the same width using the document processor.



# 

The optional document processor is required.

Value	Description	
Off	Disables the function.	
On	Enables Mixed Size Originals.	

# EcoPrint

EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.



Value	Description	
Off	Disables the function.	
On	Enables EcoPrint.	

# Backgrnd Density (Background Density)

Removes dark background from originals, such as newspapers.


Value	Description	
Off	Disables the function.	
On	Enables Background Density.	

# Margin

Add margins (white space). In addition, you can set the margin width and the back page margin.

# ΝΟΤΕ

The default setting for margin width can be changed. For details, refer to Margin on page 7-13.

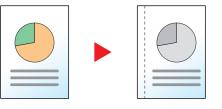

	Item	Value	Description
Off		_	Disables the function.
On		-	Copies the original with the default setting. For the default settings, refer to Function Default on page 7-13.
Adva	nced Margin	_	Changes the settings.
	Left/Right	Metric: -18 mm to +18 mm (in 1 mm increments) Inch: -0.75 to +0.75" (in 0.01" increments)	Set the margin width. <sup>*1</sup> Use the numeric keys or press the [▲] or [▼] key to enter the margins for [Left/Right], and press the [OK] key.
	Top/Bottom	Metric: -18 mm to +18 mm (in 1 mm increments) Inch: -0.75 to +0.75" (in 0.01" increments)	Set the margin width. <sup>*1</sup> Use the numeric keys or press the [▲] or [▼] key to enter the margins for [Top/Bottom], and press the [OK] key.
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.
			Choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press the [ <b>OK</b> ] key.
	Back Page	Auto, Manual	For duplex copying, select [Auto] or [Manual].
	Margin <sup>*2</sup>		When [Auto] is selected, an appropriate margin is applied automatically on the rear page depending on a margin specified for the front page and a binding orientation.
			When [Manual] is set, you can set a different margin than the front on the back. Set the margin in the screen that is displayed. The setting selections are the same as for the front.


\*1 The input units can be changed in System Menu. For details, refer to Measurement on page 7-11.

\*2 The optional duplex unit is required.

# **Border Erase**

Erases the black border that forms around the image. The following modes are available.

#### **Border Erase Sheet**

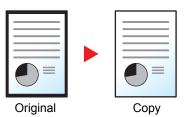

Erases black borders around the single sheet original.

#### **Border Erase Book**



Erases black borders around the edges and in the middle of the original such as a thick book. You can specify the widths individually to erase the borders around the edges and in the center of the book.

# 阈 ΝΟΤΕ

The default setting for border erase width can be changed. For details, refer to Border Erase on page 7-13.


	ľ	tem	Value	Description
Off	Off		—	Disables the function.
Sheet Book			_	Copies the original with the default setting. For the default settings, refer to Function Default on page 7- <u>13</u> .
Adva	nced Erase		_	Changes the settings.
	Sheet	Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Set the border erase width. <sup>*1</sup> Use the numeric keys or press the [▲] or [▼] key to enter the border erase width, and press the [OK] key.
		Back Page <sup>*2</sup>	Same as FrontPage, Do Not Erase	For 2-sided originals, select [Same as FrontPage] or [Do Not Erase], and press the [OK] key.
	Book	Border Gutter	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Set the border erase width. <sup>*1</sup> Use the numeric keys or press the [▲] or [▼] key to enter the border erase width, and press the [OK] key.
		Back Page <sup>*2</sup>	Same as FrontPage, Do Not Erase	For 2-sided originals, select [Same as FrontPage] or [Do Not Erase], and press the [OK] key.

\*1 The input units can be changed in System Menu. For details, refer to Measurement on page 7-11.

\*2 The optional duplex unit is required.

# **Continuous Scan**

Scans a large number of originals in separate batches and then produce as one job. To scan the next original, press the [Start] key. After scanning all originals, press the [OK] key. Copying starts.

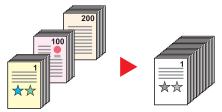

Value	Description	
Off	Disables the function.	
On	Enables Continuous Scan.	

# Auto Rotation

Automatically rotates the image 90 degrees when the sizes of the original and the loaded paper matches but the orientations are different.

Value	Description	
Off	Disables the function.	
On	Enables Auto Rotation.	

### 🚫 ΝΟΤΕ

You can select whether to rotate the image automatically in the default settings. For details, refer to <u>Auto Rotation on page 7-13</u>.

# File Name Entry

Adds a file name. Additional information such as job number can also be set. You can check a job history or job status using the file name or job number specified here.

Enter the file name (up to 32 characters), and press the [OK] key.

To specify a job number, select [Additional Info.] and press the [OK] key.

Character Entry Method (page 10-4)

# Program

By registering sets of frequently used functions as a single program, you can simply select the program number as needed to recall those functions. You can also name the programs for easy identification when recalling.

### NOTE

- Only copying functions can be registered and recalled as programs.
- Up to 4 programs can be registered.

# **Registering Program**

Use the procedure below to register a program.

#### 1

### Configure the settings of the functions.

Configure the settings of the functions you want to register in a program.

Program Copy	Paper Selection Zoom Original Density Image	Function E		Clear Reset Energy Saver
Print Box Scan	Duplex Combine	v v Back	PQRS TUV WXYZ 7 8 9 a ↔ A · · Symbols * 0 #	Start Interrupt

For the settings of functions, refer to Using Various Functions on page 5-10.

### 2 Register the program.

1 Press the [Program] key.

Program



2 Press the [▲] or [▼] key to select a program number (01 to 04) to register, and press the [OK] key.

Select program	OK	1	
• 01		'I	

### NOTE

- · Unregistered program numbers are displayed with [------].
- If you select a program number already registered, the currently registered functions can be replaced with a new set of functions.
- 3 Press the [▲] or [▼] key to select [Add], and press the [OK] key.

	OK	1	
Add		•	

4 Enter a program name using the numeric keys and press the [OK] key.



Character Entry Method (page 10-4)

### 🚫 NOTE

- Up to 32 characters can be entered.
- If the program number is already used in any of the existing programs, the change confirmation screen appears. Press the [▲] or [▼] key to select [Yes] or [No], and press the [OK] key.
- The settings can be confirmed by recalling the program. Refer to <u>Recalling Program on</u> page 5-26.

# **Confirming the Registered Program**

The settings of the registered program can be confirmed by recalling the program. Refer to <u>Recalling Program on page</u> <u>5-26</u>.

# **Recalling Program**

Use the procedure below to recall a registered program.



1 Press the [Program] key.

Program



2 Press the [▲] or [▼] key to select a program number (01 to 04) to recall, and press the [OK] key.

Select program	OK	1	2
♦ 01 Program 01			~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~

3 Press the [▲] or [▼] key to select [Recall], and press the [OK] key.

Program 01	OK	٦L	- <u> </u>
<pre> Recall</pre>		Ľ	

### **2** Execute the program.

Place the originals and press the [Start] key.

# **Overwriting Program**

Programs can be changed with the same procedures as those for registering programs. When selecting the program number to be registered, select the program to be changed and overwrite the program number. Refer to <u>Registering</u> <u>Program on page 5-25</u>.


### **Changing the Program Name**

Use the procedure below to change the program name.

1	Display the screen.
	1 Press the [Program] key.
	Program
	2 Press the [▲] or [▼] key to select a program number (01 to 04) to edit, and press the [OK] key.
	Select program
	1
2	Edit the program name.
4	<ol> <li>Press the [▲] or [▼] key to select [Edit Name], and press the [OK] key.</li> </ol>
	$1  \boxed{2}$
	Edit Name
	2 Enter a program name using the numeric keys and press the [OK] key.
	Character Entry Method (page 10-4)
	3 Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key.

### **Deleting Program**

Use the procedure below to delete a program.

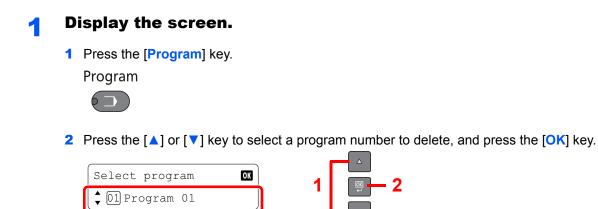

# **2** Delete the program.

1 Press the  $[\blacktriangle]$  or  $[\lor]$  key to select [Delete], and press the [OK] key.



2 Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key.

# **Canceling Jobs**

You can cancel jobs by pressing the [Stop] key.



# When a job is being executed

The copy job is canceled.

# When there are waiting jobs

[Print Job List] is displayed.

1 Press the [▲] or [▼] key to select the job to cancel, and press the [OK] key.

Print Job List	II OK	1	
♣ ♣0010 doc001.do	c II	· '	

2 Press the [▲] or [▼] key to select [Cancel Job], and press the [OK] key.

0010 doc001.doc	OK	1	
🗘 Cancel Job		· '	

### 💽 ΝΟΤΕ

Select [Details] and press the [OK] key to show the detailed information of the job.

3 Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key.

Cancel	OK
🗘 Yes	



The job is canceled.


# Scanning

You can scan originals using the machine and save the scanned images on your computer. The following three types of scan are available.

### Scan the Image to the Specified Destination


### **Use the Preset Scan Destination**

If originals are scanned after selecting [Local PC] as the destination, an image is saved in "My Documents" in the computer (Host PC) connected to the machine via USB. If Client Tool is activated on the Host PC, originals can be scanned only by operating the machine.

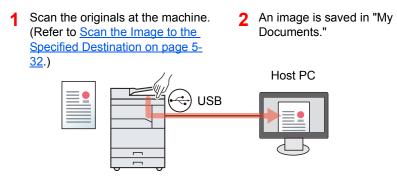


### **Use Your Desired Destination**

When saving an image in a location other than "My Documents", the destination needs to be set beforehand by using Client Tool. If the shared folder in the computer (Client PC) on the network is selected for the destination, an image can be saved on the computer that is not connected to the machine via USB.

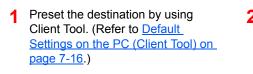

- 2 Scan the originals at the machine. (Refer to <u>Use Your Desired</u> <u>Destination on page 5-33.)</u>
- 3 An image is saved in the folder set by Client Tool.

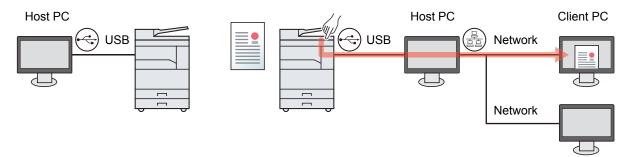


### Scan the Image by Selecting the Destination (Quick Scan)

Select the scan method and destination for each job by using Client Tool.

Perform a scan by operating the computer (Host PC) connected to the machine via USB. If the shared folder in the computer (Client PC) on the network is selected for the destination, an image can be saved on the computer that is not connected to the machine via USB.

Perform a scan by using Client Tool. (Refer to <u>Scan the Image by Selecting the</u> <u>Destination (Quick Scan) on page 5-34)</u> 2 An image is saved in the folder set by Client Tool.

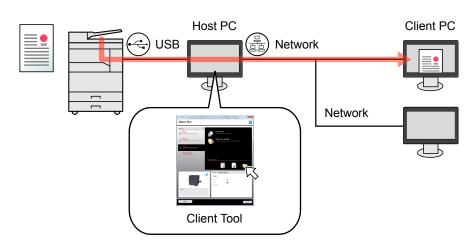

With Quick Scan, the following 3 types of scan are possible.

- Scan to PDF: Saves the scanned image in PDF format.
- Scan to Email: Attaches the scanned image to a new E-mail message.
- Scan to Folder: Saves the scanned image to a specified folder.

### Scanning using TWAIN


Make the image processing application read the scanned image. This function is available only for the computer connected via USB. (Refer to <u>Scanning using TWAIN on page 5-35</u>.)

# **Scan the Image to the Specified Destination**

It is easy to scan from the operation panel on the machine. Before using this function, you need to preset the destination folder where to save scanned image and image quality using Client Tool. Refer to <u>Default Settings on the PC (Client Tool) on page 7-16</u>.

### **Use the Preset Scan Destination**

Save the scanned image in the preset scan destination. My Documents is set for the destination. Scanning can be performed without preparing the destination.

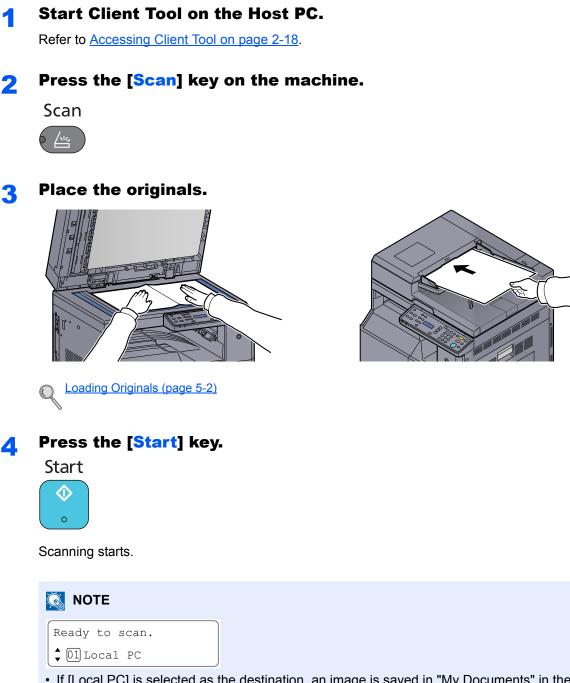

- If [Local PC] is selected as the destination, an image is saved in "My Documents" in the computer (Host PC) connected to the machine via USB.
   Windows Vista/Windows 7/Windows 8: C:\Users\<user>\My Documents
   Windows XP: C:\Document and Settings\<user>\My Documents
- When the scan ends, the folder in which an image is saved opens on the Host PC.

### **Use Your Desired Destination**

If there are settings that you change from "My Documents" in the computer (Host PC) connected to the machine via USB, set the destination by using Client Tool. You can simply select the destination number as needed to recall those functions.

Ten destinations including the default [Local PC] can be registered. Refer to <u>Default Settings on the PC (Client Tool) on</u> page 7-16.

# Start Client Tool on the Host PC. Refer to Accessing Client Tool on page 2-18. Press the [Scan] key on the machine. Scan Scan Place the originals. Place the originals. Control of the product of the



### Select the destination number.

Press the [▲] or [▼] key to select a destination number (01 to 10) to recall, and press the [OK] key.



### 🔊 NOTE

The name set by using Client Tool appears. [------] appears for the destination for which no name is set.



### Press the [Start] key.



Scanning starts.

When the scan ends, the folder in which an image is saved opens on the Host PC.

# Scan the Image by Selecting the Destination (Quick Scan)


Execute scanning from Client Tool.

You need to configure the settings of Quick Scan and TWAIN using Client Tool. Refer to <u>Default Settings on the PC</u> (Client Tool) on page 7-16.

Client Tool needs to be operated on the computer (Host PC) connected to the machine via USB.


### Place the originals on the machine.



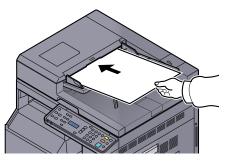

### **2** Execute scanning on the Host PC.

- 1 Start Client Tool as explained in <u>Accessing Client Tool on page 2-18</u>.
- 2 Click [Scan to PDF], [Scan to Email] or [Scan to Folder] icon on the [Scan] tab.

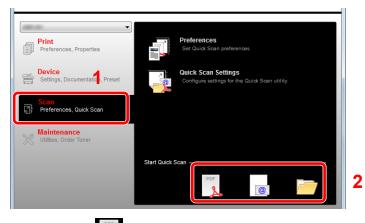

Scan to PDF

Scanning starts. When scanning finishes, the [Save PDF File As] dialog appears. Specify the PDF file name and the folder in which the image will be saved.

Scan to Email

•

Scanning starts. When scanning finishes, the mailer starts and the scanned image is attached. Enter the address, subject and message, and then send.

 Scan to Folder The [Browse for Folder] dialog appears. Specify the folder in which the image will be saved, and click [OK]. Scanning starts. 1


### **Scanning using TWAIN**

This section explains how to scan an original using TWAIN.

The procedure for scanning using the TWAIN driver is explained as an example. The WIA driver is used in the same way.

# Place the originals.

Loading Originals (page 5-2)

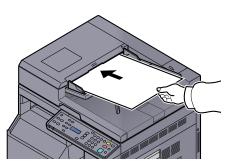

### **2** Display the screen.

C


- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the [TWAIN] dialog box.

### NOTE

For selecting the machine, see the Operation Guide or Help for each application software.

### **3** Configure the scan settings.

Select scanning settings in the TWAIN dialog box that opens.

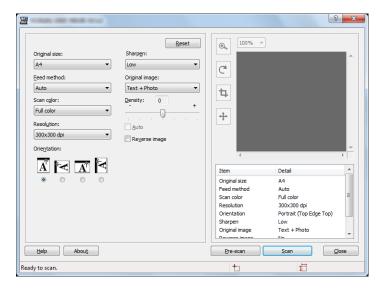

Configure the scan settings as needed. For details, refer to Help.

### **4** Scan the originals.

Click the [Scan] button. The document data is scanned.

# **Canceling Jobs**

You can cancel jobs by pressing the [Stop] key.



# 6 Checking the Status

This chapter explains the following topics:

Checking Job Status	6-2
Checking Job History	
Pause and Resumption of Jobs	
Canceling the Jobs in Printing/Waiting	6-8
Checking Device Status	
Checking the Remaining Amount of Toner and Paper	3-10
Checking from Client Tool	

# **Checking Job Status**

Check the status of jobs being processed or waiting to be printed.

### **Available Status Screens**

You can check the status of jobs being processed or waiting on the message display. The following job statuses are available.

Status Display	Job status to be displayed	
Print Job Status	• Сору	
	Printer	
	Printing from Print Box	
	Job Report/List	

### **Displaying Status Screens**

### **1** Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.


Status/Sys. Menu	OK	4	
🗘 Status		' I	

3 Press the [▲] or [▼] key to select [Print Job Status], and press the [OK] key.



### 2 Select the job you want to check.

1 Press the [▲] or [▼] key to select the job you want to check, and press the [OK] key.

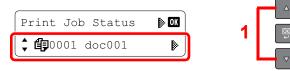

2 Press the [▲] or [▼] key to select [Detail], and press the [OK] key.



### **3** Check the status.

Press the  $[\blacktriangle]$  or  $[\lor]$  key to select the item you want to check. Then, press the [OK] key to show the information on the item.



To check other items, press the [Back] key to return to the previous screen.

Item	Description		
Status	Status of job		
	[Processing]: The status before starting to print.		
	[Pause]: Pausing print job or error		
	[Canceling]: Canceling the job		
Job Name	_		
Job Type	[Copy]: Copy job		
	[Printer]: Printer job		
	[Report]: Report/List		
Page and Copy	Number of pages printed		
	Number of copies printed / Total number of copies to be printed		
	(Press the [▲] or [▼] key to switch the screens.)		
Original Pages	Number of original pages		

# **Checking Job History**

Check the history of completed jobs.

### **Available Job History Screens**

The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	<ul> <li>Copy</li> <li>Printer</li> <li>Printing from Print Box</li> <li>Job Report/List</li> </ul>
Send Job Log	Scan (only for TWAIN)

### **Displaying Job History Screen**

### 1 Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

Status/Sys. Menu	OK		2
🗘 Status		Ψ Ψ	4

3 Press the [▲] or [▼] key to select [Print Job Log] or [Send Job Log], and press the [OK] key.



### 2 Select the job you want to check.

Press the [▲] or [▼] key to select the job you want to check, and press the [OK] key.



### **3** Check the job history.

Press the  $[\blacktriangle]$  or  $[\lor]$  key to select the item you want to check. Then, press the [OK] key to show the information on the item.



To check other items, press the [Back] key to return to the previous screen.

### **Print Job Log**

Item	Description		
Result	Result of job		
	[OK]: The job has been completed.		
	[Error]: An error has occurred.		
	[Cancel]: The job has been canceled.		
Job Name	_		
Job Type	[Copy]: Copy job		
	[Printer]: Printer job		
	[Report]: Report/List		
Page and Copy	Number of pages printed		
	Number of copies printed / Total number of copies to be printed		
	(Press the [▲] or [▼] key to switch the screens.)		
Original Pages	Number of original pages		

### Send Job Log

Item	Description		
Result	Result of job		
	[OK]: The job has been completed.		
	[Error]: An error has occurred.		
	[Cancel]: The job has been canceled.		
Job Name	_		
Job Type	[Application] is displayed.		
Original Pages	Number of original pages		
Color/B & W	Color mode of scan data		
	[Full Color]		
	[Black & White]		
	[Grayscale]		
Destination	[] is displayed.		

### 

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

# **Pause and Resumption of Jobs**

Pause/resume all printing jobs in printing/waiting.



1 Press the [Status/System Menu/Counter] key.

Status/ System Menu/ Counter

2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

Status/Sys. Menu	OK	_ <b>₁</b> [	
🔹 Status		<u>'</u> [	

3 Press the [▲] or [▼] key to select [Print Job Status], and press the [OK] key.

Status	OK	1	2
Print Job	Status	) '	-

### 2 Select [Pause print jobs].

Press the [▲] or [▼] key to select [Pause print jobs], and press the [OK] key. Printing is paused.



When resuming the printing of jobs that have been paused, press the  $[\Lambda]$  or  $[\nabla]$  key to select [Resume print jobs], and press the [OK] key.

### **NOTE**

If the [Back] key or other function key, such as the [Copy] key, is pressed during Pause, [Resume paused job] appears. If [Yes] is selected and then the [OK] key is pressed, the job is resumed and the following screen appears. If [No] is selected and then the [OK] key is pressed, the following screen appears while the job is paused.

# **Canceling the Jobs in Printing/Waiting**

Cancel the printing jobs in printing/waiting.

1

1 Press the [Status/System Menu/Counter] key.



**Display the screen.** 

2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

Status/Sys. Menu	OK	_ <b>₁</b> [	
↓ Status		'L	

3 Press the [▲] or [▼] key to select [Print Job Status], and press the [OK] key.

Status	OK	۱ſ	
Print Job Status		Ľ	

### **2** Cancel a job.

1 Press the [▲] or [▼] key to select the job to be canceled, and press the [OK] key.



2 Press the [▲] or [▼] key to select [Cancel Job], and press the [OK] key.

doc001	OK
🗘 Cancel Job	



2

3 Press the [▲] or [▼] key to select [Yes] in confirmation screen, and press the [OK] key.

Cancel	OK	4	
¥es		'	

# **Checking Device Status**

Configure the devices or check their status.

1

### Display the screen.

1 Press the [Status/System Menu/Counter] key.

Status/ System Menu/ Counter

2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.

Status/Sys. Menu	OK	_ ₁ []	
🗘 Status		'L	

### **2** Check the status.

Press the  $[\blacktriangle]$  or  $[\lor]$  key to select [Scanner] or [Printer]. Then, press the [OK] key to show the status of the selected device.



### Scanner

Item	Description
Ready.	The device is ready.
Pausing	The device is being paused.
Scanning	The device is scanning.
Please wait.	The device is initializing.

### Printer

Item	Description
Ready.	The device is ready.
Pausing	The device is being paused.
Printing	The device is printing.
Please wait.	The device is initializing.
Processing	The device is processing print job.

# **Checking the Remaining Amount of Toner** and Paper

Check the remaining amount of toner and paper on the message display.

### Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Status], and press the [OK] key.



### **2** Check the status.

Press the [▲] or [▼] key to select [Toner Status] or [Paper Status], and press the [OK] key




### **Toner Status**

You can check the remaining amount of toner level from 100 to 0% (10% increments).

### **Paper Status**

Press the [▲] or [▼] key to select a paper source from [Cassette 1 (to 4)] or [MP Tray]. Then, press the [OK] key to show the status of the selected source.

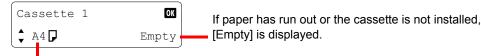


The paper size and media type specified for the selected source are displayed. (Press the  $[\land]$  or  $[\lor]$  key to switch the screens.)

### 🚫 ΝΟΤΕ

- If the paper size is unclear, [-----] appears.
- [Cassette 2 (to 4)] are displayed when the optional paper feeder is installed.

# **Checking from Client Tool**

You can check the current status of the machine from the Client Tool.

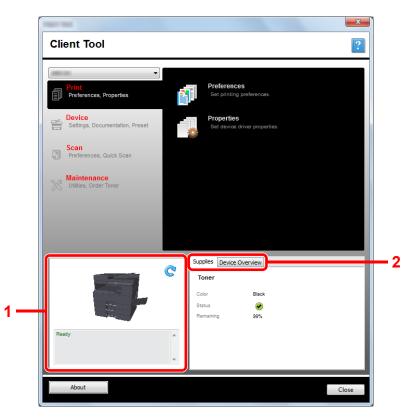

No.	Item	Description
1	Machine status	Show a 3D image of the selected machine and its current status. Click (Refresh) to refresh the machine status.
2	Supplies	Show the toner status.
	Device Overview	Show the machine settings.

# 7 System Menu and Client Tool


This chapter explains the following topics:

Default Settings on the Machine (System Menu)	7-2
System Menu Settings	
Report	
System	7-5
Admin/Accounting	
Common Settings	
Сору	
Printer	7-15
Adjust/Maint. (Adjustment/Maintenance)	7-15
Default Settings on the PC (Client Tool)	7-16
Operation Method	7-16
Screen Overview	7-17
Configuring the Administrative Settings	7-19
Scan Destination Settings	
Quick Scan/TWAIN Settings	
Print Box Settings	

# **Default Settings on the Machine (System** Menu)

Configure settings related to overall machine operation.

Press the [Status/System Menu/Counter] key to show the settings on the message display. Then, select from the settings displayed.

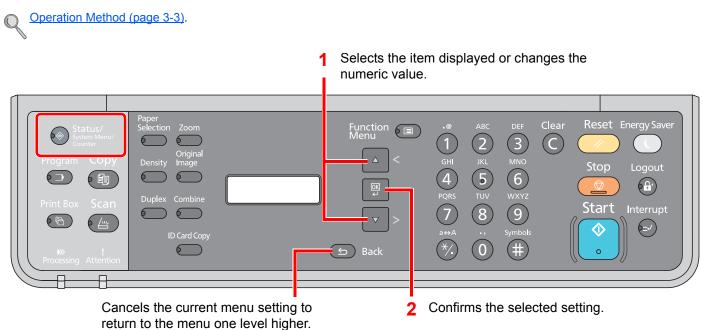

### 

- If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and</u> <u>Password on page 2-20</u>.
  - The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

- \*1 Upper case and lower case letters are distinguished (case sensitive).
- If settings are changed, the changes are immediately reflected when the [Reset] key is pressed.

Refer to System Menu Settings on the following page and configure as needed.

# **System Menu Settings**

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and press the setting item. For details on each function, see the table below.

	Item	Description	Reference Page
Statu	S	Check job statuses and histories, machine statuses, and the remaining amount of paper and toner. Pausing or canceling of jobs can also be executed.	<u>page 6-1</u>
Repo	rt	Print reports to check the machine settings, status, and history.	page 7-4
	Report Print	Print reports.	page 7-4
Coun	ter	Check the number of sheets printed and scanned.	page 2-26
Syste	m	Configure machine system settings.	page 7-5
	I/F Block Set.	Protect the machine by blocking the USB interface.	page 7-5
Admi	n/Accounting	Configure settings related to machine management. For details on Administrator Setting, refer to <u>Administrator Setting on page 2-20</u> , and for details on job accounting, refer to <u>Enabling Job Accounting on page 8-3</u> .	_
Comr	non Settings	Configure overall machine operation.	page 7-5
	Language	Select the language displayed on the message display.	page 7-5
	Default Screen	Select the screen appearing right after start-up (default screen).	<u>page 7-6</u>
	Sound	Set options for buzzer sound during the machine operations.	<u>page 7-6</u>
	Display Bright.	Set the brightness of the message display.	<u>page 7-6</u>
	Quiet Mode	Make after-printing process run more quietly. Select this mode when the running noise is uncomfortable.	<u>page 7-6</u>
	Orig./Paper Set.	Configure settings for originals and paper.	page 7-7
	Preset Limit	Restrict the number of copies that can be made at one time.	page 7-11
	Measurement	Select inch or metric for the unit for paper dimensions.	page 7-11
	Error Handling	Select whether to cancel or continue the job when error has occurred.	page 7-11
	Timer Settings	Configure settings related to the time.	page 7-12
	Function Default	Defaults are the values automatically set after the warm-up is completed or the [Reset] key is pressed.	page 7-13
		Set the defaults for available settings. Setting the frequently-used values as defaults makes subsequent jobs easier.	
Сору		Configure settings for copying functions.	page 7-14
Printer		When printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.	<u>page 7-15</u>
Adjus	st/Maint.	Adjust printing quality and conduct machine maintenance.	page 7-15
			1

# Report

Print reports to check the machine settings and status.

### **Report Print**



If the system menu is operated without a login (account ID is not entered) while job accounting is enabled, the account ID must be entered before the report can be printed.

Item		Description
Report Print	Menu Map	Prints Menu Map to check the settings of the machine.
	Status Page	Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed.
	Service Status	Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.

# System

Configure machine system settings.

### I/F Block Set. (Interface Block Setting)



Protect the machine by blocking the USB interface.

ltem		Description
I/F Block Set.	USB Device	This locks and protects the USB interface connector (USB Device). Value: Unblock, Block

**IMPORTANT** 

After changing the setting, turn the machine OFF and then ON.

# **Admin/Accounting**



Configure settings related to machine management.

Administrator Setting (page 2-20) Job Accounting (page 8-1) Unknown ID Job (page 8-11)

### **Common Settings**

Configure overall machine operation.

### Language



### **Default Screen**



Default Screen	Select the screen appearing right after start-up (default screen).	
	Value: Copy, Scan, Print Box, Program	

### Sound

Status/ System Menu/ Counter	Common Settings	Sound
------------------------------------	-----------------	-------


	lte	em	Description
Sound	Buzzer		Set options for buzzer sound during the machine operations.
		Key Confirmation	Emit a sound when a key is pressed on the operation panel. Value: Off, On
		Job Finish	Emit a sound when a print job is normally completed. Value: Off, On
		Ready	Emit a sound when the warm-up is completed. Value: Off, On
		Warning	Emit a sound when errors occur. Value: Off, On

### **Display Bright. (Display Brightness)**



Value: Lighter +3, Lighter +2, Lighter +1, Normal 0, Darker -1, Darker -2, Darker -3

# Quiet Mode

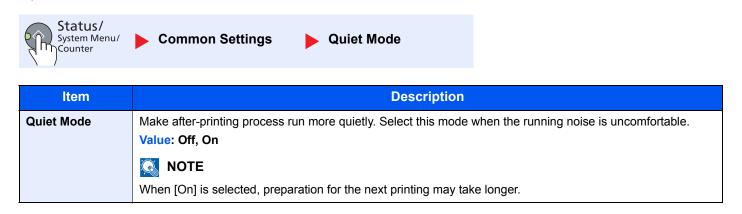

### **Orig./Paper Set. (Original/Paper Settings)**



<sup>u/</sup> **Common Settings** 

Orig./Paper Set.

	ltem	Description			
Orig./	Custom Orig.Size	Set up frequently-used custom original size.			
Paper Set.		To register a custom original size, enter the de displayed on the screen to select original size			
		Value	X: Width / Y: Length		
		Metric	Vertical Horizontal		
		X: 50 to 432 mm (in 1 mm increments) Y: 50 to 297 mm (in 1 mm increments)			
		Inch	Y		
		X: 2.00 to 17.00" (in 0.01" increments) Y: 2.00 to 11.69" (in 0.01" increments)			
	Custom PaperSize	Set up frequently-used custom paper size.			
		To register a custom paper size, enter the des displayed on the screen to select the paper size			
		Value	X: Width / Y: Length		
		Metric	Vertical Horizontal		
		X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments)			
		Inch	Y		
		X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)			
	Cassette 1 (to 4) Set.	Select the paper size and media type for cass paper size and media type, refer to <u>Cassette 1</u> <u>page 7-9</u> .			
	MP Tray Set.	Select the paper size and media type for the r to select the paper size and media type, refer page 7-9.			
	Media Type Set.	Set weight for each media type.			
		For Custom 1-8, settings for duplex printing a	nd media type name can be changed.		
		For details on setting value, refer to <u>Media Ty</u> <u>10</u> .	<u>pe Set. (Media Type Settings) on page 7-</u>		
	Auto Detect Orig.	Select whether to automatically detect origina	Is of special or non-standard size.		
		For Auto Detect Orig., this change is available	e for some countries.		
	A6/Hagaki	As A6 and Hagaki are similar in size, select ei Value: A6, Hagaki	ither one of them for automatic detection.		
	Folio	Select whether to enable automatic detection Value: Off, On	of Folio.		
	11 × 15"	Select whether to enable automatic detection Value: Off, On	of 11 × 15" size.		

	Item	Description
Orig./ Paper Set.	Media for Auto	<ul> <li>Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size.</li> <li>Value: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1-8</li> </ul>
	Def. PaperSource	Select paper cassette for default setting.         Value: Cassette 1 to 4, MP Tray         Image: NOTE         [Cassette 2], [Cassette 3] and [Cassette 4] are displayed when the optional paper feeder is installed.
	SpcialPaper Act.	When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adj. PrintDirect] to adjust the print direction. When paper orientation is not important, select [Speed Priority].         If [Adj. PrintDirect] is selected, load paper according to the steps below.         Example: copying on Letterhead
		Original Paper Finishing Cassette MP Tray
		ABC     ABC     ABC     Image: Cassette     Image: Cassette     Image: Cassette     MP Tray
		Value: Adj. PrintDirect, Speed Priority

### Cassette 1 (to 4) Set. (Cassette 1 (to 4) Settings)



To fix the type of paper to be used in cassettes 1 or the optional paper feeders (cassettes 2 to 4), specify the paper size and media type.

ltem			Description
Cassette 1 (to 4) Set.			Paper size is automatically detected and selected. Value: Metric, inch
		Standard Size	Available options are as follows: Value: A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216 × 340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R, 16K
			Select the media type. Value: Plain (52 to 105 g/m <sup>2</sup> ), Rough, Vellum (52 to 105 g/m <sup>2</sup> ), Recycled, Preprinted <sup>*2</sup> , Bond, Color, Prepunched <sup>*2</sup> , Letterhead <sup>*2</sup> , Thick (106 to 128 g/m <sup>2</sup> ), High Quality, Custom 1-8

\*1 To change to a media type other than [Plain], refer to <u>Media Type Set. on page 7-7</u>. When the paper weight settings shown below are selected, the media indicated for each setting cannot be selected.

Plain, Preprinted, Recycled, Vellum, Rough, Letterhead, Color, Preprinted, High Quality: [Heavy 1], [Heavy 2] or [Extra Heavy] Bond, Thick: [Heavy 2] or [Extra Heavy] Custom 1 to 8: [Extra Heavy]

\*2 To print on preprinted or prepunched paper or on letterhead, refer to <u>SpcialPaper Act. on page 7-8</u>.

### MP Tray Set. (MP Tray Settings)

.

Status/ System Menu/ Counter Orig./Paper	Set. 🕨 MP Tray Set.
---	---------------------

To fix the type of paper to be used in the multi purpose tray, specify the paper size.

Item		Description			
MP Tray Set.	MP Tray Size Standard Size		Available options are as follows: Value: A3, A4-R, A4, A5-R, A6-R, B4, B5 Ledger, Letter-R, Letter, Legal, Statemer 16K, ISO B5, Envelope #10, Envelope #5 Envelope DL, Envelope C5, Envelope C Youkei 2, Custom <sup>*1</sup>	nt-R, Executive, O 9, Envelope #6, Ei	ficio II, 8K, 16K-R, velope Monarch,
		Size Entry	Enter the size not included in the standard Value Metric X: 148 to 432 mm (in 1 mm increments) Y: 98 to 297 mm (in 1 mm increments) Inch X: 5.83 to 17.00" (in 0.01" increments) Y: 3.86 to 11.69" (in 0.01" increments)	X: Width / Y: Leng Vertical	th Horizontal
	MP Tray Type <sup>*2</sup>	1	Select the media type. Value: Plain (52 to 105 g/m <sup>2</sup> ), Transparer Labels, Recycled, Preprinted <sup>*3</sup> , Bond, C Letterhead <sup>*3</sup> , Envelope, Thick (106 to 16	ardstock, Color, I	Prepunched <sup>*3</sup> ,

\*1 For instructions on how to specify the custom paper size, refer to Custom PaperSize on page 7-7.

\*2 To change to a media type other than [Plain], refer to <u>Media Type Set. on page 7-7</u>.

\*3 To print on preprinted or prepunched paper or on letterhead, refer to SpcialPaper Act. on page 7-8.

### Media Type Set. (Media Type Settings)



Common Settings



Media Type Set.

Paper Weight	Light	Normal 1	Normal 2	Normal 3	Heavy 1	Heavy 2	Extra Heavy
Weight (g/m²), Media Type	52 g/m² to 59 g/m²	60 g/m² to 74 g/m²	75 g/m² to 90 g/m²	91 g/m² to 105 g/m²	106 g/m² to 128 g/m²	129 g/m² to 163 g/m²	Transparencies
Plain	Y	Y	Y (default)	Y	N	Ν	N
Transparency	Ν	N	N	N	Y <sup>*1</sup>	Y*1	Y <sup>*1</sup> (default)
Rough	Y	Y	Y	Y (default)	Y*1	Y*1	N
Vellum	Y (default)	Y	Y	Y	N	N	N
Labels	Y*1	Y*1	Y*1	Y*1	Y <sup>*1</sup> (default)	Y*1	Y*1
Recycled	Y	Y	Y (default)	Y	N	N	N
Preprinted	Y	Y	Y (default)	Y	N	N	N
Bond	Y	Y	Y	Y (default)	Y	Y*1	N
Cardstock	N	N	N	N	Y*1	Y <sup>*1</sup> (default)	Y*1
Color	Y	Y	Y (default)	Y	N	N	N
Prepunched	Y	Y	Y (default)	Y	N	N	N
Letterhead	Y	Y	Y (default)	Y	N	N	N
Envelope	N	N	N	N	Y*1	Y <sup>*1</sup> (default)	Y*1
Thick	N	N	N	N	Y	Y <sup>*1</sup> (default)	Y*1
High Quality	Y	Y	Y (default)	Y	N	N	N
Custom 1 (to 8)	Y	Y	Y (default)	Y	Y	Y	Y*1

The following settings can be selected. Y (default): Default setting, Y: Available, N: Not available

\*1 The media type cannot be selected for the cassettes.

For Custom 1-8, settings for duplex printing and media type name can be changed.


lt	em	Description
Custom 1 (to 8)	Duplex	Select the setting for duplex. Value Prohibit: Duplex printing not allowed. Permit: Duplex printing allowed.
	Name	Change names for Custom 1-8. Names should be not more than 16 characters. Selecting media type at multi purpose tray, the name after change will be displayed.

### **Preset Limit**



Preset Limit	Restrict the number of copies that can be made at one time.
	Value: 1 to 999 copies

### Measurement

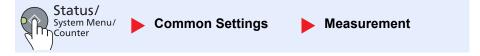

ltem	Description
Measurement	Select inch or metric for the unit for paper dimensions.
	Value: mm, inch

### **Error Handling**



ltem		Description
Error Handling	DuplexPaperError	Set what to do when duplex printing is not possible for the selected paper sizes and media types. Value 1-sided: Printed in 1-sided Display Error: Message to cancel printing is displayed.
	PaperMismatchErr	Set what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multi-purpose tray. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.

### **Timer Settings**







Configure settings related to the time.

Item		Description
Timer Settings	Err. Clear Timer	If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors. Value: 5 to 495 seconds (in 5 second increments) NOTE This function is displayed when [Auto Err. Clear] is set to [On].
	Sleep Timer	Set amount of time before entering Sleep. Value For Europe: 1 to 60 minutes (1 minute increments) Except for Europe: 1 to 240 minutes (1 minute increments)
		<b>NOTE</b> Refer to <u>Sleep and Sleep Timer on page 2-22</u> for Sleep.
	PanelReset Timer	If you select [On] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset. Value: 5 to 495 seconds (in 5 second increments) NOTE
		This function is displayed when [Auto Panel Reset] is set to [On].
	Interrupt Clear	Set the period after which the machine reverts to Normal mode when it has been set to Interrupt Copy mode and then left unused. Value: 5 to 495 seconds (in 5 second increments)
	Power Off Rule	<ul> <li>Select whether to turn off the power automatically for the following function:</li> <li>USB Cable</li> <li>Value: Off, On</li> </ul>
	Power Off Timer	Select whether to turn off the power automatically after a period of inactivity. Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week
	Auto Err. Clear	If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses. For details, refer to <u>Responding to Messages on page 9-11</u> . <b>Value: Off, On</b>
	Auto Panel Reset	If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not. Value: Off, On
		<b>NOTE</b> The time allowed to elapse before the panel is reset is set with the <u>PanelReset Timer on</u> page 7-12.

### **Function Default**







Set the defaults for the following functions.

Item		Description	
Function Default	Original Image	Set the default original document type. Value: Text+Photo, Photo, Text	
	Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set. Value: 100%, Auto	
	Collate/Offset	Set the defaults for Collate/Offset. Value Off, Collate Only, Offset Each Page, Offset Each Set	
	Orig. Orientation	Set the original orientation defaults. Value: Top Edge on Top, Top Edge on Left	
	Border Erase	Set the default width to be erased as a border. Value Metric: 0 to 50 mm (in 1 mm increments) Inch: 0 to 2" (in 0.01" increments)	
		<b>NOTE</b> To specify border erase widths around original, set the value in [Border]. To specify border erase widths in the middle of original, set the value in [Gutter].	
	Margin	Set the default margin.         Value         Metric         Left/Right:       -18 to 18 mm (in 1 mm increments)         Top/Bottom:       -18 to 18 mm (in 1 mm increments)         Inch         Left/Right:       -0.75 to 0.75" (in 0.01" increments)         Top/Bottom:       -0.75 to 0.75" (in 0.01" increments)	
	Backgrnd Density	Set the default Background Density (Copy). Value: Off, On	
	EcoPrint	Select the EcoPrint default. Value: Off, On	
	Auto Rotation	Select the default Auto Rotation setting. Value: Off, On	
	File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Job No. can also be set. Value File Name Entry: Up to 32 characters can be entered. Additional Info: None, Job No.	
	Continuous Scan	Set the continuous scan defaults. Value: Off, On	

Item		Description	
Function Default	Detail Settings	Set the defaults for the following detail settings:	
	2 in 1 Layout	Set the default for the 2-in-1 layout of Combine copies. Value: L to R/T to B, R to L	
	4 in 1 Layout	Set the default for the 4-in-1 layout of Combine copies. Value: Right then Down, Down then Right, Left then Down, Down then Left	
	Border Line	Set the default for the border line of Combine copies. Value: None, Solid Line, Dotted Line, Positioning Mark	
	Orig. Binding <sup>*1</sup>	Set the default for the binding orientation of two-sided originals to produce two-sided copies. Value: Left/Right, Top	
	BookOrg. Binding	Set the default for the binding orientation of open book originals to produce two-sided copies. Value: Left, Right	
	Finish. Binding	Set the default for the binding orientation of finished two-sided copies. Value: Left/Right, Top	

\*1 Displayed only when the optional document processor is installed.

# Сору



Configure settings for copying functions.

Item		Description	
Сору	Paper Selection	Set the default paper selection. Value: Auto, Def. PaperSource	
	AutoPaperSelect.	If [Auto] is selected for Paper Selection, set the paper size selection method when the zoom changes.	
		Value	
		MostSuitableSize: Selects paper size based on the current zoom and the size of the original.	
		Same as OrigSize: Selects paper that matches the size of the original, regardless the zoom.	
	Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed.Value: Off, On	

# **Printer**



When printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

ltem		Description
Printer	FormFeed TimeOut	Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints the document. The options are between 5 and 495 seconds. Value: 5 to 495 seconds

# **Adjust/Maint. (Adjustment/Maintenance)**



Adjust printing quality and conduct machine maintenance.

ltem		m	Description
Adjust/	Density Adj.		Adjust density.
Maint.		Сору	Adjust copy density. Adjustment can be made in 7 levels. Value: Darker +3, Darker +2, Darker +1, Normal 0, Lighter -1, Lighter -2, Lighter -3
		Scan	Adjust scan density. Adjustment can be made in 7 levels. Value: Darker +3, Darker +2, Darker +1, Normal 0, Lighter -1, Lighter -2, Lighter -3
	Back	grnd Density	Darkens or lightens overall background density adjustment.
		Сору	Darkens or lightens overall background density adjustment during copying. Adjustment can be made in 7 levels.
			Value: Darker +3, Darker +2, Darker +1, Normal 0, Lighter -1, Lighter -2, Lighter -3
		Scan	Darkens or lightens overall background density when scanning images. Adjustment can be made in 7 levels.
			Value: Darker +3, Darker +2, Darker +1, Normal 0, Lighter -1, Lighter -2, Lighter -3
	Correct. Bk Line		Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.
			Value
			Off: No correction performed.
			On: Correction performed. The reproduction of fine lines on the original may become lighter than when using [Off].
	Service Settings		—
		Drum Refresh	Remove white lines from the image.
			Press the [OK] key and then select [Yes] to perform Drum Refresh.

# **Default Settings on the PC (Client Tool)**

Various machine settings can be configured from a computer using Client Tool. Install Client Tool from the provided Product Library disc.


### 阈 ΝΟΤΕ

- For the detailed functions of Client Tool, refer to Client Tool User Guide.
- Client Tool needs to be operated on the computer connected to the machine via USB.

# **Operation Method**

Configure the settings on the Client Tool as follows:


- 1 Access the Client Tool. For more information, refer to <u>Accessing Client Tool on page 2-18</u>.
- 2 Select the desired tab.

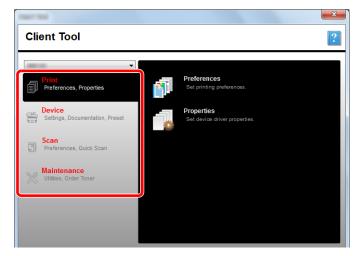

**3** Configure the settings.

### **Screen Overview**

The screen overview of the Client Tool is as follows.

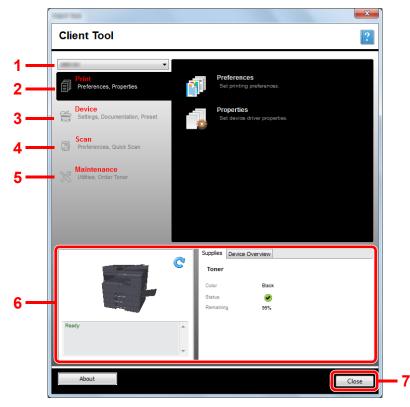

No.	Item		Description	Reference Page
1	Machine list		The list at the top of Client Tool screen includes all of the supported machines installed on your computer. You can select a machine from this list to view its properties and select available options, such as configuration and maintenance.	_
2	Print		Access to printing preferences and machine driver properties.	_
		Preferences	Open the "Printing Preferences" screen for the selected machine.	_
		Properties	Open the "Properties" screen for the selected machine.	_
3	Device		Configure Status Monitor, Scan Destination, and Print Box settings.	_
		Configuration	Open the "Configuration" screen for the selected machine.	page 7-19
		Scan Destination	Configure the Scan Destination settings.	page 7-20
		Print Box Destination	Configure the Print Box settings.	<u>page 7-26</u>

No.	Item	Description	Reference Page
4	Scan	Configure TWAIN and Quick Scan settings. Scan to PDF, Scan to Email and Scan to Folder can also be executed from this tab.	_
	Preferences	Open "TWAIN Driver" screen. Set the default value for the TWAIN scan.	page 7-23
	Quick Scan Settings	Open "Quick Scan Settings" screen.	<u>page 7-23</u>
	Scan to PDF	This is one of the Quick Scan function. Performing this function saves the scanned image in PDF format.	page 5-34
	Scan to Email	This is one of the Quick Scan function. Performing this function attaches the scanned image to a new E-mail message.	page 5-34
	Scan to Folder	This is one of the Quick Scan function. Performing this function saves the scanned image to a specified folder.	page 5-34
5	Maintenance	Order replacement toner.	
	Order Toner	<ul> <li>You can order replacement toner by e-mail or on the web. Click the [Order Toner] icon for these options:</li> <li>Send e-mail Use the default e-mail address or type another e-mail address and then click [OK] to open your default e-mail program.</li> <li>Open Web page Use the default web address or type another web address and then click [OK] to open the web page in your default web browser.</li> </ul>	
6	Status Monitor	You can check the current status of the machine.	<u>page 6-11</u>
7	Close	Exit from Client Tool.	

# **Configuring the Administrative Settings**

Configure the administrative settings on [Configuration] of the [Device] tab.

Configure screen has the followings tabs.

- [Device Defaults] tab: Select inches or millimeters as the unit of measurement for page sizes, watermark, poster, and gutter settings in the printer driver.
- [Status Monitor] tab: Select toner level alert and event notification settings for the Status Monitor. The Status Monitor displays device status messages.

Item	Description
Set toner level alert	Select to create an alert when the toner starts running low, and then select a percentage between 0 and 100. If the toner level goes below this percentage, an alert icon is displayed on the [Supplies] tab at the bottom of Client Tool screen.
Enable event notification	Select to activate the notification feature for selected machine events. When selected, notification options are available.
Enable pop-up notification	When selected, a pop-up message appears in the lower right corner of the screen for each selected event as it occurs.
Events list	Select one or more events for the notification. To select all events, select [Events].
Sound file	With one or more events selected, select to enable sound notification. Type the location of a sound file (.WAV), or click [Browse] to find a sound file located on your computer. You can press the arrow button to hear the selected sound.
Use Text to Speech	With one or more events selected, select and type your preferred text. The Microsoft Text to Speech utility reads the text and plays it in a spoken voice. You can press the arrow button to hear the selected text.

# **Scan Destination Settings**

Configure the Scan Destination settings on [Scan Destination] of the [Device] tab.

### **IMPORTANT**

To reflect settings in the machine, the [Reset] key on the operation panel of the machine needs to be pressed.

### NOTE

Scan, Print Box, and device monitoring will be disabled while the [Scan] window is open.

Item	Description	
Destination number	Select the destination number (1 to 10) to be registered. When a destination number is selected, the settings registered in that number appear in the right-hand screen.	
Summary	Shows a list of the settings of the selected destination.	
Display name	Set a name for the destination. Up to 16 characters can be entered. This name is displayed when you select a destination on the machine operation panel.	
Original size	Specify the size of originals being scanned. Value: Auto, A3, A4, A5, A6, B4, B5 (JIS), B6, Folio, 216 × 340 mm, Ledger, Letter, Legal, Statement, 11 × 15", Oficio II, 8K, 16K, Hagaki, Oufuku Hagaki, Custom	
	NOTE           Refer to Custom Orig.Size on page 7-7 for selecting [Custom].	
Original image	Select image quality suited to the type of original.         Value:         Image: Text + Photo         Photo         Text	
Duplex <sup>*1</sup>	Set duplex of original. Value: Off Binding left/right Binding top	
Original orientation	Select the orientation of the original document top edge to scan correct direction. Value: Landscape, Top edge left Top edge top Portrait, Top edge left Top edge top	
Sharpen	Adjust the sharpness of the image. Value: None, Low, Medium, High, Descreen (Blurs the outlines and reduces the sharpness.)	
Scan color	Select the color mode setting. Value: Monochrome, Grayscale, Full color	
Density	Select the density.Value: Lighter (-3), Lighter (-2), Lighter (-1), Normal (0), Darker (+1), Darker (+2), Darker (+3)To automatically set the density depending on the density of originals, select the [Auto] checkbox. (This item can be set only if [Monochrome] is set for Scan color.)	

\*1 The optional document processor is required.

ltem	Description		
Resolution	Select fineness of scanning resolution. Value: 200×200 dpi 300×300 dpi 400×400 dpi 600×600 dpi 600×600 dpi E[400×400 dpi] and [600×600 dpi] can be set only if [Monochrome] is set for Scan color.		
Reverse image	When this is selected, the image color reverses.		
File name	Assign a document name to scanned images. When there are multiple pages, a three-digit incrementing number such as Scan_001, Scan_002 is appended to the end of the file name. Up to 16 characters can be entered.		
File format	Specify the image file format. Value: BMP, JPEG, PNG, TIFF, PDF, High-Compression PDF, CCITT Group 4, Image Mask, High-Compression PDF, JBIG2, Mask + Image Mask		
File format settings (The	e item displayed changes depending on the value specified for File format.)		
Quality	Set the image quality. Increasing the number results in higher quality and decreasing the number results in lower quality. Higher quality will make the stored files larger. Value: 1 to 100		
	NOTE		
	This setting is valid for PDF, TIFF, and JPEG file formats.		
	• Non-numeric characters cannot be entered. If entered number is beyond range, the max/min value will be restored.		
PDF/A-1	Set PDF/A-1 format type.		
	Value: Off, PDF/A-1a, PDF/A-1b		
High Compression PDF Quality	Set the quality level for High Compression PDF. Value: Standard, Compression Ratio Priority, Quality Priority		
File separation <sup>*1</sup>	When this is selected, scanned data is separated into files page by page.		

\*1 The optional document processor is required.


Item	Description
Destination folder	Specified folder where the scanned image will be saved. To select the folder, click [Browse] to open "Browse for Folder".
Reset	Reset the destination to default values.
Save	Save your settings.

# **Quick Scan/TWAIN Settings**

Configure the Quick Scan/TWAIN settings on [Preferences] or [Quick Scan Settings] of the [Scan] tab.

Item	Description
Preferences	Change the TWAIN scan settings. This setting is effective for Quick Scan only.
Quick Scan Settings	Change the settings for Scan to PDF, Scan to Email and Scan to Folder.

## **TWAIN Settings**

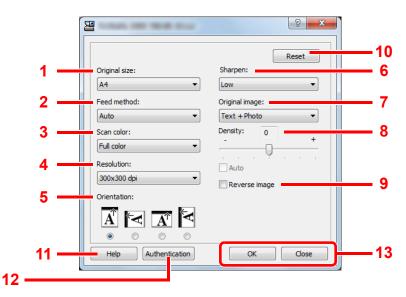


No.	ltem	Description
1	Original size	Specify the size of originals being scanned. Value: Auto, A3, A4, A5, A6, B4, B5 (JIS), B6, Folio, 216 × 340 mm, Ledger, Letter, Legal, Statement, 11 × 15", Oficio II, 8K, 16K, Hagaki, Oufukuhagaki, Custom NOTE
		Refer to <u>Custom Orig.Size on page 7-7</u> for selecting [Custom].
2	Feed method <sup>*1</sup>	Select the original feed method. Value: Auto, Document processor, Platen, 2-sided (Binding Top), 2-sided (Binding Left/Right)
3	Scan color	Select the color mode setting. Value: Monochrome, Grayscale, Full color
4	Resolution	Select fineness of scanning resolution.         Value: 200 × 200 dpi, 300 × 300 dpi, 400 × 400 dpi, 600 × 600 dpi         Image: NOTE         [400×400dpi] and [600×600dpi] can be set only if [Monochrome] is set for Scan color.
5	Orientation	Select the Orientation of the original document top edge to scan correct direction. Value: Portrait (Top Edge Top), Landscape (Top Edge Left), Landscape (Top Edge Top), Portrait (Top Edge Left)
6	Sharpen	Adjust the sharpness of the image. Value: None, Low, Medium, High, Descreen (Blurs the outlines and reduces the sharpness.)

\*1 The optional document processor is required.

No.	Item	Description
7	Original image	Select original image type. Value: Text, Photo, Text+Photo
8	Destiny	Select the density. Value: -3 (Lighter) to 3 (Darker) To automatically set the density depending on the density of originals, select the [Auto] checkbox. (This item can be set only if [Monochrome] is set for Scan color.)
9	Reverse image	When this is selected, the image color reverses.
10	Reset	Reset the settings to the previous settings.
11	Help	Displays the Help screen.
12	Authentication	Enter assigned account ID to manage the scan count accumulated of Quick Scan/TWAIN jobs by using job accounting.
13	OK/Close	Clicking [OK] exits the TWAIN Settings after applying the modified scan settings. Clicking [Close] exits the TWAIN Settings without applying the modified scan settings.

# **Quick Scan Settings**

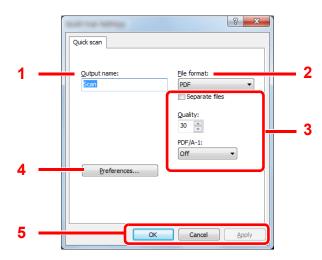

No.	Item	Description
1	Output name	Assign a document name to scanned images. When multiple images are saved in the same folder, a three-digit incrementing number such as Scan_001, Scan_002 is appended to the end of the file name. Up to 16 characters can be entered.
2	File format	Specify the image file format. Value: BMP, JPEG, PNG, TIFF, PDF, High-Compression PDF, CCITT Group 4, Image Mask, High-Compression PDF, JBIG2, Mask + Image Mask

No.	Item	Description
3	File format settings (The item displayed changes depending on the value specified for File format.)	
	Separate files	When this is selected, scanned data is separated into files page by page.
	Quality	Set the image quality. Increasing the number results in higher quality and decreasing the number results in lower quality. Higher quality will make the stored files larger. Value: 1 to 100
		NOTE
		This setting is valid for PDF, TIFF, and JPEG file formats.
		• Non-numeric characters cannot be entered. If entered number is beyond range, the max/min value will be restored.
	PDF/A-1	Set PDF/A-1 format type.
		Value: Off, PDF/A-1a, PDF/A-1b
	Quality Stage	Set the quality level for High Compression PDF.
		Value: Standard, Compression Ratio Priority, Quality Priority
4	Preferences	Displays the TWAIN settings screen. For detail, refer to TWAIN Settings on page 7-23.
5	OK/Cancel/Apply	Clicking [OK] exits the Quick Scan Settings after applying the modified scan settings. Clicking [Cancel] exits the Quick Scan Settings without applying the modified scan settings. Clicking [Apply] applies the modified scan settings without exiting the Quick Scan Settings.

# **Print Box Settings**

Configure the Print Box settings on [**Print Box Destination**] of the [**Device**] tab. When Client Tool is installed, Print Boxes 1 to 10 are automatically created.

#### **IMPORTANT**

- When sending a print job from the Client PC via a network, Box, Destination folder and PIN Code set by Client Tool need to be assigned to each Client PC.
- To reflect settings in the machine, the [Reset] key on the operation panel of the machine needs to be pressed.

### 

Scan, Print Box, and device monitoring will be disabled while the [Print Box] window is open.

Item	Description
Box number	Select the box number (1 to 10) to be registered. When a box number is selected, the settings registered in that number appear in the right-hand screen.
Summary	Shows a list of the settings of the selected box.
Name	Set a name for the Print Box. Up to 16 characters can be entered. This name is displayed when you select a Print Box on the machine operation panel.
	NOTE
	If a document is stored in the box for which no Box name is set, printing from the box is not available.
PIN Code	With a PIN code assigned to the Print Box, executing the print jobs in the Print Box from the machine requires entry of the PIN code, thereby restricting user access to the print jobs. Since third parties who do not know the PIN cannot print, security is enhanced. (Entering a password is not mandatory.) Select the checkbox to assign a PIN code to and enter a 4-digit numeric value.
Destination folder	Specify the path for the folder to be used as the Print Box. To select the folder, click [Browse] to open "Browse for Folder".
	WINDORTANT
	The folder in the computer other than the computer connected to the machine via USB (Host PC) cannot be used as the destination folder.
Reset	Reset the Print Box to default values.
Save	Save your settings.

# **8 Job Accounting**

#### This chapter explains the following topics:


Overview of Job Accounting	8-2
Enabling Job Accounting	8-3
Setting an Account	8-4
Adding an Account	8-4
Restricting the Use of the Machine	8-6
Editing an Account	8-7
Deleting an Account	8-8
Job Accounting when Sharing the Printer	8-9
Unknown ID Job	8-11
Configuring Job Accounting	
Default Setting	8-12
Counting the Number of Pages Printed	8-13
Account. Report (Accounting Report)	8-14
Using Job Accounting	
Login/Logout	
Printing When Sharing the Printer	8-15

# **Overview of Job Accounting**

Job accounting manages the copy/print/scan count accumulated by individual accounts by assigning an ID to each account.

- 1 Enable job accounting. (Refer to page 8-3.)
- 2 Setting an account. (Refer to <u>page 8-4</u>.)


- 3 Enter the assigned account ID when performing the job. (Refer to <u>Using Job Accounting on</u> <u>page 8-15.)</u>
- Count the number of pages copied, printed and scanned.

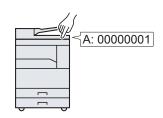

A 100 400 200

## To manage the print job account by using the machine as the shared printer

To manage the print job account by using the machine as the shared printer, you need to configure the printer settings on the computer (Host PC) connected to the machine via USB.

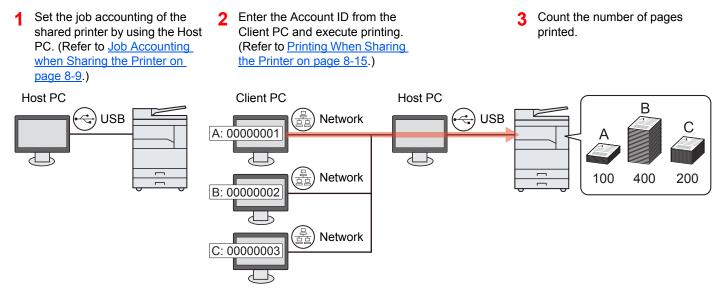

### 💽 ΝΟΤΕ

When using the machine as a shared printer, settings must be made for the shared printer. Refer to <u>Setting the</u> <u>Shared Printer on page 2-16</u>.

## To manage the scan job account by using Quick Scan/TWAIN

To manage the scan job account by using Quick Scan or TWAIN, you need to configure Client Tool settings on the computer (Host PC) connected to the machine via USB. (Refer to <u>Default Settings on the PC (Client Tool) on page 7-16</u>.)

## To manage the scan job account by using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer (Host PC) connected to the machine via USB. (Refer to <u>Setting WIA Driver on page 2-19</u>.)

# **Enabling Job Accounting**

Enable job accounting. Use the procedure below.

#### Access job accounting setting.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

Status/Sys. Menu	OK
Admin/Accounting	

### 💽 NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

3 Press the [▲] or [▼] key to select [Job Account. Set.], and press the [OK] key.

### 2 Enable job accounting.

- 1 Press the [▲] or [▼] key to select [Job Accounting], and press the [OK] key.
- 2 Press the [▲] or [▼] key to select [On], and press the [OK] key.

#### NOTE

- To disable job accounting, select [Off].
- If job accounting setting is completed by selecting other function keys, such as the [Copy] key, a logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

# **Setting an Account**

You can add, change and delete an account and set the restriction for each account.

# **Adding an Account**

Up to 10 individual accounts can be added. The following entries are required.

Item Descriptions		
Account Name Enter the account name (up to 32 characters).		
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).	
Restriction	This prohibits printing/scanning or restricts the number of sheets to load. Refer to <u>Restricting the Use of the Machine on page 8-6</u> .	

### **1** Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

Status/Sys. Menu	OK
Admin/Accounting	

### 🚳 ΝΟΤΕ

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

- \*1 Upper case and lower case letters are distinguished (case sensitive).
- 3 Press the [▲] or [▼] key to select [Job Account. Set.], and press the [OK] key.
- 4 Press the [▲] or [▼] key to select [Account. List], and press the [OK] key.

Jo	b	Accour	nt.	Set.	OK
•	A	ccount.	. L	ist	

5 Press the [▲] or [▼] key to select [Add Account], and press the [OK] key.

Account. List	OK
🗘 🎎 Add Account	

### **2** Enter the account information.

1 Enter the account name and press the [OK] key.

Account	Name	OK

#### 

Refer to <u>Character Entry Method on page 10-4</u> for details on entering characters.

2 Enter the account ID and press the [OK] key.



A new account is added on the Account List.

#### NOTE

Any "Account ID" that has already registered cannot be used. Enter any other account ID.

3 To apply restriction to the account ID, press the [▲] or [▼] key to select [Detail] and press the [OK] key.

To exit the operation, press the [▲] or [▼] key to select [Exit] and press the [OK] key.



Restricting the Use of the Machine (page 8-6)

# **Restricting the Use of the Machine**

This section explains how to restrict the use of the machine by account or the number of sheets available. The items that can be restricted differ depending on whether [Split] or [Total] is selected for <u>Copy/Print Count on page 8-12</u>.

• [Split] selected for Copy/Printer Count

ltem	Descriptions
Copy Restrict.	Limits the number of sheets used for copying. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
Print Restrict.	Limits the number of sheets used for printing. Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.
Scan Restrict.	Limits the number of sheets scanned (excludes copying). Value Off: No restriction is applied. Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1 Reject Usage: Restriction is applied.

#### [Total] selected for Copy/Printer Count

•

Item	Descriptions
Print Restrict.	Limits the total number of sheets used for copying and printing.
	Value
	Off: No restriction is applied.
	Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1
	Reject Usage: Restriction is applied.
Scan Restrict.	Limits the number of sheets scanned (excludes copying).
	Value
	Off: No restriction is applied.
	Counter Limit: Restricts the counter in one-page increments up to 9,999,999 copies. *1
	Reject Usage: Restriction is applied.

\*1 If [Counter Limit] is selected, the [Limit Pages] screen appears after the [OK] key is pressed. Enter a counter limit on pages using the numeric keys, and press the [OK] key.

# **Editing an Account**

This changes the registered account information.

#### Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

ſ	Status/Sys. Menu	OK
	Admin/Accounting	

### 🚫 NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

- 3 Press the [▲] or [▼] key to select [Job Account. Set.], and press the [OK] key.
- 4 Press the [▲] or [▼] key to select [Account. List], and press the [OK] key.

#### 2 Change account information.

1 Press the [▲] or [▼] key to select the account you want to change and press the [OK] key.

Account.	List	OK
<b>‡ 🚣</b> 01		

- 2 Press the [▲] or [▼] key to select [Detail/Edit], and press the [OK] key.
- **3** Refer to step 2 of <u>Adding an Account on page 8-4</u> and <u>Restricting the Use of the Machine</u> <u>on page 8-6</u> to change account information.

# **Deleting an Account**

This deletes the account.

#### Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

Status/Sys. Menu	OK
Admin/Accounting	

### 🔊 NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

- \*1 Upper case and lower case letters are distinguished (case sensitive).
- 3 Press the [▲] or [▼] key to select [Job Account. Set.], and press the [OK] key.
- 4 Press the [▲] or [▼] key to select [Account. List], and press the [OK] key.

### **2** Delete an account.

1 Press the [▲] or [▼] key to select the account you want to delete and press the [OK] key.

Account.	List	OK
<b>‡ 🚣</b> 01		

- 2 Press the [▲] or [▼] key to select [Delete], and press the [OK] key.
- 3 Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key. The account is deleted.

# **Job Accounting when Sharing the Printer**

When using the machine as the shared printer, printing from the computer (Client PC) on the network can be managed with job accounting by configuring job accounting for the computer (Host PC) connected to the machine via USB.

### Settings when Sharing the Printer

When using the machine as a shared printer and managing the printing from the Client PC by using job accounting, configure the Host PC as follows.

#### Display the screen.

1 Click [Start] button on the Windows, and then click [Devices and Printers].

In Windows 8, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Administrator] button on the [Device Settings] tab.

### **2** Configure the settings.

 Select [Password protect administrator settings] on the [General] tab. The "Password" window appears.

	? 💌
General Li & Settings Job Accounting	
Quick Print:	
Show Quick Print tab	
Hide other tabs	
Set Quick Print tab as default	
Hide Edit Quick Print control	
Miscellaneous:	
Accordance Brofile with application	
Password protect administrator settings 2	
Hide Factory Default profile	
ОК	Cancel

2 Enter the same password (optional) in [Password] and [Confirm password], and then click the [OK] button.

The second se	? 💌
Password:	••••
Confirm password:	••••
0	K Cancel

The password is required for opening the Administrator Settings window.

3 Select [Job accounting] and [Prompt for account ID] on the [Job Accounting] tab.

	Use specific				
J	Prompt for	account ID	5		
	Display according				
	Account IDs:				
	Account ID	Description		<u>A</u> dd	
				Delete	
				Edit	
				Import	
				Export	
				Export	

4 Click the [OK] button.

### ΝΟΤΕ

- If [Prompt for account ID] is set, the screen for entering the Account ID appears when printing from the Client PC. When printing from the Client PC, refer to <u>Printing When</u> <u>Sharing the Printer on page 8-15</u>.
- For other settings of job accounting, refer to **Printer Driver User Guide**.

# **Unknown ID Job**

This specifies the behavior for handling the jobs sent with unknown account IDs (i.e., unsent IDs). The setting items are as follows.

Item	Descriptions
Permit	The job is permitted to be printed.
Reject	The job is rejected (not printed).

#### **1** Display the screen.

1 Press the [Status/System Menu/Counter] key.

	Status/
⊘)	System Menu/
	Counter

6

2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

#### NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

\*1 Upper case and lower case letters are distinguished (case sensitive).

### **2** Configure the settings.

- 1 Press the [▲] or [▼] key to select [Unknown ID Job], and press the [OK] key.
- 2 Press the [▲] or [▼] key to select [Permit] or [Reject], and press the [OK] key.

# **Configuring Job Accounting**

# **Default Setting**

Set the defaults for job accounting. To configure the settings, select the item in Default Setting and press the setting item.



Admin/Accounting

Job Account. Set.

Default Setting

For details on each function, see the table below.

ltem		Description
Apply Limit		This specifies how the machine behaves when the counter has reached the limit of restriction. The table below describes the action taken. Value Immediately: Job stops when the counter reaches its limit. Subsequently: Printing/scanning of the job continues but the subsequent job will be rejected.
Copy/Print Count		Alert Only: Job continues while displaying an alert message. You can select how the copying and printing page counts are shown - either the total of both or
		each of copying and printing individually (Split). The selection may influence restriction on the count and count method. For details, refer to <u>Restricting the Use of the Machine (page 8-6)</u> and <u>Account. Report (Accounting Report) (page 8-14)</u> .
		Value: Total, Split
Counter Limit		When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.
		The items that can be set differ depending on whether [Split] or [Total] is selected for [Copy/ Print Count].
[Split] selec	cted for Copy/I	Printer Count
Copy Restr	ict.	Sets the default restriction on the number of sheets used for copying.
Print Restri	ict.	Sets the default restriction on the number of sheets used for printing.
ScanRest.(	Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
[Total] selec	cted for Copy/	Printer Count
Print Restri	ict.	Sets the default restriction on the total number of sheets used for copying and printing.
ScanRest.(	Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
Cnt by PaperSize		This counts the number of pages by paper size (e.g. Letter).
Paper Size	1 (to 5)	In addition to paper size, media type can also be specified (e.g. count the letter-size color paper used). If you do not specify the media type, the number of used sheets will be counted for the specified sheet size, regardless of the media type.
		Paper size is available in five types, 1 to 5. These types are specified in accounting reports. Refer to <u>Account. Report (Accounting Report) on page 8-14</u> . Value: Off, On
		Paper Size: A3, A4, A5, B4, B5, Folio, Ledger, Legal, Letter, Statement
		Media Type: All Media Type, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8

# **Counting the Number of Pages Printed**

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.



#### **Total Accounting**

This counts the number of pages for all accounts and resets the counts for those accounts together at the same time.

#### Each Job Accounting

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

Types of the counts are as follows.

	Item	Descriptions
Printe	ed Pages	Displays the number of pages copied and printed, and the total number of pages used. You can also use [Duplex Pages] and [Combine Pages] to check the number of pages used.
	Copy/Print Pages	Displays the number of pages copied and printed, and the total number of pages used. Press the [▲] or [▼] key to switch the screens.
	Total Print Pages	Displays the total number of pages used for copying and printing.
	Duplex Pages	Displays the number of pages printed in [1-Sided] mode, [2-Sided] mode, and the total pages in both modes. Press the [▲] or [▼] key to switch the screens.
	Combine Pages	Displays the number of pages printed in [None] (no Combine) mode, [2 in 1] mode, [4 in 1] mode, and the total pages in both modes. Press the [▲] or [▼] key to switch the screens.
Scan	ned Pages	Displays the number of pages scanned for copying and other functions, as well as the total number of pages scanned. Press the [▲] or [▼] key to switch the screens.
Coun	ter Reset	Resets the counter. Press the [▲] or [▼] key to select [Yes] in the confirmation screen, and press the [OK] key.

To check other items, press the [Back] key to return to the previous screen.

# **Account. Report (Accounting Report)**

The total pages counted of all relevant accounts can be printed as an accounting report. Reports have different formats depending on how the count of copiers and printers is administered.

#### When [Split] is selected for Managing the Copy/Printer Count

RT

For the count by paper size, the report will be printed by size.

Use the procedure below to print a job accounting report.



#### Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

#### 2

#### Display the screen.

1 Press the [Status/System Menu/Counter] key.



2 Press the [▲] or [▼] key to select [Admin/Accounting], and press the [OK] key.

Status/Sys. Menu	OK
Admin/Accounting	

### NOTE

If the login user name entry screen appears during operations, log in by referring to <u>Administrator User Name and Password on page 2-20</u>.

The factory default login user name and login password are set as shown below.

Login User Name	Login Password
Admin <sup>*1</sup>	Admin <sup>*1</sup>

- \*1 Upper case and lower case letters are distinguished (case sensitive).
- 3 Press the [▲] or [▼] key to select [Job Account. Set.], and press the [OK] key.

### **3** Print the report.

1 Press the [▲] or [▼] key to select [Account. Report], and press the [OK] key.

Job Account. Set. 🔍 Account. Report

2 Press the [▲] or [▼] key to select [Yes], and press the [OK] key.

Accounting report is printed.

# **Using Job Accounting**

This section explains procedures while setting job accounting.

# Login/Logout

If job accounting is enabled, an account ID entry screen appears each time you use this machine. Use the procedure below to login and logout.

### Login

1 In the screen below, enter the account ID using the numeric keys and press the [OK] key.



#### 💽 NOTE

- If you entered a wrong character, press the [Clear] key and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- 2 Proceed to complete the rest of the steps.

### Logout


When the operations are complete, press the [Logout] key to return to the account ID entry screen.



# 

# **Printing When Sharing the Printer**

If the following account ID entry screen appears when printing from your PC, enter the assigned Account ID and then click the [OK] button to continue printing.

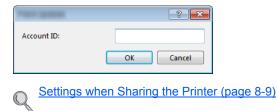

# 9 Troubleshooting

#### This chapter explains the following topics:

Regular Maintenance	9-2
Cleaning	
Toner Container Replacement	
Waste Toner Box Replacement	
Troubleshooting	
Solving Malfunctions	
Responding to Messages	
Clearing Paper Jams	

# **Regular Maintenance**

# Cleaning

Clean the machine regularly to ensure optimum printing quality.

# 


For safety, always unplug the power cord before cleaning the machine.


### **Original Cover/Glass Platen**

Wipe the backside of the original cover, the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.

#### **IMPORTANT**

Do not use thinner or other organic solvents.

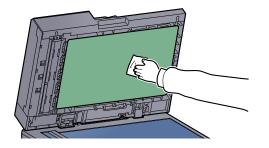

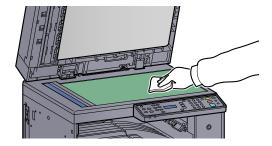


### Slit Glass

When using the document processor, clean the slit glass surface and the reading guide with the dry accessory cloth. Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.

#### **IMPORTANT**

Do not use water, soap or solvents for cleaning.

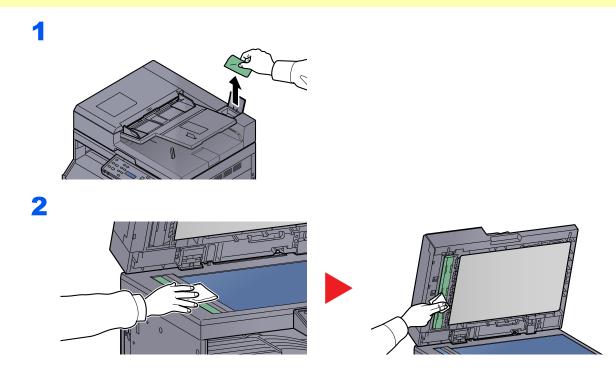

# **Toner Container Replacement**

When toner runs low, [Toner is low.] appears in the message display. Make sure you have a new toner container available for replacement.


When the message display displays [Add toner.], replace the toner.

# 


Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

### 🚫 ΝΟΤΕ


- For the toner container, always use a genuine toner container. Using a toner container that is not genuine may cause image defects and product failure.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.

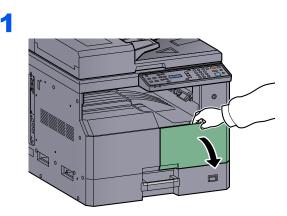




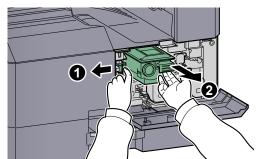

3

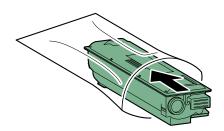


4

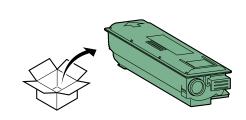


### **IMPORTANT**

Shake the toner container according to the procedure and place the container in position.

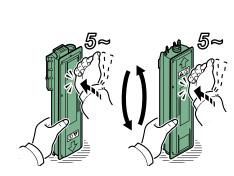

6


5

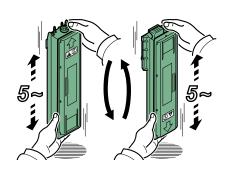






8

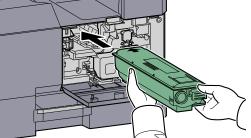

9

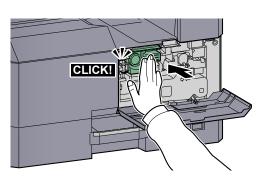

10




# 

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.


# **Waste Toner Box Replacement**

When replacing the toner container, replace the waste toner box as well. You also need to replace the waste toner box when [WasteTonerBox is full or not installed.] is displayed on the message display.


# **CAUTION** Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

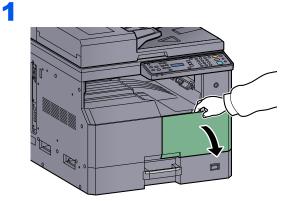




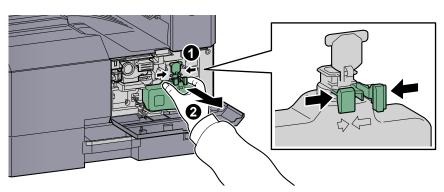

3

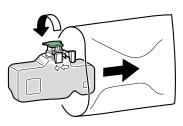


4

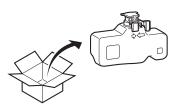


5


# 6

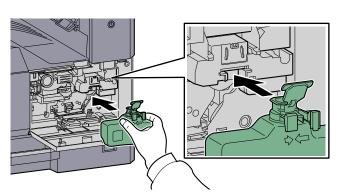

7

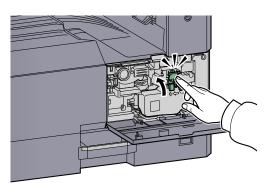

8

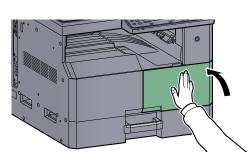

### ΝΟΤΕ

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

# Troubleshooting

# **Solving Malfunctions**

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.

Symptom	Checkpoints	Corrective Actions	Reference Page
The screen does not respond when the power switch is turned on.	Check the power cord.	Connect both ends of the power cord securely.	<u>page 2-7</u>
Pressing the [Start] key does not produce copies.	Is there a message on the screen, Client Tool, or the Status Monitor?	Determine the appropriate response to the message and respond accordingly.	<u>page 9-11</u>
	Is the machine in Sleep mode?	Press any key on the operation panel to recover the machine from Sleep mode.	page 2-22
Blank sheets are ejected.	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	<u>page 5-2</u>
		When placing originals in the document processor, place them face-up.	<u>page 5-3</u>
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	page 3-7 page 3-10
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-7
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-7
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 9-16
2 or more sheets are overlaps when ejected. (multi feed)	_	Load the paper correctly.	<u>page 3-7</u> page 3-10
123			
Printouts are wrinkled. $\begin{array}{c} ABC \\ 123 \\ \\ \\ \end{array}$	Is the paper damp?	Replace the paper with new paper.	<u>page 3-5</u>
Printouts are curled.	Is the paper damp?	Replace the paper with new paper.	<u>page 3-5</u>

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	
	Is the machine powered on?	Turn on the power switch.	page 2-8
	Is the printer cable connected?	Connect the correct printer cable securely.	<u>page 2-6</u>
	Is the machine used as a shared printer?	Start up the Host PC.	—
	Is the print job paused?	Resume printing.	page 6-7
Printouts are totally too light.	Is the paper damp?	Replace the paper with new paper.	page 3-5
ABC         ABC           123         123	Have you changed the density?	Select appropriate density level.	<u>page 5-14</u> page 7-15
	Is the toner distributed evenly within the toner container?	Shake the toner container from side to side several times.	<u>page 9-3</u>
	Is EcoPrint mode enabled?	Disable EcoPrint mode.	page 5-21 page 7-13
	-	Make sure the paper type setting is correct for the paper being used.	<u>page 7-7</u>
Part of the image is periodically faint or shows white lines.		Run [Drum Refresh].	<u>page 7-15</u>
Printouts are fuzzy.          ABC         123	Is the machine being used in conditions of very humid, or humidity or temperature rapidly changes?	Use in an environment that has suitable humidity.	_
Texts are not clearly printed.          ABC         123	Did you choose appropriate image quality for the original?	Select appropriate image quality.	page 5-14
Printouts are too dark even though the background of the scanned original is white. ABC 123	Have you changed the density?	Select appropriate density level.	page 5-14 page 7-15

#### Troubleshooting > Troubleshooting


Symptom	Checkpoints	Corrective Actions	Reference Page
Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).	Is the original a printed photograph?	Set the original image to [Photo].	<u>page 5-14</u>
Black dots appear on the white background when white original is scanned.	Is the original cover or the glass platen dirty?	Clean the original cover or the glass platen.	<u>page 9-2</u>
Printouts have vertical lines.	Is the slit glass dirty?	Clean the slit glass.	<u>page 9-2</u>
Images are skewed.	Are the originals loaded correctly?	When placing originals on the platen, align them with the original size indicator plates. When placing originals in the document	page 5-2 page 5-3
ABC		processor, align the original width guides securely before placing the originals.	
199	Is the paper loaded correctly?	Check the position of the paper width guides.	<u>page 3-7</u> page 3-10
Cannot turn off the power by pressing the power switch.	_	Press the power switch 3 seconds or longer until the message display becomes black.	

# **Responding to Messages**

If a problem has occurred in the machine, you will be notified by the following display.

- The [Attention] indicator on the operation panel is lit or flashing.
- An error message appears in the message display of the machine's operation panel.

If the [Attention] indicator is lit or flashing and an error message appears in the message display of the machine's operation panel, check the Client Tool or Status Monitor.

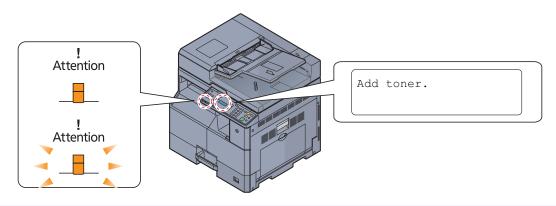

### 阈 ΝΟΤΕ

If the indicators light or flash repeatedly in manners not described above, a service error has probably occurred. Turn off the power, unplug the power cord, and then plug the power cord back in and turn on the power. This may clear the error. Even if the error is not cleared, contact your service representative.

Problems that can be resolved by the user are described below.

### Α

Message Display	Checkpoints	Corrective Actions	Reference Page
Add toner.	Toner is empty.	Replace the toner container.	<u>page 9-3</u>

### С

Message Display	Checkpoints	Corrective Actions	Reference Page
Call service.	_	An error has occurred in the machine. Make a note of the error code displayed on the message display, and contact your service representative.	_
Cannot duplex print on this paper. ↑↓ (Displayed alternately) OF II (paper size) Bond (media type) OK: Go next step	Did you select a paper size/type that cannot be duplex printed?	<ul> <li>Press the [OK] key to move to the next step.</li> <li>Select [Select paper] to select the other paper source.</li> <li>Select [Go without change] to print without using Duplex function.</li> </ul>	_
Clean the scanner.		Clean the slit glass using the cleaning cloth supplied with the document processor.	<u>page 9-2</u>
Close the Document processor.	Is the document processor open?	Close the document processor.	_

Message Display	Checkpoints	Corrective Actions	Reference Page
Close the Document processor cover.	Is the top cover of the document processor open?	Close the document processor cover.	—
Close the front cover.	Is the front cover open?	Close the front cover.	
Close the right cover #.	Is there any cover which is open?	Close the cover indicated on the screen.	

### Ε

Message Display	Checkpoints	Corrective Actions	Reference Page
Error. Power off.	_	System error has occurred. Turn the power switch OFF and then ON.	_

I

Message Display	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID. Job is canceled.	_	The account ID was incorrect when processing the job externally. The job is canceled. Press the [OK] key.	—
Insufficient memory. Cannot start the job.	_	Job cannot be started. Try again later.	—

### J

Message Display	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded.	Is the acceptable printing count restricted by job accounting exceeded?	The printing count exceeded the acceptable count restricted by job accounting. Cannot print any more. This job is canceled. Press the [OK] key.	—

# L

Message Display	Checkpoints	Corrective Actions	Reference Page
Load paper in cassette #. ↑↓ (Displayed alternately) A4 (paper size) Plain (media type) OK: Go next step	Is the indicated cassette out of paper? Does the selected paper size matches the paper size loaded in the specified paper source?	<ul> <li>Load paper.</li> <li>Press the [OK] key to move to the next step.</li> <li>Select [Select paper] to select the other paper source.</li> <li>Select [Go without change] to print on the paper in the currently selected paper source.</li> </ul>	_
Load paper in MP tray. ↑↓ (Displayed alternately) A4 (paper size) Plain (media type) OK: Go next step	Is the MP tray out of paper? Does the selected paper size matches the paper size loaded in the specified paper source?	<ul> <li>Press the [OK] key to move to the next step.</li> <li>Select [Select paper] to select the other paper source.</li> <li>Select [Go without change] to print on the paper in the currently selected paper source.</li> </ul>	_

### Μ

Message Display	Checkpoints	Corrective Actions	Reference Page
Maximum Number of scanned pages.	Is the acceptable scanning count exceeded?	Cannot scan pages any more. The job is canceled. Press the [OK] key.	_
Memory is full.	—	Unable to continue the job as the memory is used up. Change the print resolution from Fast 1200 to 600 dpi. Refer to <b>Printer Driver User Guide</b> .	_

# Ν

Message Display	Checkpoints	Corrective Actions	Reference Page
Non-genuine Toner.	Is the installed toner container our own brand?	The manufacturer assumes no responsibility for damage caused by a non-genuine toner. We recommend that you only use genuine toner containers. When you want to use the toner container currently installed, press the [OK] key and the [Stop] key simultaneously for 3 seconds or more.	_

### Ρ

Message Display	Checkpoints	Corrective Actions	Reference Page
PaperJam.(Cassette 1 (to 4)) PaperJam (MP tray)	_	A paper jam has occurred. Refer to <u>Clearing Paper Jams on page 9-16</u> and remove the jammed paper.	<u>page 9-16</u>
PaperJam. (RightCover1) ↑↓ (Displayed alternately)			
Check (A1)(A2) in the Right Cover 1.			
PaperJam (RightCover2 (or 3))			
Paper Jam. (DP) ↑↓ (Displayed alternately) Check (B)(C) in the DP Cover	A paper jam has occurred in the document processor.	A paper jam has occurred. Refer to <u>Clearing Paper Jams on page 9-16</u> and remove the jammed paper.	page 9-16
Print overrun. Job is canceled.	_	Warning. Low printer memory. The job was canceled. Press the [OK] key.	_

# R

Message Display	Checkpoints	Corrective Actions	Reference Page
Remove originals in document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	_
Remove the paper from the inner tray.	_	Remove paper from the inner tray. Press the [OK] key to resume printing.	_

Message Display	Checkpoints	Corrective Actions	Reference Page
Replace all originals and press Start key.	_	Remove originals from the document processor, put them back in their original order, and place them again. Press the [OK] key to resume printing. Press the [Stop] key to cancel the job.	_
Replace MK.	_	Replacement of the parts in the maintenance kit is necessary at every 150,000 pages of printing and requires professional servicing. Contact your Service Representative.	_
Restricted by Job Accounting. (Print)	_	This job is canceled because it is restricted by job accounting. Press the [OK] key.	_
Restricted by Job Accounting. (Scan)		This job is canceled because it is restricted by job accounting. Press the [OK] key.	_

### S

Message Display	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full.	_	Scanning cannot be performed any more due to insufficient memory of scanner. Press the [OK] key to cancel the job.	_
Set another cassette.	Have you selected Offset?	To use offsetting, the same size of paper as the selected paper source must be loaded in a different orientation in a different paper source.	<u>page 5-19</u>
Shake the toner container.		Open the front cover of the machine and pull out the toner container. Shake the toner container well and reinstall it.	<u>page 9-3</u>

### Т

Message Display	Checkpoints	Corrective Actions	Reference Page
Toner is low. (Replace when empty.)	_	It is almost time to replace the toner container. Obtain a new toner container.	—

### U

Message Display	Checkpoints	Corrective Actions	Reference Page	
Unknown toner installed.PC	Does the installed toner container's regional specification match the machine's?	Install the specified toner container.	<u>page 9-3</u>	


Message Display	Checkpoints	Corrective Actions	Reference Page
USB cable was disconnected.	Is the USB cable connected?	Press the [OK] key and connect the USB cable.	<u>page 2-7</u>
	Is the PC powered on?	Press the [OK] key and turn the PC power on.	_
	Cannot find Client Tool.	Press the [OK] key and open Client Tool.	<u>page 2-18</u>

### W

Message Display	Checkpoints	Corrective Actions	Reference Page
WasteTonerBox is full or not installed.	-	The waste toner box is not installed correctly. Set it correctly.	<u>page 9-6</u>
	Is the waste toner box full?	Replace the waste toner box.	<u>page 9-6</u>

### **Clearing Paper Jams**

If a paper jam occurs, [Paper Jam] appears in the message display and the machine will stop. This section explains the procedures to remove the jammed paper.

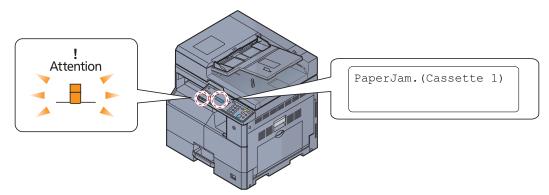

### Jam Location

Detailed paper jam positions are as follows.

	Error Message		Paper Jam Location	Reference Page
	PaperJam. (Cassette 1)	A	Cassette 1	<u>page 9-17</u>
	PaperJam. (Cassette 2)	₿	Cassettes 2 to 4	page 9-17
	PaperJam. (Cassette 3)	Ο		
<b>B G D</b>	PaperJam. (Cassette 4)	٥		
	PaperJam (MP tray)		Multi purpose tray	page 9-17
	PaperJam. (RightCover) ↑↓ (Displayed alternately.) Check the point. (A1) (A2)	6	Inside right cover 1	page 9-18
	PaperJam (RightCover2)	G	Inside right covers 2 or 3	page 9-19
	PaperJam (RightCover3)	8		
	Paper Jam. (DP)	0	Document processor	<u>page 9-19</u>

After you clear the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.


### **Precautions with Paper Jams**

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
- After clearing the paper jam, close the cassette and cover in the reverse procedure.

# 


The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

### Cassette 1

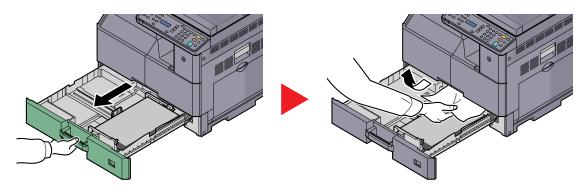


### Cassettes 2 to 4


Procedures for handling a paper jam in Cassettes 2, 3, and 4 are all the same. This section explains procedures using Cassette 2 as an example.

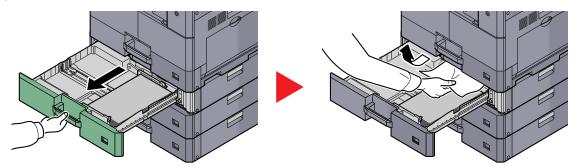

### Multi purpose tray

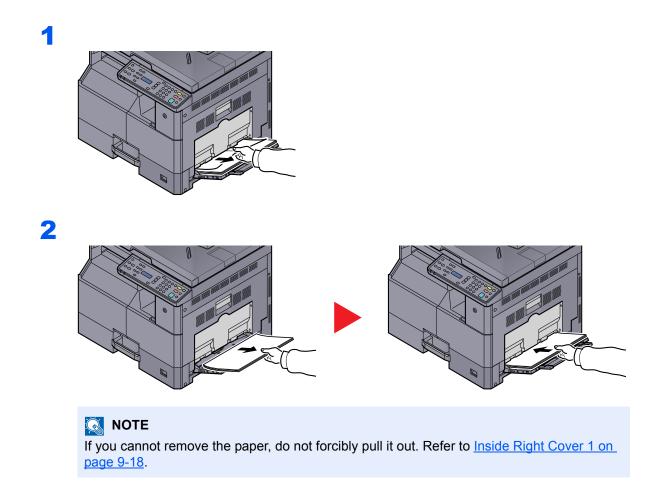


### Inside Right Cover 1

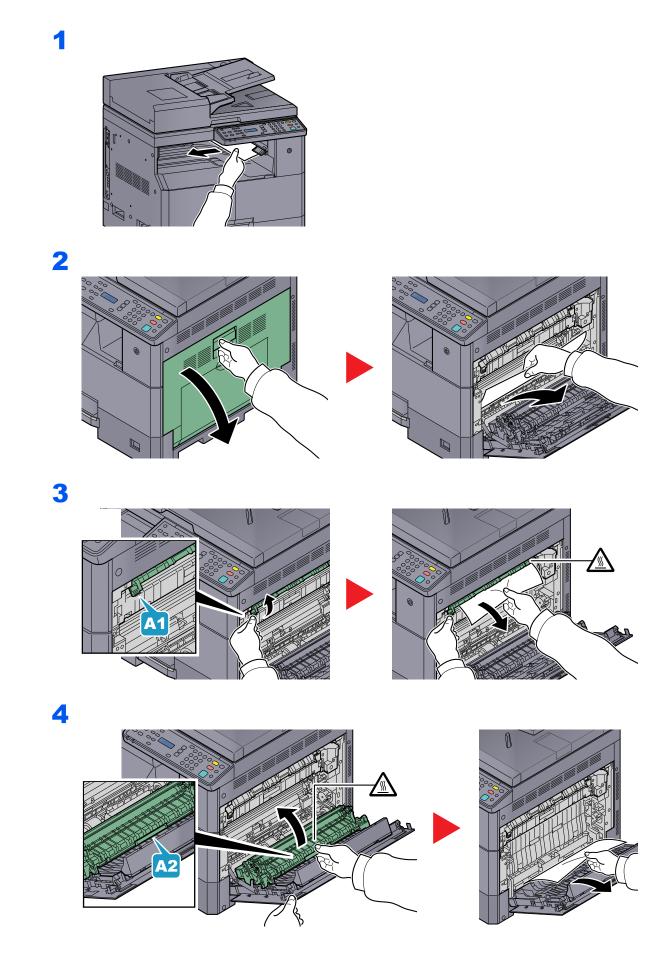


### Inside Right Covers 2 or 3

Procedures for handling a paper jam in Right Covers 2 and 3 are all the same. This section explains procedures using Right Cover 2 as an example.

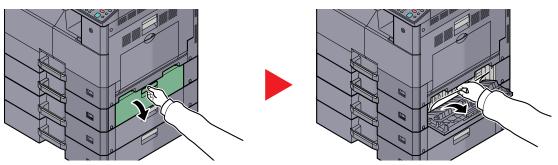

### **Document Processor**

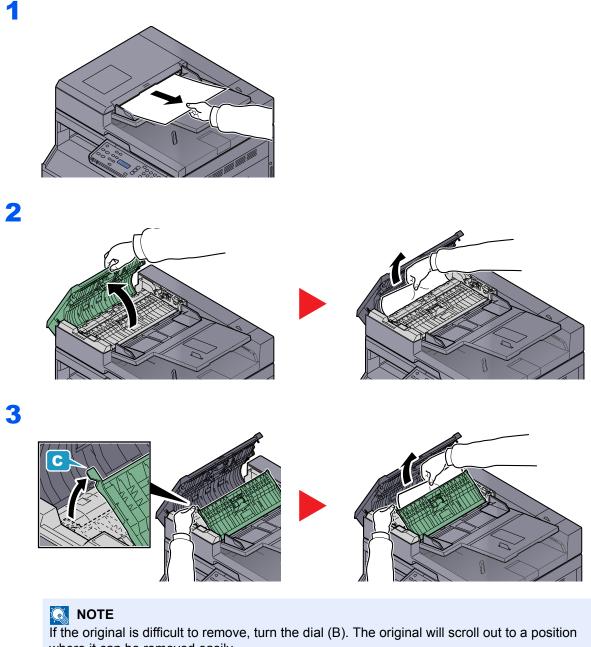

where it can be removed easily.

# **10** Appendix


#### This chapter explains the following topics:

Overview of Optional Equipment10-2Character Entry Method10-4Using the Keys10-4Characters That Can be Entered Using the Numeric Keys10-4Entering Symbols10-5Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18Glossary10-19	Optional Equipment	10-2
Using the Keys10-4Characters That Can be Entered Using the Numeric Keys10-4Entering Symbols10-5Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18Duplex Unit (Option)10-18	Overview of Optional Equipment	10-2
Characters That Can be Entered Using the Numeric Keys10-4Entering Symbols10-5Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-18Duplex Unit (Option)10-18	Character Entry Method	10-4
Entering Symbols10-5Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-18Duplex Unit (Option)10-18Duplex Unit (Option)10-18	Using the Keys	10-4
Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Characters That Can be Entered Using the Numeric Keys	
Entering Characters10-6Paper10-7Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Entering Symbols	10-5
Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18		
Basic Paper Specifications10-7Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Paper	10-7
Choosing the Appropriate Paper10-8Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	•	
Special Paper10-11Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Choosing the Appropriate Paper	10-8
Specifications10-15Common Functions10-15Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18		
Copy Functions10-16Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18		
Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Common Functions	10-15
Printer Functions10-16Scanner Functions10-17Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18	Copy Functions	10-16
Document Processor (Reverse Automatic) (Option)10-17Paper Feeder (300-sheet) (Option)10-18Duplex Unit (Option)10-18		
Paper Feeder (300-sheet) (Option)	Scanner Functions	10-17
Duplex Unit (Option) 10-18	Document Processor (Reverse Automatic) (Option)	10-17
Duplex Unit (Option) 10-18	Paper Feeder (300-sheet) (Option)	10-18
Glossary 10-19	Duplex Unit (Option)	10-18
	Glossary	10-19

# **Optional Equipment**

### **Overview of Optional Equipment**

The following optional equipment is available for the machine.

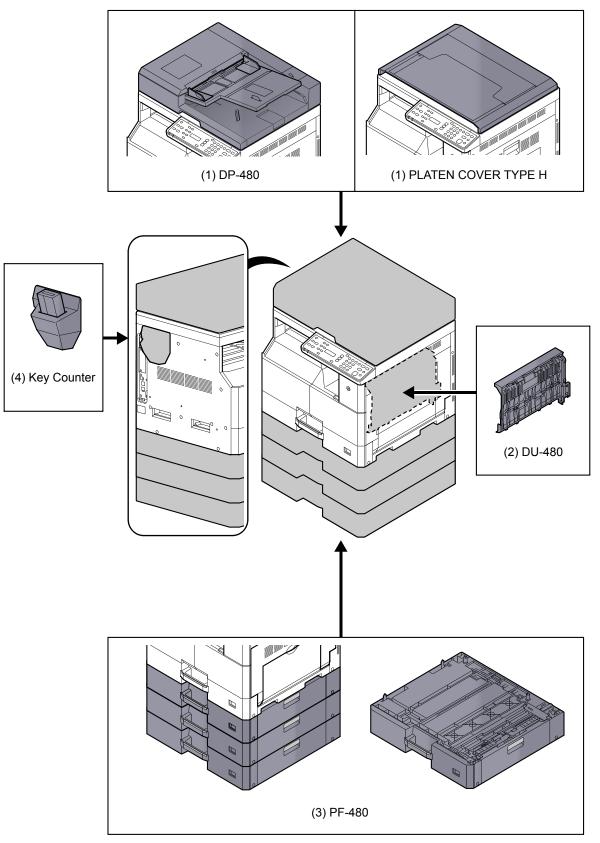

### (1) DP-480 "Document Processor (Reverse Automatic)" PLATEN COVER TYPE H "Original Cover"

Automatically scans originals. Also you can perform duplex copying and split copying.

For document processor operation, refer to Loading Originals in the Document Processor (Option) on page 5-3.

When the document processor is not used, please use the PLATEN COVER TYPE H.

### (2) DU-480 "Duplex Unit"

Installing the duplex unit allows you to produce two-sided copies. Two-sided copies are available in sizes A3 to A5-R, Folio, Ledger to Statement-R, Executive, 216 × 340 mm (64 to 105 g/m<sup>2</sup>).

For two-sided copy settings, refer to Duplex on page 5-14.


### (3) PF-480 "Paper Feeder (300-sheet)"

Up to three additional cassettes identical to the machine's cassettes can be installed in the machine. Paper capacity and loading method are the same as the standard cassettes. Refer to <u>Loading in the Cassettes on page 3-7</u> for loading paper.

### (4) Key Counter "Key Counter"

Use the key counter to monitor machine usage. The key counter offers a convenient solution for centralized management of copy volume for different departments in a large company.

#### Inserting the Key Counter

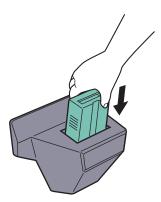

Insert the key counter securely into the key counter slot.


### ο ΝΟΤΕ

When the key counter function is activated, copies can only be made when a key counter is inserted. If the key counter is not inserted, [Insert the key counter]. will be displayed.

# **Character Entry Method**

This section explains how to enter characters.

### **Using the Keys**

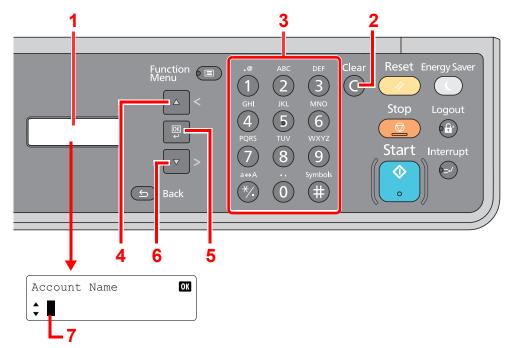

No.	Display/Key	Description
1	Message Display	Displays entered characters.
2	[Clear] key	Press to delete characters.
3	Numeric Keys	Press to enter characters and symbols.
4	[▲ (<)] key	Press to move the cursor backward.
5	[ <mark>OK</mark> ] key	Press to finalize entry and return to the screen before the entry. To enter a symbol, press to confirm the selected symbol.
6	[▼ (>)] key	Press to move the cursor forward.
7	Cursor	Characters are entered at the position of the cursor.

# **Characters That Can be Entered Using the Numeric Keys**

The following table lists the characters that can be entered using the numeric keys.

Keys		Characters (Each press of a key changes the character in the order from left to right.)											
.@		@	-	_	1	:	~	1     (Repeats from the first character on the left)					
	1 (D	1 (During number entry)											
ABC	а	b	с	А	В	С	2	2 (Repeats from the first character on the left)					
2	2 (D	2 (During number entry)											

Keys		Cł	narac	ters	(Eacl	h pre	ss of	a ke	y cha	ange	s the	char	actei	r in tł	ne or	der fi	rom I	eft to right.)
DEF	d	е	f	D	Е	F	3	(Rep	peats	from t	he firs	t char	acter	on th	e left)			
3	3 (During number entry)																	
GHI	g	h	i	G	Н	I	4	(Rep	peats	from t	he firs	t char	acter	on th	e left)			
4	4 (D	uring	numb	er ent	ry)													
JKL	j	k	I	J	К	L	5	(Rep	peats	from t	he firs	t char	acter	on th	e left)			
5	5 (During number entry)																	
MNO	m	n	0	М	Ν	0	6	(Rep	peats	from t	he firs	t char	acter	on th	e left)			
6	6 (During number entry)																	
PQRS	р	q	r	S	Р	Q	R	S	7	(Rep	peats <sup>-</sup>	from t	he firs	st cha	racter	on th	e left)	
7	7 (D	uring	numb	er ent	ry)													
TUV	t	u	v	Т	U	V	8	(Rep	peats	from t	he firs	t char	acter	on th	e left)			
8	8 (D	uring	numb	er ent	ry)													
WXYZ	w	х	у	z	W	Х	Y	Z	9	(Rep	peats	from t	he firs	st cha	racter	on th	e left)	
9	9 (D	uring	numb	er ent	ry)													
.,		,	-	_	"	!	?	(spa	ace)	0	(Rep	peats	from t	he firs	st cha	racter	on th	e left)
0	0 (D	uring	numb	er ent	ry)													
a⇔A	Pres	s to c	hange	e the o	charac	cter in	the c	ursor	oositic	on bet	ween	upper	case	and I	ower	case.		
*⁄.	"*" 0	r "." ([	During	g num	ber er	ntry)												
Symbols	!	"	#	\$	%	&	'	(	)	*	+	,	-		/	:	;	Displays the
	<	=	>	?	@	[	١	]	^	_		{	I	}		~		symbol list. For details, refer to
	# (D	uring	numb	er ent	ry)													Entering Symbols on page 10-5.
	* Depending on the functions, there are symbols that cannot be entered.																	

### **Entering Symbols**

Symbols can be entered.

1 Press the [#] key. Displays the symbol list.

Symbols	OK	
↓ !"#\$%&'()*+,/:;		ļ

2 Press the  $[ \land (<) ]$  or  $[ \lor (>) ]$  key to move the cursor and select the symbol to be entered.

Symbols	OK

3 Press the [OK] key. The selected symbol is entered.

Account	Name	0	K
♣ R&			

### **Entering Characters**

Follow the steps shown below to enter "R&D" for example.

**1** Press the [7] key three times. [r] is entered.

Account	Name	ОК
<b>↓</b> 1		

2 Press the [\*/.] key. [r] changes to [R].

Account	Name	OK
‡ R		

**3** Press the [▼ (>)] key. The cursor moves to the right.

Account	Name	0	K
🗘 R			

4 Press the [#] key. Displays the symbol list.

Symbols	OK
↓ !"#\$%&'()*+,/:;	

5 Press the [▲ (<)] or [▼ (>)] key to move the cursor and select [&].

Symbols	OK
↓ !"#\$%&'()*+,/:;	

6 Press the [OK] key. [&] is entered.

Account	Name	OK
🗘 R&		

7 Press the [3] key four times. [D] is entered.

Account	Name	OK
🗘 R&D		

8 Press the [▼ (>)] key.

Account	Name	OK
♣ R&D		

# Paper

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to <u>Specifications on</u> page 10-15.

### **Basic Paper Specifications**

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

### **Supported Paper**

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

### **Basic Paper Specifications**

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications	
Weight	Cassettes: 64 to 105 g/m <sup>2</sup>	
	Multi purpose tray: 45 to 160 g/m <sup>2</sup>	
Dimensional accuracy	±0.7 mm	
Squareness of corners	90° ±0.2°	
Moisture content	4 to 6%	
Pulp content	80% or more	

#### 🔕 ΝΟΤΕ

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

### **Choosing the Appropriate Paper**

This section describes guidelines for choosing paper.

### Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

### Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

### **Supported Paper Sizes**

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a  $\pm 0.7$  mm dimensional accuracy for length and width. Corner angles must be 90°  $\pm 0.2$ °.

Multi Purpose Tray	Cassette or Multi Purpose Tray
A6-R (105 × 148 mm)	A3 (297 × 420 mm)
B6-R (128 × 182 mm)	B4 (257 × 364 mm)
Hagaki (100 × 148 mm)	A4 (297 × 210 mm)
Oufukuhagaki (148 × 200 mm)	A4-R (210 × 297 mm)
Executive (7 1/4 × 10 1/2")	B5 (257 × 182 mm)
Envelope DL (110 × 220 mm)	B5-R (182 × 257 mm)
Envelope C5 (162 × 229 mm)	A5-R (148 × 210 mm)
Envelope C4 (229 × 324 mm)	Folio (210 × 330 mm)
ISO B5 (176 × 250 mm)	Ledger
Envelope #10 (4 1/8 × 9 1/2")	Legal
Envelope #9 (3 7/8 × 8 7/8")	Letter
Envelope #6 3/4 (3 5/8 × 6 1/2")	Letter-R
Envelope Monarch (3 7/8 × 7 1/2")	Statement-R
Youkei 2 (114 × 162 mm)	Oficio II
Youkei 4 (105 × 235 mm)	8K (273 × 394 mm)
Size Entry (98 × 148 to 297 × 432 mm)	16K (273 × 197 mm)
	16K-R (197 × 273 mm)
	216 × 340 mm

### Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

### **Basis Weight**

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

### **Moisture Content**

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

### **Other Paper Specifications**

Porosity: The density of the paper fibers

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

**Curl**: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

**Static electricity**: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

**Quality**: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

**Packaging**: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

**Specially treated paper**: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- · Watermarked paper
- · Paper with an uneven surface
- · Perforated paper

### **Special Paper**

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- · Preprinted paper
- Bond paper
- · Recycled paper
- Thin paper (from 52 g/m<sup>2</sup> to 105 g/m<sup>2</sup> or less)
- Letterhead
- Colored paper
- Prepunched paper
- Envelopes
- Cardstocks (Hagaki)
- Thick paper (from 106 g/m<sup>2</sup> to 163 g/m<sup>2</sup> or less)
- Labels
- High-quality paper

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multi purpose tray for transparencies, envelopes, cardstocks, and label paper.

### **Choosing Special Paper**

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multi purpose tray for special paper.

### Transparencies

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C	
Thickness	0.100 to 0.110 mm	
Material	Polyester	
Dimensional accuracy	±0.7 mm	
Squareness of corners	90° ±0.2°	

To avoid problems, use the multi purpose tray for transparencies and load transparencies with the long side facing the machine.


If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

### Label

Be sure to feed labels from the multi purpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.

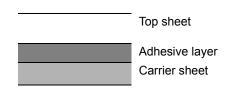

Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

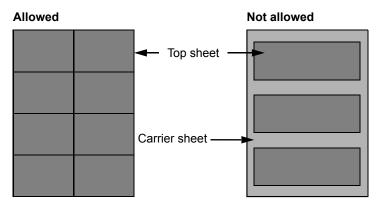

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m <sup>2</sup>
Basis weight (overall paper weight)	104 to 151 g/m <sup>2</sup>
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

### Hagaki

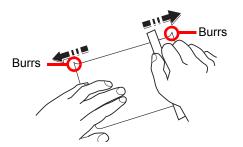

Before loading Hagaki into the multi purpose tray, fan them and align the edges. If the Hagaki paper is curled, straighten it before loading. Printing onto curled Hagaki may cause jams.

Use unfolded Oufukuhagaki (available at post offices). Some Hagaki may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki on a flat surface and rubbing the edges gently a few times with a ruler.

### Envelopes

Use the multi purpose tray for envelopes.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- · If paper jams occur, load fewer envelopes at once.
- To prevent paper jams when printing onto multiple envelopes, do not allow more than ten envelopes to remain in the Inner tray at once.

### **Thick Paper**

Before loading thick paper in the multi purpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.

### NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper in the multi purpose tray with the leading edge raised a few millimeters.

### **Colored Paper**

Colored paper must conform to the specifications listed on <u>page 10-7</u>. In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

### **Preprinted Paper**

Preprinted paper must conform to the specifications listed on <u>page 10-7</u>. The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

### **Recycled Paper**

Recycled paper must conform to the specifications listed on <u>page 10-7</u>; however, its whiteness may be considered separately.

### 🚫 ΝΟΤΕ

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

# **Specifications**

### 

Specifications are subject to change without notice.

### **Common Functions**

ltem		Description
Туре		Desktop
Printing Method		Electrophotography by semiconductor laser, single drum system
Paper Weight	Cassette	64 to 105 g/m <sup>2</sup>
	Multi Purpose Tray	45 to 160 g/m², 230 g/m² (Cardstock)
Paper Type	Cassette	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
	Multi Purpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8
Paper Size	Cassette	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Folio, 8K, 16K, 16K-R, 216 × 340 mm
	Multi Purpose Tray	A3, B4, A4, A4-R, B5, B5 (ISO), B5-R, A5-R, B6-R, A6-R, Oufukuhagaki, Hagaki, Envelope DL, Envelope C5, Envelope C4, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Youkei 2, Youkei 4, Ledger, Legal, Oficio II, Letter, Letter-R, Statement-R, Executive, Folio, 216 × 340 mm, 8K, 16K, 16K-R, Size Entry (Metric: X; 148 to 432 mm (in 1 mm increments), Y; 98 to 297 mm (in 1 mm increments), Inch: X; 5.83 to 17.00" (in 0.01" increments), Y; 3.86 to 11.69" (in 0.01" increments))
Warm-up Time	Power on	17.2 seconds or less
(22°C/71.6°F, 60%)	Sleep	11 seconds or less
Paper Capacity	Cassette	300 sheets (80 g/m²)
	Multi Purpose Tray	A4/Letter or less: 100 sheets (80 g/m²) More than A4/Letter: 25 sheets (80 g/m²)
Output Tray Capa	city	250 sheets (80 g/m <sup>2</sup> )
Image Write Syste	em	Semiconductor laser and electrophotography
Main Memory		256 MB
Interface		USB Interface Connector: 1 (USB Hi-Speed)
Operating	Temperature	10 to 32.5°C/50 to 90.5°F
Environment	Humidity	15 to 80 %
	Altitude	3,500 m/11,482.8 ft maximum
	Brightness	1,500 lux maximum
Dimension (W × D × H)		22 1/4 × 20 3/4 × 19 1/8"
(with original cover)		565 × 527 × 485 mm
Weight (with tone	er container)	55 lb/25 kg or less
Space Required (W × D)		32 1/16 × 20 3/4"
(Using multi purpose tray)		815 × 527 mm

ltem	Description
Power Source	230 V Specification Model: 220-240 V $\sim$ 50/60 Hz 6.3 A
Options	Refer to Optional Equipment on page 10-2.

## **Copy Functions**

Item			Description
Copy Speed	feed from Cassette feed from Multi Purpose Tray	A4/Letter A4-R/Letter-R A3/Ledger B4/Legal B5 B5-R A5-R A4/Letter A4-R/Letter-R A3/Ledger B4/Legal B5 B5-R A5-R A5-R A5-R	18 sheets/min
First Copy Time (A4, feed from Ca	ssette)	5.7 seconds or	less
Zoom Level Manual mode: 2 Auto mode: Pre			25 to 400%, 1% increments eset Zoom
Continuous Copying		1 to 999 sheets	
Resolution		600 × 600 dpi	
Supported Original Types		Sheet, Book, 3- A3)	dimensional objects (maximum original size: Ledger/
Original Feed System		Fixed	

### **Printer Functions**

ltem	Description
Printing Speed	Same as Copying Speed.
First Print Time (A4, feed from Cassette)	5.7 seconds or less
Resolution	600 × 600 dpi, Fast 1200 dpi
Operating System	Windows XP, Windows Server 2003, Windows Vista, Windows 7, Windows 8, Windows Server 2008/R2, Windows Server 2012, Mac OS 10.5 or later
Interface	USB Interface Connector: 1 (USB Hi-Speed)
Page Description Language	Hostbased (GDI)

### **Scanner Functions**

ltem	Description	
Resolution	B/W: 600 dpi, 400 dpi, 300 dpi, 200 dpi	
	Color: 300 dpi, 200 dpi	
File Format	TIFF (MMR/JPEG compression), PDF (MMR/JPEG compression/ high compression), JPEG, BMP	
Scanning Speed	<600 dpi>	
	1-sided B/W 22 Images/min	
	2-sided B/W 8 Images/min	
	<300dpi>	
	1-sided B/W 22 Images/min	
	Grayscale 14 Images/min	
	Color 14 Images/min	
	2-sided B/W 8 Images/min Grayscale 6 Images/min	
	Color 6 Images/min	
	(A4 landscape, Image quality: Text/Photo original)	
Interface	USB	

# **Document Processor (Reverse Automatic) (Option)**

Item	Description
Original Feed Method	Automatic feed
Supported Original Types	Sheet originals
Paper Size	Maximum: Ledger/A3
	Minimum: Statement-R/A5-R
Paper Weight	1-sided: 45 to 120 g/m <sup>2</sup>
	2-sided: 50 to 120 g/m <sup>2</sup>
Loading Capacity	50 sheets (50 to 80 g/m²) maximum
	When originals have different widths:
	30 sheets (50 to 80 g/m²) maximum
Dimensions	22 3/16 × 17 1/4 × 5"
(W) × (D) × (H)	563 × 439 × 128 mm
Weight	13.2 lbs. or less / 6 kg or less

# Paper Feeder (300-sheet) (Option)

Item	Description
Paper Supply Method	Automatic Feeding (No. Sheets: 300, 80 g/m <sup>2</sup> )
Paper Size	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Folio, 8K, 16K, 16K-R, 216 × 340 mm
Supported Paper	Paper weight: 64 to 105 g/m <sup>2</sup> Media types: Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	22 1/4 × 20 1/2 × 5 7/8" 565 × 520 × 148.5 mm
Weight	13.2 lbs. / 6 kg

## **Duplex Unit (Option)**

Item	Description
Paper Size	A3, B4, A4, A4-R, B5, B5-R, A5-R, Ledger, Legal, Oficio II, Letter-R, Letter, Statement-R, Executive, Folio, 216 × 340 mm
Supported Paper	Paper weight: 64 to 105 g/m <sup>2</sup> Media types: Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	14 3/4 × 2 3/8 × 8 5/8" 375 × 60 × 220 mm
Weight	Approx. 2.2 lbs. / Approx. 1 kg

### NOTE

Consult your dealer or service representative for recommended paper types.

# Glossary

### Auto Form Feed Timeout

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

### **Auto Paper Selection**

A function to automatically select paper in the same size as originals when printing

### dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

### **EcoPrint Mode**

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

### Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

### Multi Purpose (MP) Tray

The paper supply tray on the right side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki, transparencies, or labels.

### PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

### **PPM (prints per minute)**

This indicates the number of A4 size printouts made in one minute.

### **Printer Driver**

The software to enable you to print data created on any application software. The printer driver for the machine is contained in the Product Library disk enclosed in the package. Install the printer driver on the computer connected to the machine.

### **Sleep Timer**

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

### **Status Page**

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

### **TWAIN (Technology Without An Interesting Name)**

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

### USB (Universal Serial Bus) 2.0

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

### WIA (Windows Imaging Acquisition)

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

# Index

#### **Numerics**

2 in 1 Layout 5-18 Default 7-14 4 in 1 Layout 5-18 Default 7-14

### A

Adjustment/Maintenance 7-15 Admin/Accounting Administrator Setting 2-20 Job Accounting 8-1 Unknown ID Job 8-11 Administrator Setting 2-20 Auto % Priority 7-14 Auto Detect Original Size 7-7 Auto Error Clear 7-12 Auto Form Feed Timeout 10-19 Auto Panel Reset 7-12 Auto Paper Selection 7-14, 10-19 Auto Rotation 5-24 Default 7-13 Automatic 2-Sided Copy Function 1-7

### B

Background Density 5-21, 7-15 Default 7-13 Book Original Binding 5-16 Default 7-14 Border Erase 5-23 Default 7-13 Border Line 5-17 Default 7-14 Buzzer 7-6

### С

Canceling Jobs 6-8 Copy 5-29 Printer 4-6 Scan 5-36 Cassette Loading Paper 3-7 Paper Size and Media Type 3-13 Cassette 1 2-2 Paper Jams 9-17 Cassette 1 (to 4) Settings 7-7, 7-9 Cassette 1 (to 4) Size 7-9 Cassette 1 (to 4) Type 7-9 Cassette 1 (to 4) Size 7-9 Cassette 1 (to 4) Type 7-9 Cassette Settings 3-13 Cassettes 2 to 4 2-5 Paper Jams 9-17 Character Entry Method 10-4 Checking the Counter 2-26 Checking the Remaining Amount of Toner 6-10 Cleaning Original Cover/Glass Platen 9-2 Slit Glass 9-2 Cleaning Cloth Compartment 2-3 Client Tool 7-16 Accessing Client Tool 2-18 Collate/Offset 5-19 Default 7-13 Colored Paper 10-13 Combine 5-17 Common Settings 7-5 Default Screen 7-6 Display Brightness 7-6 Error Handling 7-11 Function Default 7-13 Language 7-5 Measurement 7-11 Original/Paper Settings 7-7 Preset Limit 7-11 Quiet Mode 7-6 Sound 7-6 Timer Settings 7-12 Configuration 7-19 Connecting Power Cable 2-7 USB Cable 2-7 Connection Method 2-6 Continuous Scan 5-24 Default 7-13 Conventions Used in This Guide xii Copy 5-6 Copy Speed 10-16 Copying Settings 7-14 Auto % Priority 7-14 Auto Paper Selection 7-14 Paper Selection 7-14 Correcting Black Line 7-15 Counting the Number of Pages Printed Counter 2-26 Each Job Accounting 8-13 Print Accounting Report 8-14 Total Job Accounting 8-13 Unknown ID Job 8-11 Custom Original Size 7-7 Custom Paper Size 7-7

#### D

Default Paper Source 7-8 Default Screen 7-6 Defaults 7-13 Density 5-14 Density Adjustment 7-15 Device 6-9 Display Brightness 7-6 Document Processor 2-2, 2-5, 10-3 How to Load Originals 5-3 Loading Originals 5-3 Originals Not Supported by the Document Processor 5-3 Originals Supported by the Document Processor 5-3 Part Names 2-2 dpi 10-19 Drum Refresh 7-15 Duplex 5-14 Duplex Paper Error 7-11 Duplex Unit 2-5, 10-3

#### E

EcoPrint 5-21, 10-19 Default 7-13 Energy Saving Control Function 1-7 Energy Star (ENERGY STAR®) Program 1-7 Entry File Name 5-24 Envelopes 10-13 Environment 1-3 Error Clear Timer 7-12 Error Handling 7-11 Duplex Paper Error 7-11 Paper Mismatch Error 7-11

#### F

File Name Entry 5-24 Default 7-13 Finishing Binding 5-16 Default 7-14 First Copy Time 10-16 First Print Time 10-16 Form Feed Timeout 7-15 Front Cover 2-2

### G

Glossary 10-19 Grayscale 10-19 Guides Provided with the Machine x

### H

Hagaki 10-13 Handles 2-2

#### I

ID Card Copy 5-8 Inner Tray 2-2 Install Mac 2-17 Software 2-10 Windows 2-11 Interface Block Setting 7-5 Interrupt Clear 7-12 Interrupt Copy 5-7

### J

Job Available Status 6-2 Canceling 6-8 Checking History 6-4 Checking Status 6-2 Displaying History Screen 6-4 Displaying Status Screens 6-2 Pause and Resumption 6-7 Job Accounting Adding an Account 8-4 Copy/Print Count 8-12 Counting the Number of Pages Printed 8-13 Default Setting 8-12 Deleting an Account 8-8 Editing an Account 8-7 Enabling Job Accounting 8-3 Job Accounting when Sharing the Printer 8-9 Login 8-15 Logout 8-15 Overview of Job Accounting 8-2 Print Accounting Report 8-14 Printing When Sharing the Printer 8-15 Restricting the Use of the Machine 8-6 Unknown ID Job 8-11

### K

Key Counter 10-3

### L

Label 10-12 Language 7-5 Legal Information 1-6 Legal Restriction on Copying 1-5 Legal Restriction on Scanning 1-5 Loading Originals Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Login Password 2-20 Login User Name 2-20

#### Μ

Margin 5-22 Default 7-13 Measurement 7-11 Media for Auto 7-8 Media Type Settings 7-7, 7-10 Mixed Size Originals 5-21 MP Tray Settings 7-7, 7-9 MP Tray Size 7-9 MP Tray Type 7-9 MP Tray Size 7-9 MP Tray Type 7-9 MP Tray Type 7-9 Multi Purpose Tray 2-3, 10-19 Loading Paper 3-10 Paper Size and Media Type 3-15

### 0

Operation Panel 2-2, 3-2

Option

Document Processor 10-3 Duplex Unit 10-3 Key Counter 10-3 Original Cover 10-3 Overview 10-2 Paper Feeder (300-sheet) 10-3 Original Auto Detect Original Size 7-7 Custom 7-7 Settings 7-7 Size xiv Original Binding 5-16 Default 7-14 Original Cover 2-5, 10-3 Original Eject Table 2-2 Original Image 5-14 Default 7-13 Original Orientation 5-20 Default 7-13 Original Size 5-19 Original Size Indicator Plates 2-2 Original Stopper 2-3 Original Table 2-2 Original Width Guides 2-2 **Original/Paper Settings** Auto Detect Original Size 7-7 Cassette 1 (to 4) Settings 7-7 Custom Original Size 7-7 Custom Paper Size 7-7 Default Paper Source 7-8 Media for Auto 7-8 Media Type Settings 7-7 MP Tray Settings 7-7 Special Paper Action 7-8

#### Ρ

Panel Reset Timer 7-12 Paper Appropriate Paper 10-8 Before Loading 3-6 Cassette 7-9 Checking the Remaining Amount of Paper 6-10 Custom Paper Size 7-7 Default Paper Source 7-8 Loading Envelopes 3-12 Loading Paper 3-5 Loading Paper in the Cassettes 3-7 Loading Paper in the Multi Purpose Tray 3-10 Media Type Settings 7-10 MP Tray 7-9 Size and Media Type 3-13, 7-7, 10-7 Special Paper 10-11 Special Paper Action 7-8 Specifications 10-7 Weight 7-10 Paper Feeder (300-sheet) 10-3

Paper Jams 9-16 Cassette 1 9-17 Cassettes 2 to 4 9-17 Document Processor 9-19 Inside Right Cover 1 9-18 Inside Right Covers 2 or 3 9-19 Jam Location 9-16 Multi Purpose Tray 9-17 Paper Length Guide 2-3, 3-8 Paper Mismatch Error 7-11 Paper Selection 5-12, 7-14 Paper Width Adjusting Tab 2-3, 3-8 Paper Width Guide 2-3, 3-8 Part Names 2-2 PDF/A 10-19 Platen 2-2 Power Cable Connecting 2-7 Power Management 1-7 Power Off 2-9 Power Off Mode 1-7 Power Off Rule 2-23, 7-12 Power Off Timer 2-23, 2-24, 7-12 Power On 2-8 Power Switch 2-2 PPM 10-19 Precautions for Use 1-3 Preparing Cables 2-6 Preprinted Paper 10-14 Preset Limit 7-11 Print Box 4-8 Printing Document from Print Box 4-10 Saving Document to a Print Box 4-9 Settings 7-26 Print Settings 4-5 Printer 7-15 Form Feed Timeout 7-15 Printer Driver 10-19 Help 4-6 Printing Print Settings 4-5 Printing from PC 4-2 Printing from PC 4-2 Printing Speed 10-16 Product Library x Program 5-25 Changing the Program Name 5-27 Confirming 5-26 Deleting 5-27 Overwriting 5-27 Recalling 5-26 Registering 5-25

#### Q

Quick Scan 5-34 Settings 7-23 Quiet Mode 7-6

#### R

Recycled Paper 10-14

Regarding Trade Names 1-6 Regular Maintenance 9-2 Cleaning 9-2 Toner Container Replacement 9-3 Waste Toner Box Replacement 9-6 Report Accounting Report 8-14 Report Print 7-4 Report Print Menu Map 7-4 Service Status 7-4 Status Page 7-4 Resolution 10-16, 10-17 Resource Saving - Paper 1-7 Responding to Messages 9-11 Right Cover 1 2-3 Right Cover 1 Lever 2-3 Right Covers 2 to 4 2-5

#### S

Safety Conventions in This Guide 1-2 Scan Color 7-20, 7-23 Scan Destination Settings 7-20 Scan Resolution 7-21, 7-23 Scanning 5-30 Scan the Image by Selecting the Destination (Quick Scan) 5-34 Scan the Image to the Specified Destination 5-32 **TWAIN 5-35** Serial Number 5-5 Service Settings 7-15 Drum Refresh 7-15 Setting the Shared Printer 2-16 Sleep 1-7, 2-22 Sleep Timer 2-22, 7-12, 10-19 Slit Glass 2-2 Solving Malfunctions 9-8 Sound 7-6 Buzzer 7-6 Special Paper Action 7-8 Specifications 10-15 Common Functions 10-15 Copy Functions 10-16 Document Processor 10-17 Duplex Unit 10-18 Paper Feeder (300-sheet) 10-18 Printer Functions 10-16 Scanner Functions 10-17 Status 6-1 Client Tool 6-11 Paper Status 6-10 Print Job Log 6-4 Print Job Status 6-2 Printer 6-9 Scanner 6-9 Send Job Log 6-4 Toner Status 6-10 Status Page 10-20 Supplies Checking the Remaining Amount 6-10

Support Tray Section of the Multi Purpose Tray 2-3 Symbols 1-2 System 7-5 Interface Block Setting 7-5 System Menu 7-2

### Т

Thick Paper 10-13 Timer Settings 7-12 Auto Error Clear 7-12 Auto Panel Reset 7-12 Error Clear Timer 7-12 Interrupt Clear 7-12 Panel Reset Timer 7-12 Power Off Rule 7-12 Power Off Timer 7-12 Sleep Timer 7-12 Toner Container 2-4 Toner Container Lever 2-4 Toner Container Replacement 9-3 Transparencies 10-11 TWAIN 10-20 Scanning using TWAIN 5-35 Settings 7-23

#### U

Unknown ID Job 8-11 USB 10-20 USB Cable 2-6 Connecting 2-7 USB Interface 2-6 USB Interface Connector 2-4

### W

Waste Toner Box 2-4 Waste Toner Box Replacement 9-6 WIA 10-20 Setting WIA Driver 2-19

### Ζ

Zoom 5-13 Default 7-13



TA Triumph-Adler GmbH Betriebsstätte Norderstedt Ohechaussee 235 22848 Norderstedt Germany